


PinPoint™ II

Synchro Conversion Harness with PWM Ground Resistor Kit

For 2017 and 2018 Apache Sprayers



prodsupport@capstanag.com | 855-628-7722 | www.capstanag.com

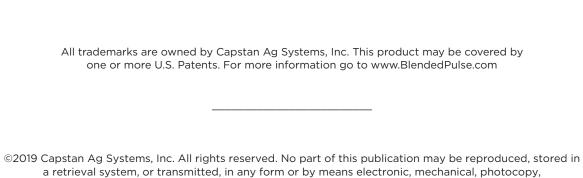

or otherwise, without prior written permission of Capstan Ag Systems, Inc.



Chapter 1: Installation Instructions

Parts List—Kit 118669-251

This is the parts list for the Synchro[™] with PWM ground resistor conversion kit for 2017 and 2018 Apache Sprayers.

Part Number	Description	Qty
118669-202	Synchro [™] Conversion Harness, 6 ft	1
118669-207	PWM Ground Resistor Harness	1
118669-203	Trailer Plug Adapter Plug	1
118669-204	Trailer Plug Receptacle Adapter	1
118682-001	Servo By-pass Harness	1
118682-002	Remote Fill Station Harness	1
706500-161	Auto-fill Switch Decal	1
118685-003	By-pass Jumper Plug	1

Kit Installation—118669-251

For safety information see the system and machine manuals.



Fig. 1:

- 1. Locate the PWM cartridge extension wire or bypass servo on the left side of the center boom frame.
 - PWM cartridges and newer servo valves will have a 2-pin Deutsch connector (1), as shown.
 - Older servo valves will have molded 2-pin connector use provided adapters 118669-204 and 118669-203 to convert the molded 2-pin connections to a Deutsch connector.
- 2. Only necessary for PWM Cartridge pump control. If a Bypass servo is installed move to Step 3.



Install the 2-wire resistor adapter (2) provided in the kit onto the wire removed from PWM cartridge in Step 1.

3. Install the Synchro adapter cable *(3)* onto the 2-wire resistor adapter (if applicable) and into the valve or extension wire going to the PWM cartridge.



Fig. 2:

- 4. Install the switch and decal.
- **5.** Route wire for the bypass switch as shown on the remote fill station control panel (or other suitable location).



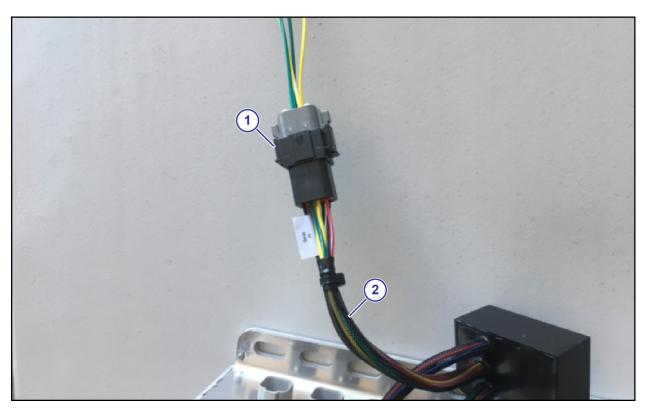


Fig. 3:

- **6.** Route the cable along the boom frame towards the right side of the sprayer to the existing PinPoint[™] wiring going to the Gateway hub. Secure the harnesses and keep away from pinch points.
- 7. Plug in the 8-pin connection (1) into the Servo port (2) as shown.



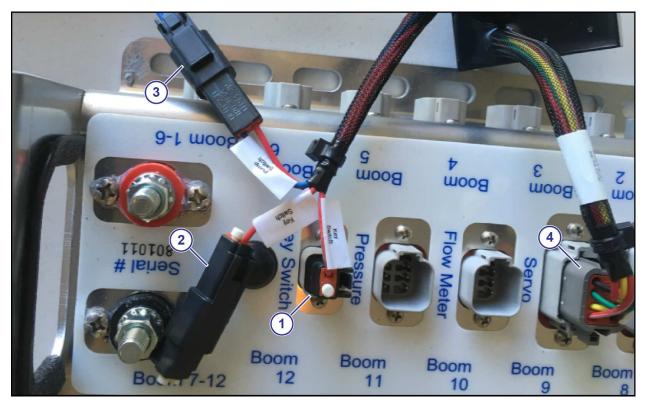


Fig. 4:

- **8.** Remove the dust plug (1) and install the key switched power on the servo bypass module.
- **9.** Install the dust plug on the key switched power connector (2).
- **10.** Install the pump switch connection (3) from the fill station.
- **11.** Install the servo Gateway connector (4).