

PinPoint™ II

Spray Application

Configurations:
Synchro™ Mode
SharpShooter™ Mode

Operator Manual



Thank you for your business!

At CapstanAG, our goal is to redefine the way people do their chemical application. Our PWM control systems have been setting the bar for maximum productivity for more than 20 years. Our focus on performance, support, and education have dramatically changed the landscape of agricultural chemical application.

CapstanAG specializes in creating proprietary systems for the agricultural industry, primarily focusing on chemical and fertilizer applications. Our inventive process involves research, engineering, design, and lab and field testing.

Service Contact Information

If a problem occurs with your system that cannot be corrected with the information in this manual, please contact your dealer for service and technical assistance. If further assistance is needed, contact CapstanAG.

System Purchased: _____

Dealer: _____

Contact: _____

Phone: _____

Address: _____

City,State/Province, Zip: _____

Factory Service/Repairs

CapstanAG

4225 S.W. Kirklawn Ave. | Topeka, KS 66609

Hours: 8:00 a.m. to 4:00 p.m. CST

Toll-free number: (855) 628-7722 | Fax: (785) 232-7799

E-mail: prodsupport@capstanag.com | Online: www.CapstanAG.com

©2018 Capstan Ag Systems, Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by means electronic, mechanical, photocopying, or otherwise, without prior written permission of Capstan Ag Systems, Inc.

Contents

| | |
|--|---------------|
| Chapter 1: Introduction..... | 7 |
| This Manual..... | 7 |
| System Identification..... | 7 |
| Chapter 2: Safety..... | 9 |
| Signal Words..... | 9 |
| Safety Signs..... | 9 |
| Emergency Safety..... | 9 |
| Pressurized Fluid Lines..... | 10 |
| Personal Protective Equipment..... | 10 |
| Battery Safety..... | 10 |
| Chemical Safety..... | 10 |
| Chapter 3: Warranty..... | 11 |
| Limited Warranty..... | 11 |
| Chapter 4: System Installation..... | 13 |
| Prepare for Installation and Setup..... | 13 |
| Tip Selection and Capacities..... | 13 |
| Nozzle Types and Component Identification..... | 14 |
| 7-Watt Coil Components..... | 14 |
| 12-Watt Coil Components..... | 16 |
| 7-Watt—15 Series Coil Components..... | 18 |
| 12-Watt—24 Series Coil Components..... | 19 |
| Assemble the Nozzle Valves..... | 20 |
| Move the Spray Tube Mount (Nozzle Valve Interference)..... | 21 |
| Install the Gateway Hub..... | 21 |
| Gateway Hub Identification..... | 22 |
| Install the VCMs..... | 22 |
| Install the Extension Harnesses..... | 24 |
| Install the Pressure Sensor..... | 24 |
| Install the Pressure Sensor Adapter Harness..... | 25 |
| Install the Flowmeter Harness..... | 26 |
| Install the Boom Shutoff Adapter..... | 27 |
| Install the CapView..... | 28 |
| Install the CapView Extension Harness..... | 28 |
| Install the Key Switched Power Cable..... | 28 |
| Install the Battery Harness..... | 29 |
| Install the Circuit Breaker..... | 29 |
| Install the Power Disconnect Breaker Kit (Optional)..... | 30 |
| Chapter 5: System Setup..... | 31 |

| | |
|--|----|
| CapView Button Descriptions..... | 31 |
| Start the CapView..... | 32 |
| Shutdown the CapView..... | 32 |
| System Setup..... | 33 |
| Factory Reset..... | 33 |
| Do the Factory Reset Procedure..... | 34 |
| Restore System Configuration or Select Settings..... | 36 |
| Change the Units of Measure..... | 37 |
| Do the Location Setup Procedure..... | 38 |
| Do the Nozzle Spacing Setup Procedure..... | 39 |
| System Setup Menus..... | 42 |
| System Setup Menu Descriptions..... | 42 |
| Advanced Settings—Synchro™ Operation Mode..... | 45 |
| Advanced Settings—SharpShooter™ Operation Mode..... | 50 |
| Do the Nozzle Setup Procedure..... | 55 |
| Set the Preset Buttons..... | 56 |
| System Dry Tests..... | 57 |
| Do the Boom Shutoff Dry Test..... | 57 |
| Do the Key Fob Boom Shutoff Dry Test..... | 58 |
| System Wet Tests..... | 59 |
| Do the Boom Shutoff Wet Test..... | 59 |
| Do the Key Fob Boom Shutoff Wet Test..... | 60 |
| Do the Pressure Control Test..... | 61 |
| Do the Flow Control Test..... | 61 |
| Do the Look Ahead Time and Overlap Test..... | 61 |
| Do the Compass Calibration Procedure..... | 62 |
| Setting the GPS Settings..... | 64 |
| Machine Specific Information..... | 66 |
| Location Setup Information..... | 66 |
| System Setup Information..... | 68 |
| Advanced Settings—Synchro™ Setup Information..... | 69 |
| Advanced Settings—SharpShooter™ Setup Information..... | 71 |

Chapter 6: Operation..... 73

| | |
|---|----|
| Operate in Automatic Pressure Control (AUTO) Mode..... | 73 |
| Manual Mode Operation..... | 74 |
| Spray Without the PinPoint™ II System..... | 74 |
| Spray Through the CapstanAG Nozzle Valves..... | 75 |
| Spray Through Alternate Valve Bodies..... | 75 |
| Nozzle Display..... | 75 |
| Overlap Control..... | 76 |
| Mapping..... | 77 |
| Upload a Boundary File to the CapView..... | 78 |
| Use a Map on the CapView..... | 78 |
| Download Maps..... | 79 |
| CapMaps™—Boundary Mapping..... | 80 |
| Install the CapMaps™ Software..... | 80 |
| Draw a Map..... | 81 |
| Convert a Shapefile into a PinPoint™ II Map..... | 83 |
| Convert a Batch of Shapefiles to PinPoint™ II Maps..... | 83 |
| Uninstall the CapMaps™ Software..... | 83 |
| Overlap Distance..... | 84 |

| | |
|---|------------|
| Change the Overlap Distance..... | 84 |
| Flowmeter Signal..... | 85 |
| Change the Flowmeter Settings—Synchro™ Mode..... | 85 |
| Change the Flowmeter Settings—SharpShooter Mode™..... | 85 |
| Turn Compensation..... | 86 |
| Counters..... | 87 |
| Gallon Counters..... | 87 |
| Acre Counters..... | 87 |
| Reset the Counters..... | 88 |
| Alarm..... | 88 |
| Nozzle Speed Ranges..... | 89 |
| Metric Nozzle Speed Ranges..... | 89 |
| US Measurements Nozzle Speed Ranges..... | 95 |
| Chapter 7: Maintenance..... | 101 |
| Service the System..... | 101 |
| Jump Start, Weld On, or Charge the Machine..... | 101 |
| Inspect the System..... | 101 |
| Clean the System..... | 101 |
| Storage of the System..... | 101 |
| Winterize for Storage..... | 101 |
| Recommended Guidelines for Maintenance/Service..... | 102 |
| Baseline Evaluation Process..... | 102 |
| Strainers and Screens..... | 102 |
| Nozzle Valves..... | 102 |
| Clean the Nozzle Valve(s)..... | 103 |
| Plunger Seal Inspection..... | 105 |
| Update PinPoint™ II Software..... | 106 |
| Chapter 8: Troubleshooting..... | 109 |
| Troubleshooting Charts..... | 109 |
| Interchange the Components..... | 116 |
| Fuses..... | 116 |
| Coil Test..... | 116 |
| Circuit Breaker..... | 117 |
| Battery Voltage Test..... | 118 |
| Do a Check of the System Load Capacity..... | 119 |
| VCM Voltage Test..... | 120 |
| Boom Shutoff Signal Test..... | 121 |
| Power to the Pressure Sensor Input Test..... | 122 |
| Pressure Sensor Signal Test..... | 123 |
| Technical Bulletin..... | 124 |
| Chapter 9: Schematics..... | 127 |
| Connector Pin Identification..... | 127 |
| CapView Connector Pinout..... | 130 |
| VCM Connector Pinout..... | 131 |
| General System Layout—Synchro™ Mode..... | 132 |
| General System Layout—SharpShooter™ Mode..... | 134 |

Index.....137

Chapter 1: Introduction

This Manual

This manual includes operation, maintenance, and installation information for the system you purchased.

Make sure that all personnel have read this manual and that they thoroughly understand the safe and correct operation and maintenance procedures. Failure to do so could result in personal injury or equipment damage.

This manual should be considered a permanent part of your system and should remain with the system at all times and when you sell it.

Right and left sides of the system are determined by facing the direction of forward travel of the machine on which the system is installed.

The information, screenshots, and other illustrations were correct at the time of publication. Changes can occur without notice.

This manual contains important information on how to safely and correctly install, operate, and maintain CapstanAG products. These instructions will help keep personnel safe, reduce downtime, and increase the reliability and life of the equipment, its components, and related systems.

Review the safety information in the Original Equipment Manufacturer (OEM) agricultural equipment manual(s).

Follow the instructions (in this manual) and in the OEM agricultural equipment manual(s) for each step, to make sure that work conditions in and around the OEM equipment are safe.

It is important for all individuals working with chemicals to understand the potential risks, necessary safety precautions, and proper response in the event of accidental contact.

Review the OEM agricultural equipment manual(s) for chemical safety information.

Read, understand, and review the procedures in this manual and OEM agricultural equipment manual(s). Use the Safety Data Sheets (SDS) and the required Personal Protective Equipment (PPE) for hazardous chemicals.

Please keep this manual and all enclosed documentation in an accessible location known to all operators, installation, and maintenance personnel.

If you do not understand the CapstanAG equipment after reading this manual, please obtain the proper training before working with equipment, to make sure that your own safety, as well as your co-workers' safety, is maintained.

Do not attempt to operate any equipment or system until you completely understand why, when, and how it operates. If you are uncertain after studying this manual, please contact CapstanAG.

System Identification

Write the system name, serial number, and other information down in the Service Contact Information on the inside cover of this manual. Your dealer will use these numbers when you order parts. File a copy of the identification numbers in a secure place off the machine.

If you are not the original owner of this machine, it is in your interest to contact your local CapstanAG dealer to inform them of this unit's serial number. Providing this information will help CapstanAG notify you of any issues or product improvements.

Chapter 2: Safety

Signal Words



DANGER: Indicates an imminent hazard which, if not avoided, will result in death or serious injury. This signal word is limited to the most extreme situations, typically for machine components that, for functional purposes, cannot be guarded.



Warning: Indicates a potential hazard which, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.



CAUTION: Indicates a potential hazard which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

Important: This is used to draw attention to specific information that is necessary for the operation, setup, or service of the system.

Note: This is used for additional information that can help understand or operate the system.

Safety Signs



Fig. 1:

The HCS aligned its provisions with the United Nations' Globally Harmonized System (GHS) Classification and Labeling of Chemicals in 2012. This is a GHS safety label example for a chemical hazard.

These labels and safety messages warn all personnel about hazardous chemicals or potentially unsafe chemical conditions that may exist while working around agricultural application equipment.

CapstanAG add-on application systems for OEM and retrofit agricultural application equipment (booms and toolbars) may contain HCS pictographs and GHS safety labels and safety signal word messages.

Emergency Safety

Fire extinguishing systems must meet the applicable OSHA requirements, and all users of portable/fixed fire suppression equipment must know the types, limitations, and proper uses of this equipment; including hazards involved with incipient stage firefighting.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

Know the location of fire extinguishers and first aid kits and how to use them.

Inspect the fire extinguisher and service the fire extinguisher regularly.

Follow the recommendations on the instructions plate.

Very small fires can be put out (extinguished) with a fire extinguisher. Use an appropriate method to extinguish a fire (water for paper fires, and chemical extinguishers for electrical or chemical fires).

Pressurized Fluid Lines

Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when too much heat is present.

Personal Protective Equipment

Wear close-fitting clothing and the correct personal protective equipment (PPE) for the job. See the manufacturer's manual or other information for correct PPE.

Battery Safety

Use the procedure in the appropriate agricultural equipment manual for connecting, disconnecting, and jump-starting the machine's battery.

Keep sparks and flames away from the battery. Battery gas can explode and cause serious injury. Do not smoke in the battery charging area.

Remove jewelry, which might make electrical contact and create sparks.

Chemical Safety

Chemicals used in agricultural applications can be harmful to your health and/or the environment if not used correctly. Always follow all label directions for effective, safe, and legal use of agricultural chemicals.

Chapter 3: Warranty

Limited Warranty

What does the Limited Warranty cover?

The ultimate purchaser/user (“you”), by acceptance of seller Capstan Ag Systems, Inc.’s, (“our,” “we,” or “us”) product, assume all risk and liability of the consequences of any use or misuse by you, your employees, or others.

All replacement components furnished under this warranty, but shipped before the failed component is returned for evaluation, will be invoiced in the usual manner and warranty adjustments will be made after the component claimed to be defective has been returned to and inspected and deemed defective by us at our factory.

Upon determining that a component has failed under warranty, the repaired component or replacement component, furnished under this warranty, will be shipped at our expense, to your location. We will credit you an amount equal to the incoming freight you paid. We shall not be responsible for installation costs. (You shall be responsible for all customs and brokerage fees for all international transactions.)

If the component does not prove to be defective, you shall be liable for all freight, inspection and handling costs. In no event will any claim for labor or incidental or consequential damages be allowed for removing or replacing a defective product. Warranty will be denied on any component which has been subject to misuse, abuse, accidents, or alterations, or to improper or negligent use, maintenance, storage or transportation and handling.

Our liability under this warranty, or for any loss or damage to the components whether the claim is based on contract or negligence, shall not, in any case, exceed the purchase price of the components and upon the expiration of the warranty period all such liability shall terminate. The foregoing shall constitute your exclusive remedy and our exclusive liability.

The terms of this warranty do not in any way extend to any product which was not manufactured by us or one of our affiliates.

While necessary maintenance or repairs on your Capstan Ag Systems, Inc. product can be performed by any company, we recommend that you use only authorized Capstan Ag Systems, Inc. dealers. Improper or incorrectly performed maintenance or repair voids this warranty.

The foregoing warranty is exclusive and is in lieu of all other warranties expressed or implied. We shall not be liable for any incidental or consequential damages resulting from any breach of warranty.

Your exclusive remedy for breach of warranty shall be repair or replacement of defective component(s): Provided, if the component(s) are incapable of being repaired or replaced, your exclusive remedy shall be credit issued, but such credit shall not exceed the purchase price of the components.

On any claim of any kind, including negligence, our liability for any loss or damage arising out of, or from the design, manufacture, sale, delivery, resale, installation, technical direction of installation, inspection, repair, operation of use of any products shall in no case exceed the purchase price allocable to the components.

In no event, whether as a result of breach of contract or warranty or alleged negligence, shall we be liable for incidental or consequential damages, including, but not limited to: personal injury, loss of profits or revenue, loss of use of equipment or any associated equipment, cost of capital, cost of substitute equipment, facilities or services, downtime costs, environmental damage, crop losses, or claims of customers of you for such damages.

What is the period of coverage?

We warrant to you, that our products are free from defects in material and workmanship in normal use and service for a period of one year from date of purchase.

How do you get service?

Our obligation under this warranty shall be limited to the repairing or replacing at our option, the component which our inspection discloses to be defective, free of charge, return freight paid by us, provided you: (i) Notify us of defect within thirty (30) days of failure; (ii) Return the defective component to us, freight prepaid; (iii) Complete the Owner Registration Form and returned it to us; and (iv) Establish that the product has been properly installed, maintained and operated in accordance with our instructions or instructions contained in our operations or maintenance manuals and within the limits of normal usage.

Any claim for breach of our warranty must be in writing addressed to us and must set forth the alleged defect in sufficient detail to permit its easy identification by us. All breach of warranty claims must be made within thirty (30) days after expiration of the warranty period which is applicable to the defective product. Any breach of warranty claim not timely made will not be honored by us and will be of no force and effect. Any component that needs to be repaired or evaluated for warranty has to be authorized before return. Contact the factory (785-232-4477) to get a Return Materials Authorization (RMA #). This helps to track the part coming into the factory for repair or replacement.

Before returning any component to the factory, clean the component as well as possible to remove any dirt or chemical residue. Components received at the factory that are not clean, will be returned and warranty denied.

After receiving your RMA #, package the part, making sure to include the RMA #, your name, customer's name, your address and phone number and description of problems or failure. Then ship to:

Capstan Ag Systems, Inc.

Attn: Warranty/Repair

4225 SW Kirklawn Ave.

Topeka, KS 66609

Phone: (785) 232-4477

Fax: (785) 232-7799

Hours: 8 a.m. - 4:30 pm CST

How does state law relate to this Limited Warranty?

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.¹

¹ Rev. Date 7/15/2014

Chapter 4: System Installation

Prepare for Installation and Setup



CAUTION: Before installation, operation, or service to the system, read and understand the machine's operator manual and the system operator manual. Chemical residue may be present on/in the OEM equipment. Use the correct personal protective equipment.

Important: Before installation make sure that all parts are included in the shipping boxes using the list of parts included in the order.

Important: Do not attach the harnesses with cable ties until the dry test of the system is complete.

Do a check of the general system layout at the back of this manual.

The VCMs are tagged and marked for the appropriate boom sections (1 to 11, etc.). Make sure that the VCMs are installed on the appropriate boom sections. Boom section 1 is the leftmost boom when at the back of the machine facing the front of the machine.

Although the installation is usually straightforward, the following are common installation oversights:

- Never use Air Induction (AI) spray tips.
- When routing nozzle harnesses and other wiring through the boom fold and swing joints, allow for boom joints to operate without damaging harnesses.
- Use the correct tip choices.
- If a boom section has more than one VCM, the VCM with the lowest serial number should be placed on the left.

Tip Selection and Capacities

| Orifice Size | Flow US GPM | PSI | | Speed Range | | | | | |
|--------------|-------------|-------|-----|-------------|-------------|-------------|-------------|-------------|------------|
| | | Gauge | Tip | 3 GPA | 5 GPA | 8 GPA | 10 GPA | 15 GPA | 20 GPA |
| 05 | 0.336 | 20 | 18 | | 5.0 to 20.0 | 3.1 to 12.5 | 2.0 to 10.0 | 1.3 to 6.7 | 1.0 to 5.0 |
| | 0.412 | 30 | 27 | | 6.1 to 24.5 | 3.8 to 15.3 | 2.4 to 12.2 | 1.6 to 8.2 | 1.2 to 6.1 |
| | 0.476 | 40 | 36 | | 7.1 to 28.3 | 4.4 to 17.7 | 2.8 to 14.1 | 1.9 to 9.4 | 1.4 to 7.1 |
| | 0.532 | 50 | 45 | | | 4.9 to 19.8 | 3.2 to 15.8 | 2.1 to 10.5 | 1.6 to 7.9 |
| | 0.583 | 60 | 54 | | | 5.4 to 21.6 | 3.5 to 17.3 | 2.3 to 11.5 | 1.7 to 8.7 |

Fig. 2:

When selecting the correct tips:

- Always use 110° spray angle tips and maintain the boom height of at least 24 in (61 cm). If 80° spray angle tips are used, maintain the boom height of at least 36 in (91 cm).
- The tip selection chart, in the operation section of this manual, describes the speed ranges that can be expected when operating with a rate controller at various rates and pressures.
- To use the chart, select the application rate (1).
- Move down the column to the desired speed range (2).
- Select a tip (3) that provides the boom pressure you wish to spray (4).

Nozzle Types and Component Identification

Important: Make sure that you have the correct nozzles and components for your system.

7-Watt Coil Components

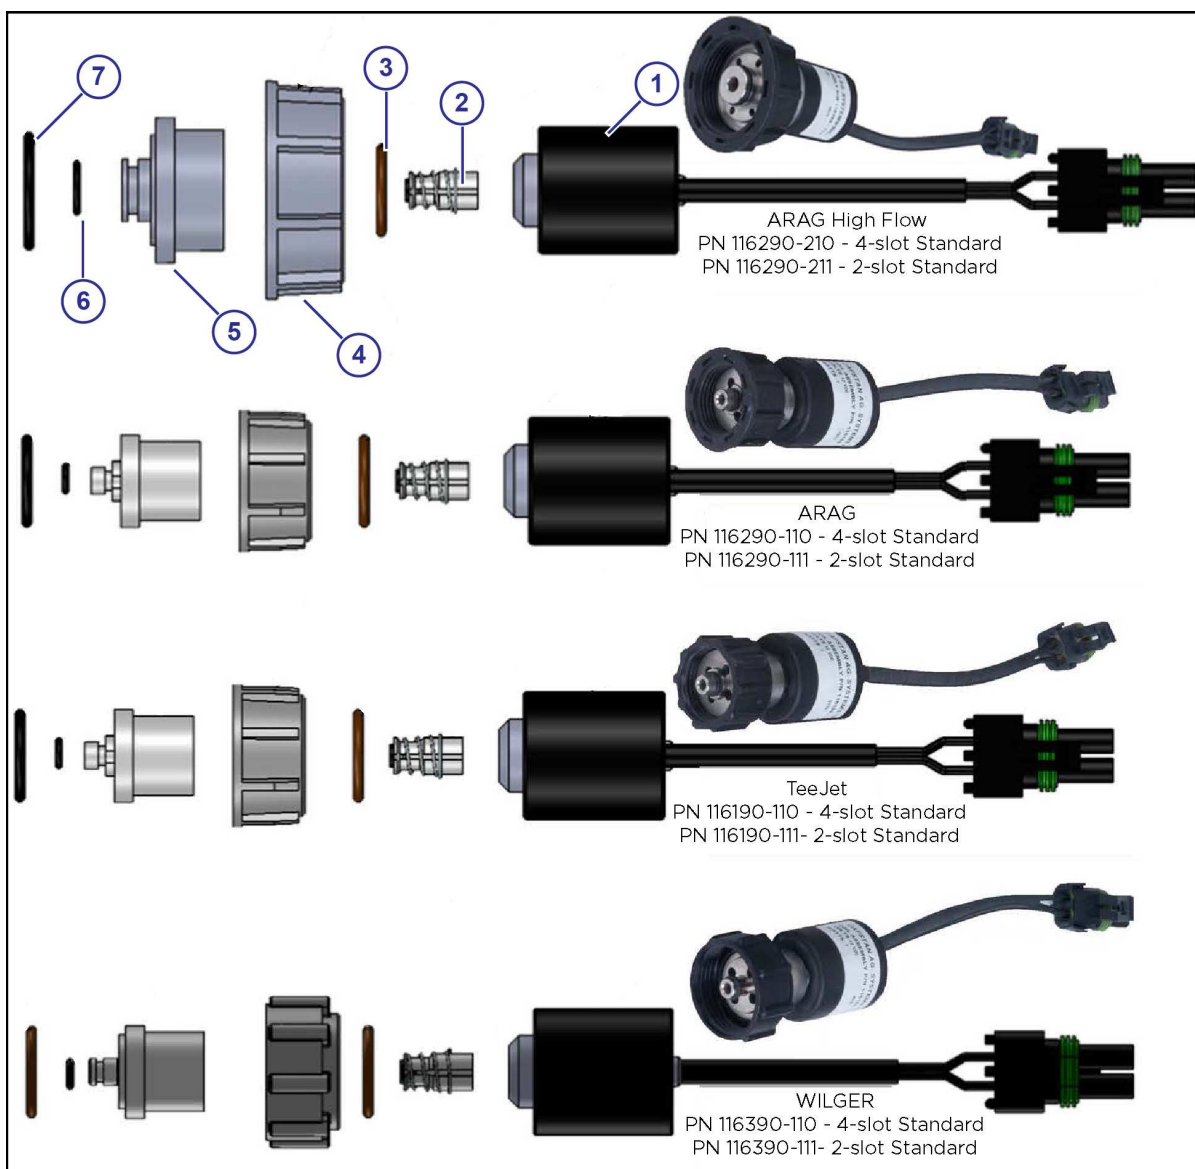


Fig. 3:

| Item | Description | Arag High Flow Part Number | Arag Part Number | Tee Jet Part Number | Wilger Part Number |
|------|---------------------------|----------------------------|--------------------------|---------------------------------|--------------------------|
| 1 | Coil | 116189-111 | 116189-111 | 116189-111 | 116189-111 |
| 2 | Plunger - 2-Slot Standard | 716009-111 | 716009-111 | 716009-111 | 716009-111 |
| | Plunger - 4-Slot Standard | 716009-114 | 716009-114 | 716009-114 | 716009-114 |
| 3 | O-ring | 715022-204 Size: 0-15 | 715022-204 Size: 0-15 | 715022-204 Size: 0-15 | 715022-204 Size: 0-15 |
| 4 | Fly Nut | 717101-306 | 717101-006 | 717101-105 | 717101-007 |
| 5 | Valve Body | 116182-211 | 116182-111 | 116186-111 | 116188-111 |
| 6 | O-ring | 715022-211 Size: 112 | 715022-201 Size: 008 | 715022-200 Size: 2 mm x 4 mm | 715022-201 Size: 008 |
| 7 | O-ring | 715022-215 Size: 212 | 715022-205 Size: 015 | 715022-202 Size: 017 | 715022-206 Size: 016 |

12-Watt Coil Components

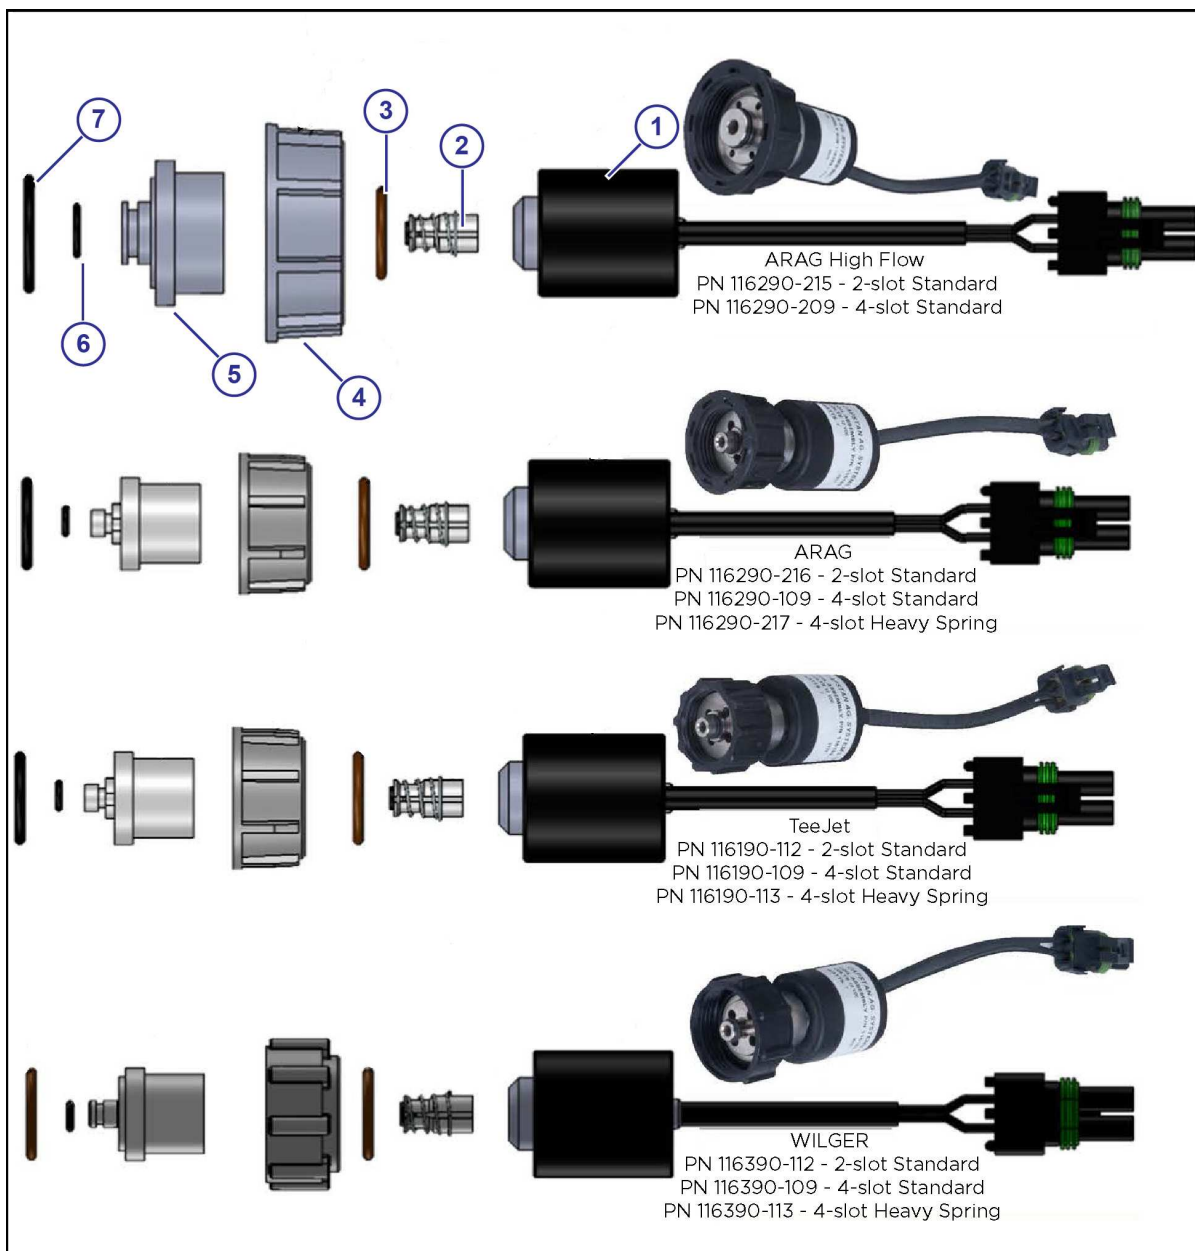


Fig. 4:

| Item | Description | Arag High Flow Part Number | Arag Part Number | Tee Jet Part Number | Wilger Part Number |
|------|-------------------------------|----------------------------|--------------------------|---------------------------------|--------------------------|
| 1 | Coil | 625147-011 | 625147-011 | 625147-011 | 625147-011 |
| 2 | Plunger - 2-Slot Standard | 716009-111 | 716009-111 | 716009-111 | 716009-111 |
| | Plunger - 4-Slot Standard | 716009-114 | 716009-114 | 716009-114 | 716009-114 |
| | Plunger - 4-Slot Heavy Spring | | 716009-113 | 716009-113 | 716009-113 |
| 3 | O-ring | 715022-204 Size: 0-15 | 715022-204 Size: 0-15 | 715022-204 Size: 0-15 | 715022-204 Size: 0-15 |
| 4 | Fly Nut | 717101-306 | 717101-006 | 717101-105 | 717101-007 |
| 5 | Valve Body | 116182-215 | 116182-150 | 116186-112 | 116188-112 |
| 6 | O-ring | 715022-211 Size: 112 | 715022-201 Size: 008 | 715022-200 Size: 2 mm x 4 mm | 715022-201 Size: 008 |
| 7 | O-ring | 715022-215 Size: 212 | 715022-205 Size: 015 | 715022-202 Size: 017 | 715022-206 Size: 016 |

7-Watt—15 Series Coil Components

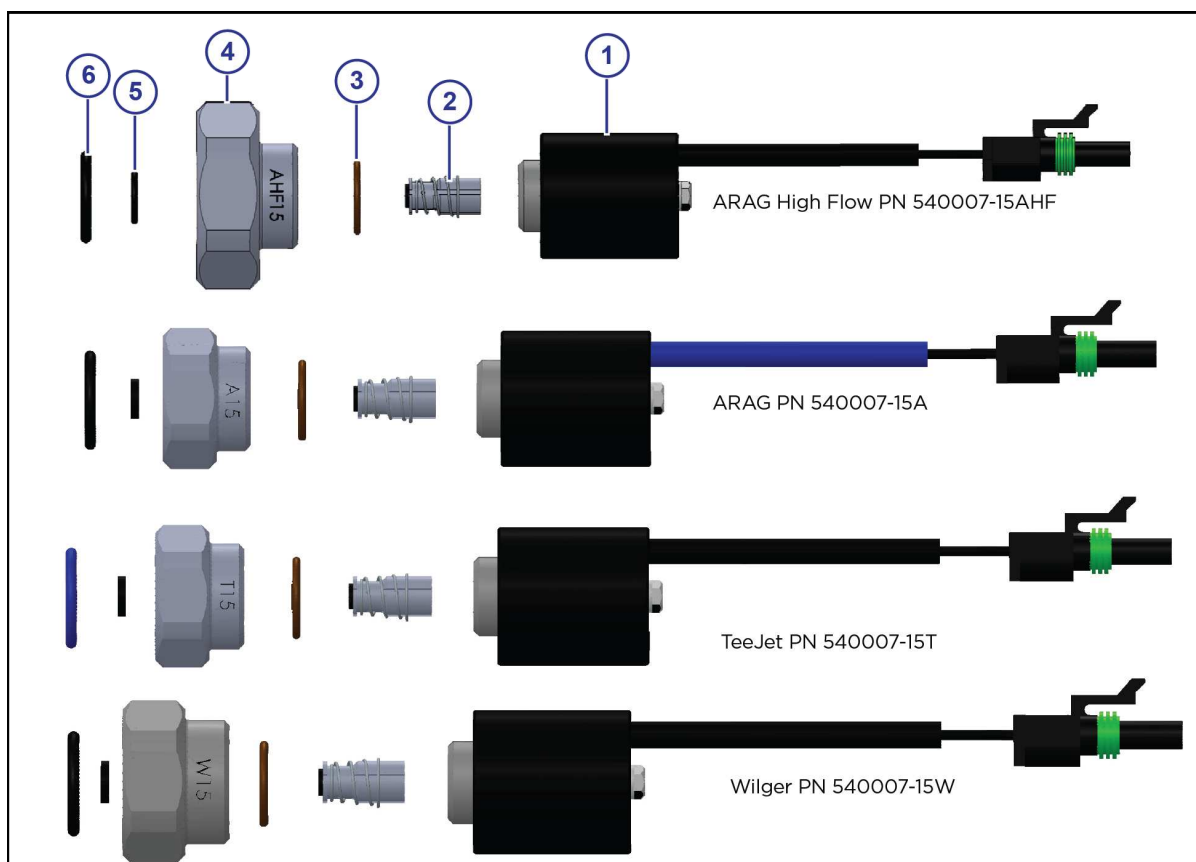


Fig. 5:

| Item | Description | Arag High Flow Part Number | Arag Part Number | Tee Jet Part Number | Wilger Part Number |
|------|----------------------------|----------------------------|------------------|---------------------|--------------------|
| 1 | 7-Watt Coil Assembly | 116189-111 | 116189-111 | 116189-111 | 116189-111 |
| 2 | Plunger Assembly | 716009-114 | 716009-114 | 716009-114 | 716009-114 |
| 3 | Inner-valve O-ring | 715022-204 | 715022-204 | 715022-204 | 715022-204 |
| 4 | Flybody | 116182-201 | 116182-001 | 116186-001 | 116188-001 |
| 5 | FlyBody Stem (Tip) O-ring | 715022-211 | 715022-210 | 715022-210 | 715022-210 |
| 6 | Nozzle Body FlyBody O-ring | 715022-212 | 715022-205 | 715022-202 | 715022-206 |

12-Watt—24 Series Coil Components

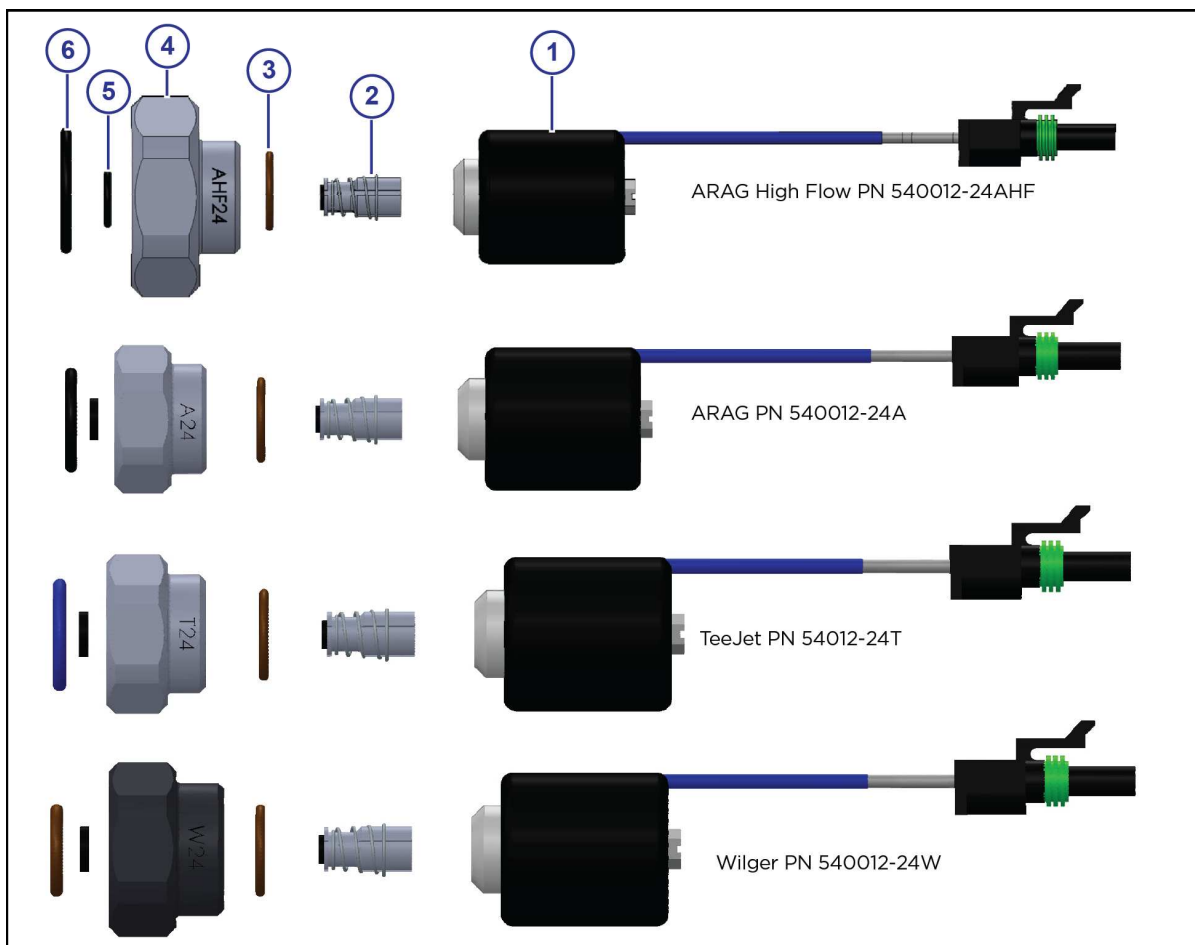


Fig. 6:

| Item | Description | Arag High Flow Part Number | Arag Part Number | Tee Jet Part Number | Wilger Part Number |
|------|----------------------------|----------------------------|------------------|---------------------|--------------------|
| 1 | 12-Watt Coil Assembly | 116189-111 | 625147-011 | 625147-011 | 625147-011 |
| 2 | Plunger Assembly | 716009-114 | 716009-114 | 716009-114 | 716009-114 |
| 3 | Inner-valve O-Ring | 715022-204 | 715022-204 | 715022-204 | 715022-204 |
| 4 | Flybody | 116182-201 | 116182-002 | 116186-002 | 116188-002 |
| 5 | FlyBody Stem (Tip) O-ring | 715022-211 | 715022-210 | 715022-210 | 715022-210 |
| 6 | Nozzle Body FlyBody O-ring | 715022-212 | 715022-205 | 715022-202 | 715022-206 |

Assemble the Nozzle Valves

1. Remove the drip check valve and diaphragm cap from each nozzle body.

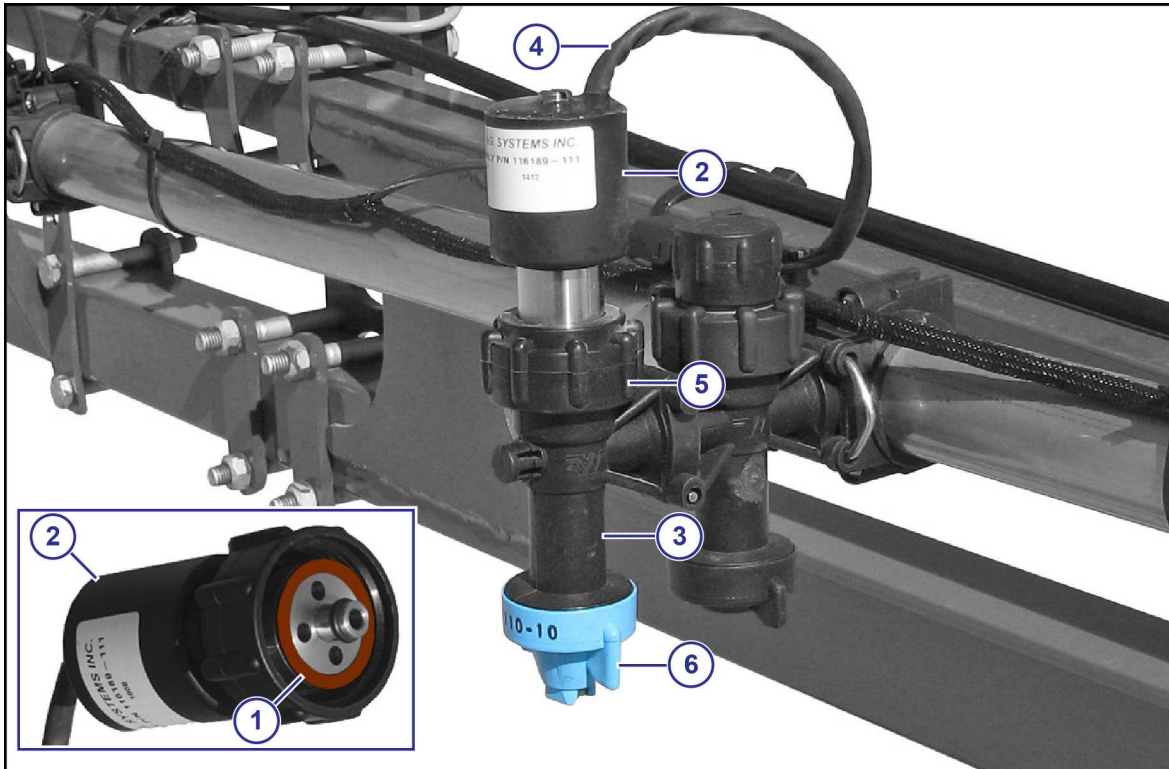


Fig. 7:

2. Install the O-ring (1) onto the nozzle valve assembly (2).
3. Install the nozzle valve assembly onto the nozzle body (3).
4. Rotate the nozzle valve body so that the electrical wire (4) faces the boom.
5. Tighten the fly nut (5) until the coil housing does not spin.
The nozzle valves only need to be snug to prevent leakage.
6. Install and tighten the spray tip (6).
7. Repeat steps 1 to 5 for all nozzle valve assemblies.

Move the Spray Tube Mount (Nozzle Valve Interference)

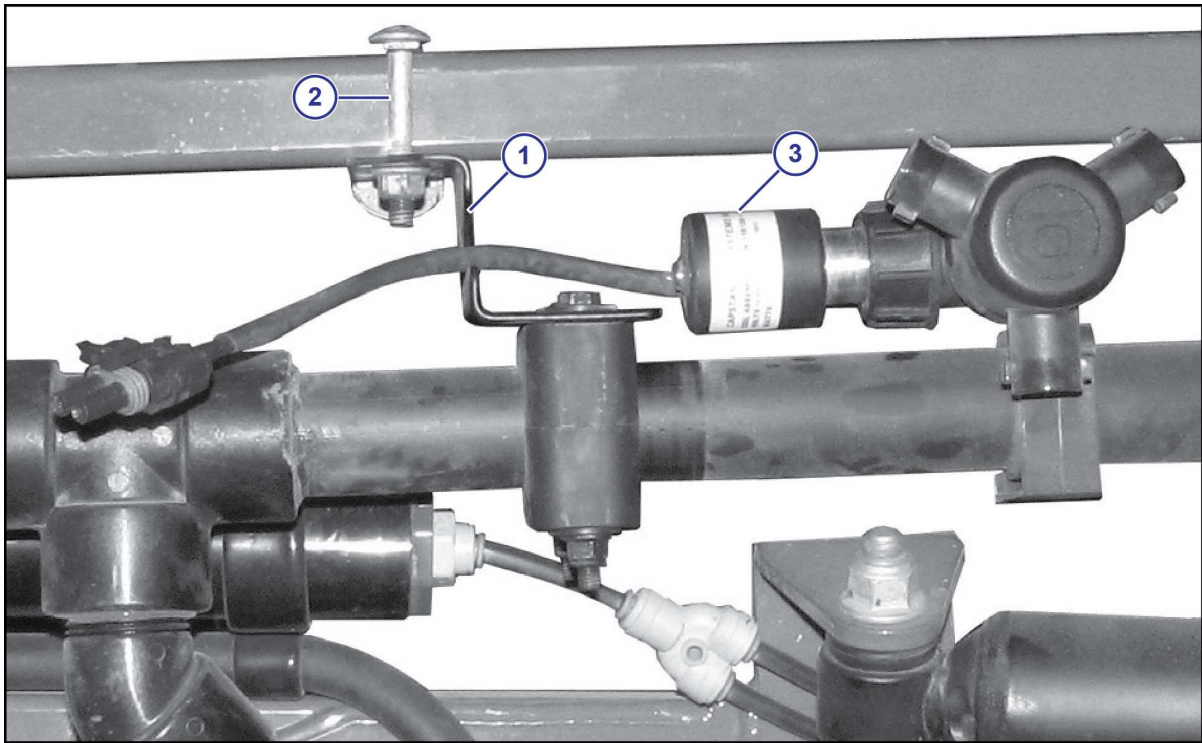


Fig. 8:

If a spray tube mount (1) prevents nozzle valve installation:

1. Loosen the spray tube mount bolts (2).
2. Slide the spray tube mount away from the nozzle valve assembly (3) until the nozzle valve assembly can be properly installed.
3. Tighten the spray tube mount bolts.

Install the Gateway Hub

1. Locate an accessible location near the center of the boom mast.
2. Install the Gateway hub onto the boom mast with the supplied mounting bracket.

Gateway Hub Identification

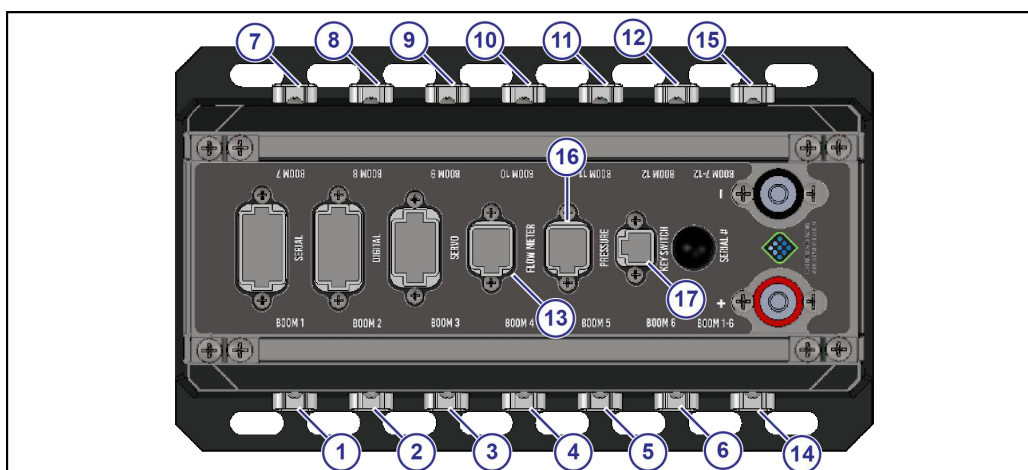


Fig. 9:

- (1) Boom 1—Connector for boom 1 extension harness
- (2) Boom 2—Connector for boom 2 extension harness
- (3) Boom 3—Connector for boom 3 extension harness
- (4) Boom 4—Connector for boom 4 extension harness
- (5) Boom 5—Connector for boom 5 extension harness
- (6) Boom 6—Connector for boom 6 extension harness
- (7) Boom 7—Connector for boom 7 extension harness
- (8) Boom 8—Connector for boom 8 extension harness
- (9) Boom 9—Connector for boom 9 extension harness
- (10) Boom 10—Connector for boom 10 extension harness
- (11) Boom 11—Connector for boom 11 extension harness
- (12) Boom 12—Connector for the CapView extension harness or boom 12 extension harness when needed
- (13) Flowmeter—Connector for the flowmeter harness
- (14) Boom 1-6—Connector for the boom 1-6 shutoff adapter
- (15) Boom 7-12—Connector for the boom 7-12 shutoff adapter
- (16) Pressure—Connector for the pressure sensor adapter harness
- (17) Key Switch—Connector for the CapView switched power harness

Install the VCMs

1. Locate the VCMs adjacent to the first nozzle on the associated boom section.
The VCMs are tagged and marked for the appropriate boom sections (1 to 11, etc.).
2. Make sure that each tagged VCM is installed on the correct boom section (1 to 11, etc.).
3. Connect the harness plugs at the VCMs and the nozzle valves.

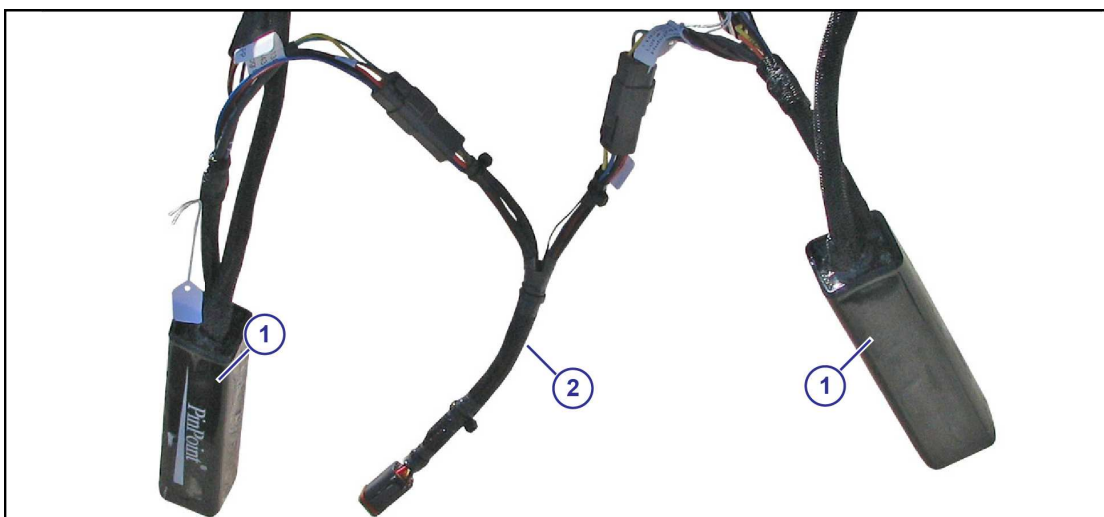


Fig. 10:

Additional VCMs and Y-adapters are required on boom sections that have more than nine nozzles.

4. Mount additional VCMs (1) and Y-adapters (2) at a central location in the boom section.
5. Install dust caps on any unused connectors.

Table: VCM Part Numbers

| Part Number | | Description | Qty |
|-------------|------------|--|-----|
| 118400-138 | | 4-nozzle x 5-nozzle VCM Assembly with 15 Channel Board | |
| 118400-136 | | 9-nozzle x 10-in Spacing VCM Assembly | |
| 118400-131 | | 9-nozzle x 15-in Spacing VCM Assembly | |
| 118400-135 | | 9-nozzle x 15-in Spacing VCM Assembly with 15 Noz Brd | |
| 118400-129 | | 9-nozzle x 20-in Spacing VCM Assembly | |
| 118400-134 | | 9-nozzle x 20-in Spacing VCM Assembly with 15 Noz Brd | |
| 118400-137 | | 15-nozzle x 10-in Spacing VCM Assembly | |
| 118400-125 | | 15-nozzle x 15-in Spacing VCM Assembly | |
| 118400-126 | | 15-nozzle x 20-in Spacing VCM Assembly | |
| 118250-015 | | 18-nozzle x 15-in Spacing VCM Kit | |
| | 118400-131 | 9-nozzle x 15-in Spacing VCM Assembly | 2 |
| | 118640-032 | Y-adapter Harness | 1 |
| 118250-020 | | 18-nozzle x 20-in Spacing VCM Kit | |
| | 118400-129 | 9-nozzle x 20-in Spacing VCM Assembly | 2 |
| | 118640-032 | Y-adapter Harness | 1 |

Install the Extension Harnesses

1. Connect each extension harness to the VCM.
2. Route the extension harnesses along the boom to the Gateway hub.

Make sure that there is enough slack in the extension harnesses to raise and lower the booms and to avoid pinch points at the boom fold and pivot points.

3. Connect each extension harness to the correct connector on the Gateway hub (Boom 1, Boom 2, etc.)

Install the Pressure Sensor

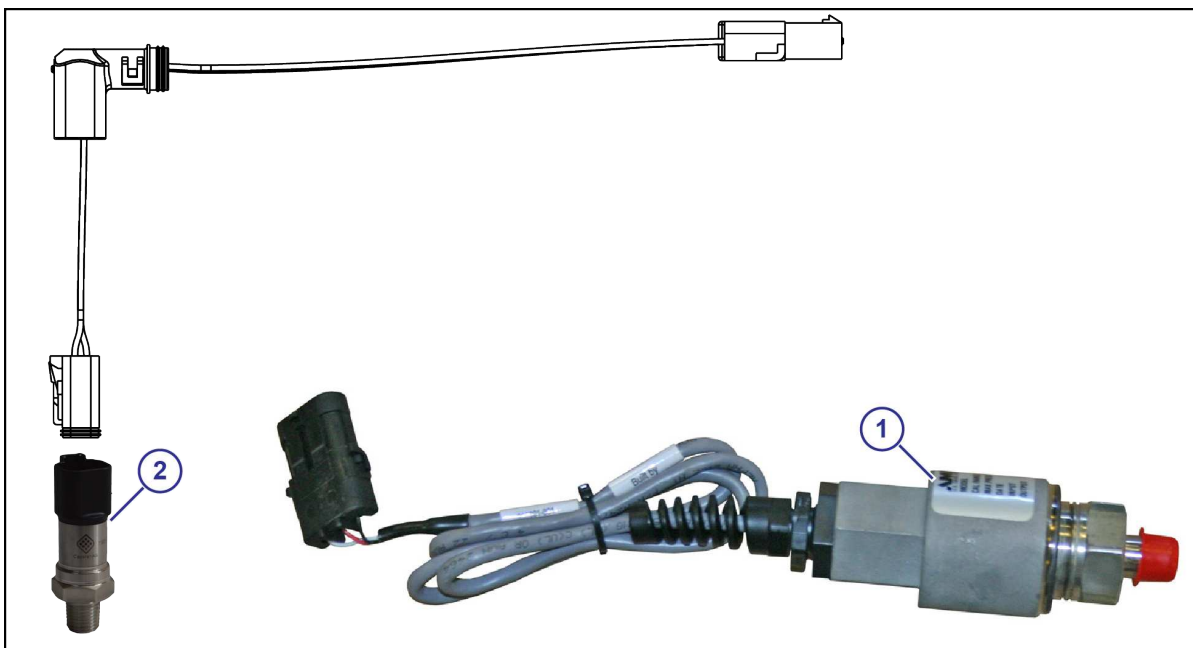


Fig. 11:

There are two pressure sensors that can be used on the system:

- (1) Pressure sensor used 2017 and before—116301-001
- (2) Pressure sensor kit used late 2017 and after—116301-011

Note: Replace the pressure sensor use in 2017 and before with the new hardware, you will need the new kit, not just the pressure sensor.

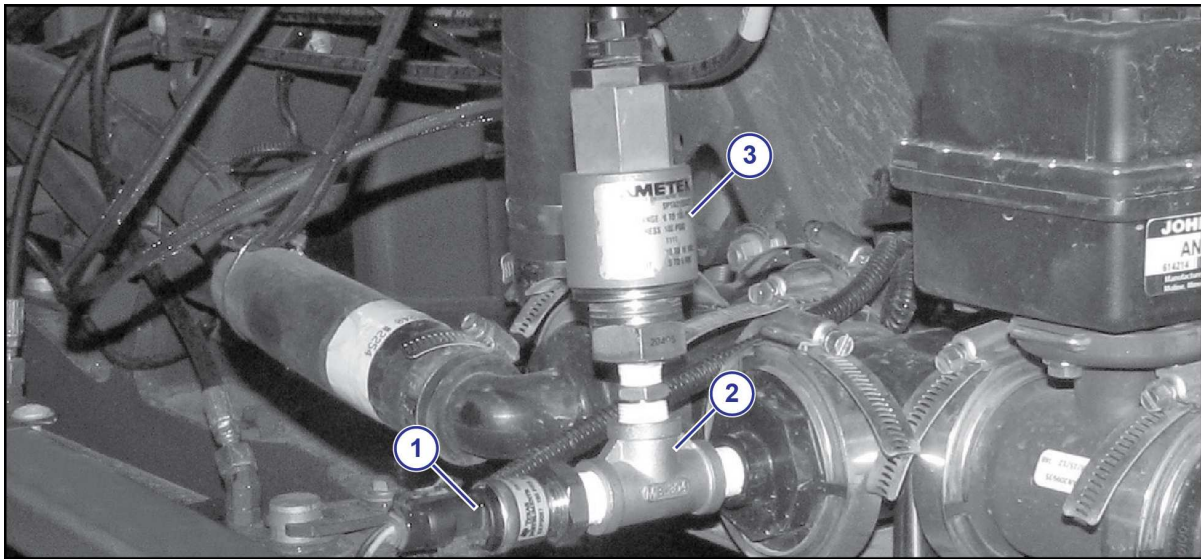


Fig. 12:

1. Remove the existing machine pressure sensor (1) from the boom manifold.
2. Install the tee fitting (2) and other hardware with sealant tape.
3. Install the new pressure sensor (3) with sealant tape.

Important: Do not over-tighten the pressure sensor when installing into plastic tee fittings.

4. Install the existing machine pressure sensor with sealant tape.

Install the Pressure Sensor Adapter Harness

1. Route the pressure sensor adapter harness to the Gateway hub.
Adapter Harness PN—118657-001
2. Install the harness connector to the **PRESSURE** port on the Gateway hub.

Install the Flowmeter Harness

1. Record flowmeter tag g/min information.
The information will be used during the CapView setup.

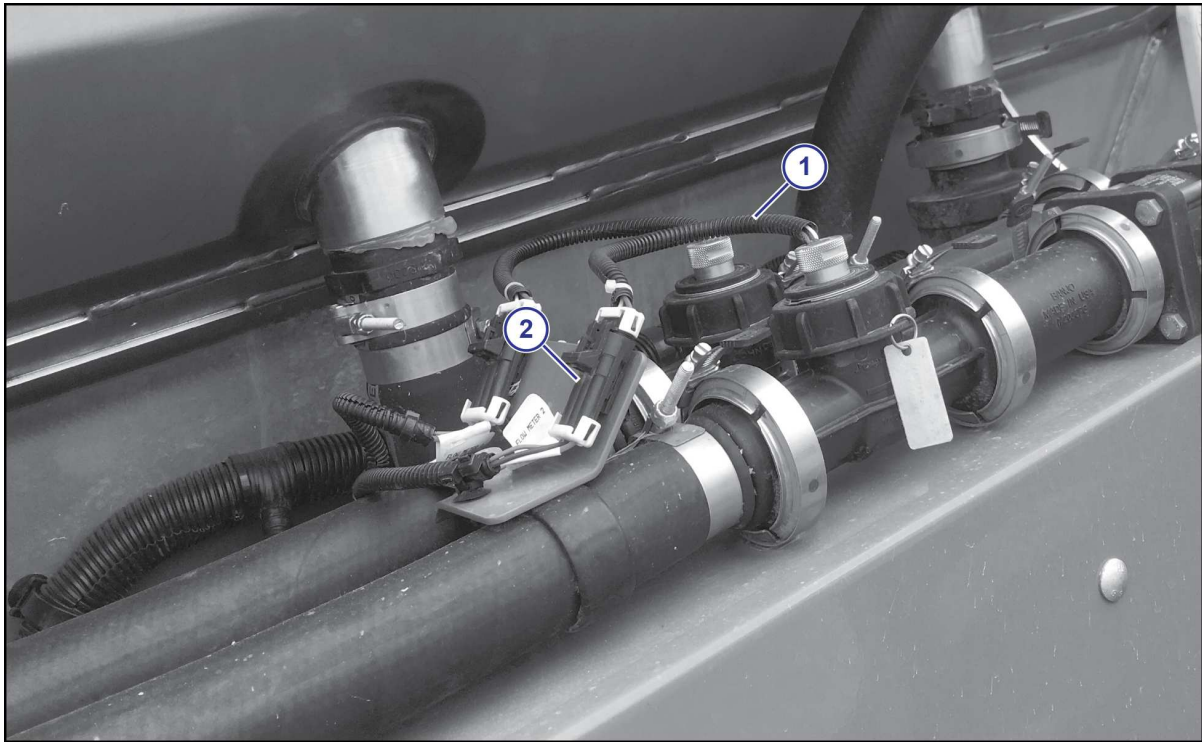


Fig. 13:

2. Disconnect the machine flowmeter harness (1).
3. Install the flowmeter harness (2) between the flowmeter and the existing harness.
4. Route the flowmeter harness to the Gateway hub.
5. Install the harness connector to the **FLOWMETER** port on the Gateway hub.

Important: Make sure that there is enough slack in the harness to raise and lower the boom mast.

Install the Boom Shutoff Adapter

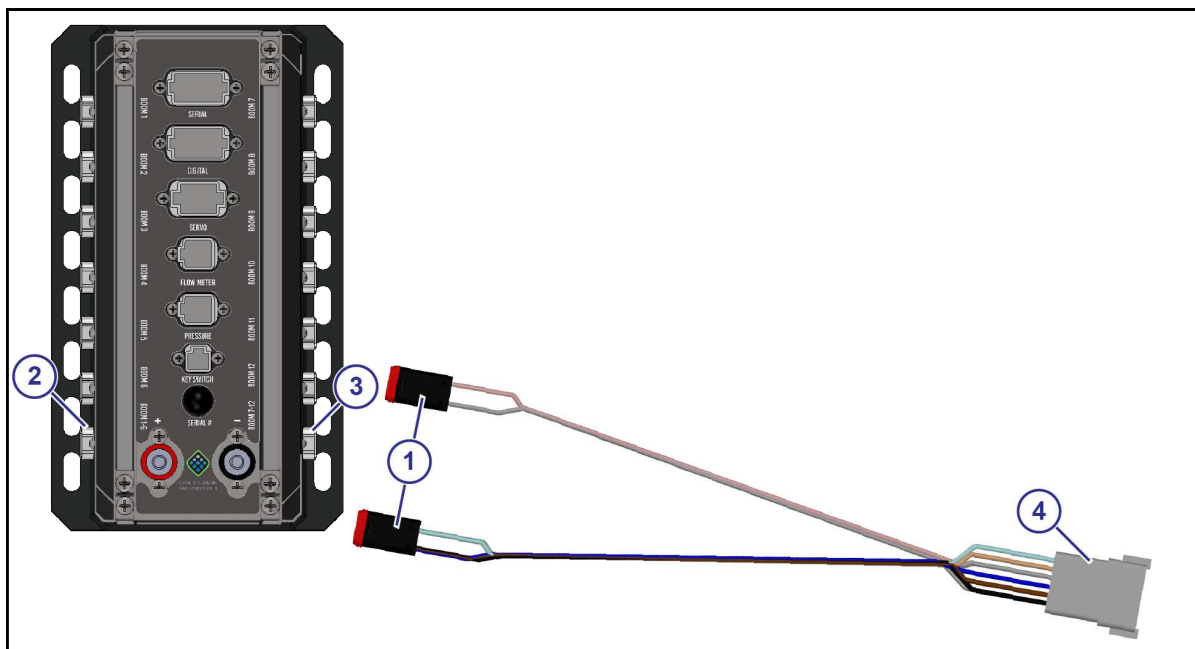


Fig. 14:

1. Connect a connector (1) for the boom shutoff adapter to the **BOOM 1-6** port (2) and **BOOM 7-12** port (3) on the Gateway hub.
Boom shutoff adapter PN—118606-051
2. Connect the 12-pin connector (4) into the shutoff harness.

Install the CapView



Fig. 15:

1. Install the RAM mount (1) and hardware inside the machine cab.

Note: Make sure that the CapView can be seen and reached from the operator seat.

2. Remove the four screws from the back of the CapView (2).
3. Install the ball mount (3) to the back of the CapView with the screws.
4. Install the clamp (4) onto the ball mount.
5. Install the clamp onto the RAM mount.
6. Install the display harness to the connectors to the back of the CapView.
7. Remove the screen protector from the CapView screen.

Install the CapView Extension Harness

1. Route the CapView extension harness through the lower slot in the Gateway hub.
2. Install the harness connector into the **BOOM 12** port on the Gateway Hub.
3. Follow existing wiring/plumbing to route the extension harness into the right rear side of the cab.

Important: Make sure that there is enough slack in the harness to raise and lower the boom mast.

Install the Key Switched Power Cable

1. Route the extension harness from the Gateway hub into the cab.
2. Connect to the CapView switched power harness.
3. Connect the other end of the key switched power cable to the in-cab power supply.

Important: Refer to installation instructions for machine specific power supply locations.

Install the Battery Harness

1. Route the battery harness connectors to the Gateway hub.
2. Connect the positive (+) red cable to the red power terminal on the Gateway hub.
3. Connect the negative (-) black cable to the black terminal on the Gateway hub.
4. Tighten the nuts on the power cables.
5. Install the rubber caps onto the terminals.
6. Route the battery harness from the Gateway hub over the boom mast and under the sprayer to the batteries.

Important: Make sure that there is enough slack in the harness to raise and lower the boom mast.

Install the Circuit Breaker

1. Disconnect the battery power cables.
2. Cut a length of wire from the battery harness positive (+) red cable.
The length of wire must reach from the circuit breaker to the battery positive (+) terminal.
3. Strip the insulation from each cut end of the wire.
4. Crimp the provided ring terminals to the end of each cable.

Important: If the machine is so equipped, PinPoint™ II must be wired to the main power disconnect.

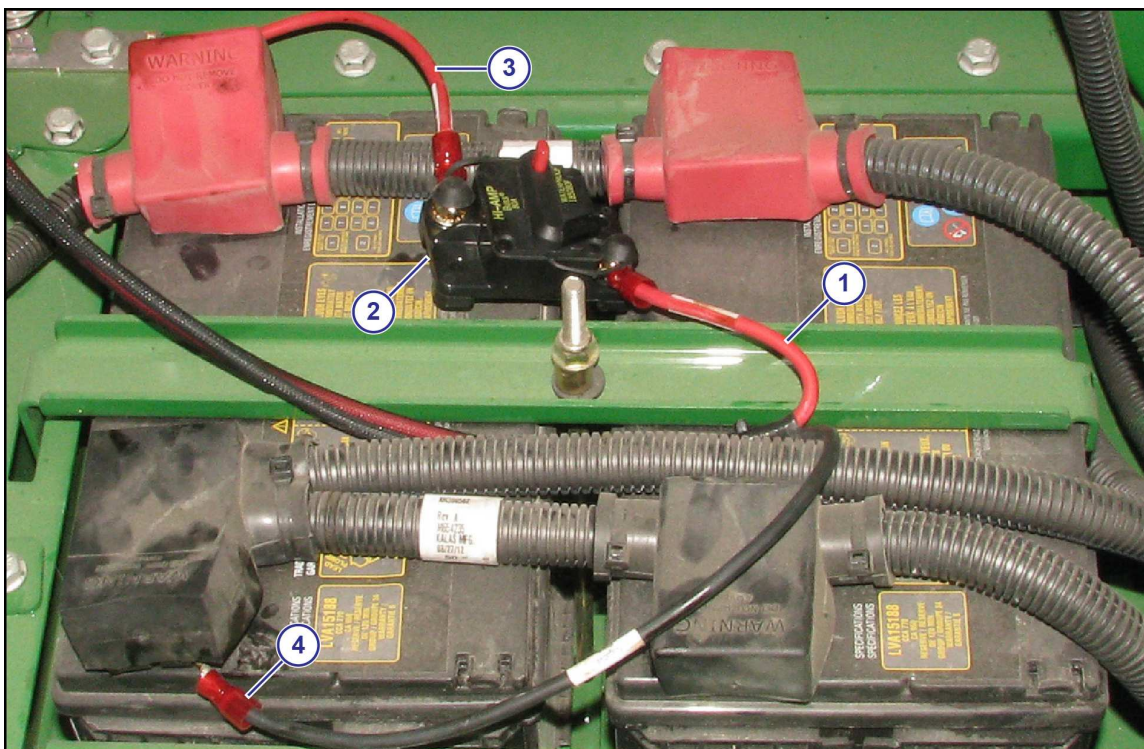


Fig. 16:

5. Connect the battery harness positive (+) red cable (1) to the circuit breaker (2).
From the battery positive (+) terminal, connect the positive (+) red cable (3) to the circuit breaker.
6. Connect the battery harness negative (-) black cable (4) to the battery ground terminal.

Install the Power Disconnect Breaker Kit (Optional)

A power disconnect breaker kit is available for applications when unhooking the battery power cable is not desired.

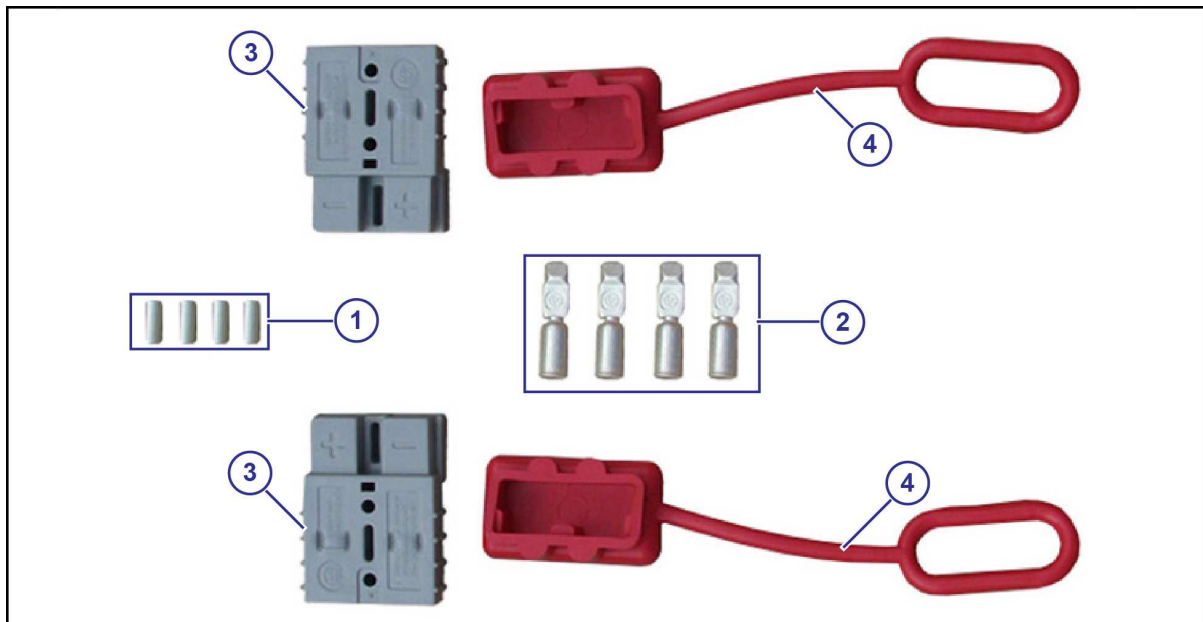


Fig. 17:

1. Disconnect the battery cables.
2. Cut and strip the cables at the desired disconnect location.
3. Crimp the spacer bushings (1) and terminals (2) onto each cable.
4. Install the terminals into the housing (3).















CAUTION: Make sure that the positive (+) red cable and the negative (-) black cable are in the correct location.

5. Install the covers (4).

Chapter 5: System Setup

CapView Button Descriptions

| Icon | Name | Description |
|---|-----------------------|---|
|  | POWER | Press the button to start or shut down the CapView display and the rate controller LED light illuminates to show what is active |
|  | AUTO/MANUAL | Press the button to change between Manual or Automatic operation mode |
|  | TURN | Press the button to engage or disengage turn compensation |
|  | OVERLAP | Press the button to engage or disengage overlap control |
|  | Navigation Arrows | Press the buttons to move through the menu items |
|  | ENTER | Press the button to open the selected menu screen or to accept the selected value |
|  | ESCAPE/MAP | Press the button to exit the current screen, to not accept the selected field, and to access the map menu |
|  | Presets | Use the four buttons to store and use boom, tip size, and flow profiles Press a button and hold for 10 seconds to change to that preset Only one of the four buttons is shown |
|  | ALARM | Press the button to stop an audible alarm |
|  | LOCATION SETUP | Press the button to go to the <i>Location Setup Menu</i> Press the button and hold for 10 seconds to go to the <i>Auto Location Setup</i> . ² |
|  | SYSTEM SETUP | Press the button to go to the <i>System Setup Menu</i> |
|  | NOZZLE SETUP | Press the button to go to the <i>Nozzle Setup Menu</i> |

² The screen will flash while holding the button.

Start the CapView

Before starting the machine engine, always make sure that the CapView display and rate controller are off.



Fig. 18:

1. Start the machine engine.
2. Press the **POWER** button (1) to start the CapView and the rate controller.
3. Make sure that the rate settings are correct.
4. Press to **AUTO/MANUAL** button (2) to activate the automatic pressure control.
5. Set the desired pressure on the CapView.
6. Press the **TURN** button (3) to activate the turn compensation feature.
7. Press the **OVERLAP** button (4) to activate the overlap feature.
8. Turn on the boom sections to spray.

Shutdown the CapView

1. Turn off the boom sections.
2. Press the **POWER** button to turn off the CapView and the rate controller.

System Setup

The system is set up at the factory. These steps are only required when modifications have been made during installation or if changes were made to the machine after the PinPoint™ II order was placed.

1. Factory Reset
2. Location Setup Procedure
3. System Setup Procedure
4. Nozzle Setup Procedure
5. System Dry Test
6. System Wet Test
7. Look Ahead Time and Overlap Test

Factory Reset

Important: Always save your profile settings and/or record all settings and location setup information before doing a factory reset.

A factory reset should be performed after:

- Initial installation
- Software update
- Major component change
- Operation mode change

Do the Factory Reset Procedure



Fig. 19:

1. Make sure that the key switch power is on.
2. Press the **POWER** button (1) on the CapView.
3. Press the **SYSTEM SETUP** button (2) on the CapView.
4. Use the up or down arrows (3) to select **Operation Mode** (4).
5. Press the **ENTER** button (5).
6. Use the **UP** or **DOWN** arrows to show the correct operation mode (6).
7. Press the **ENTER** button.
8. Use the up or down arrows to select **Advanced Settings**.
9. Press the **ENTER** button.
10. Use the up or down arrows to select **Factory Reset**.
11. Press the **ENTER** button.



Fig. 20:

12. Use the **LEFT** or **RIGHT** arrows (1) to select **YES** (2).

13. Press the **ENTER** button (3).

The CapView will turn off.

Leave the key switch on to keep power to the hub.

14. Press the **POWER** button (4).

A warning screen will show after a factory reset or when no data is present in the VCMs. This indicated that the system must be set up.

15. Press the **ENTER** button.

Restore System Configuration or Select Settings

Contact your local CapstanAG representative for initial system configuration or select settings files if this is the initial setup for your system.

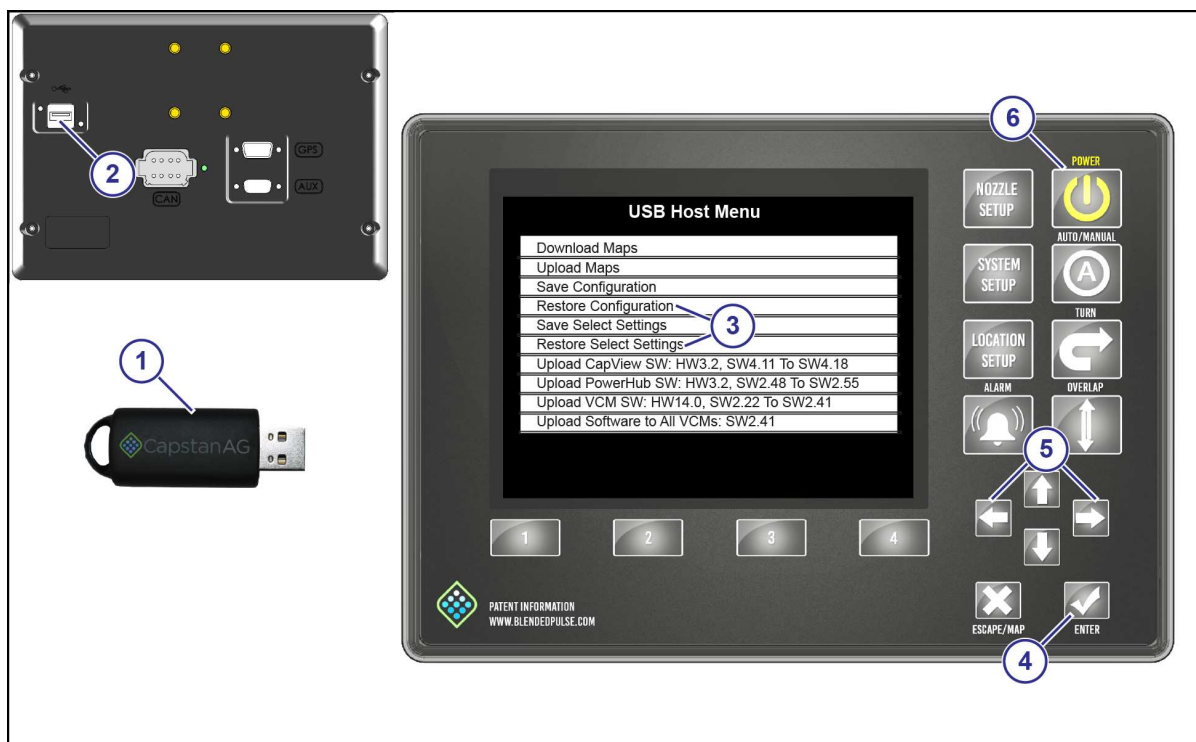


Fig. 21:

1. Insert the USB thumb drive (1) into the back of the CapView (2).
The **USB Host Menu** screen will show.
2. Go to the **Restore Configuration** or **Restore Select Settings** line (3).

If you are restoring the information for the same sprayer and have not made significant system changes, like replacing the VCMs or changing the number of VCMs, use **Restore Configuration**.

For software released October 2018 and after, if you are restoring information that was used on a different system or have made significant changes, like replacing the VCMs or changing the number of VCMs, use **Restore Select Settings**.

3. Press the **ENTER** button (4).
A message will show.
4. Use the left or right arrow button (5) to select **YES**.
5. Press the **ENTER** button.
The display will power down.
6. Remove the USB thumb drive from the back of the CapView display.
7. Press the **POWER** button (6).
8. Make sure that the settings shown on the CapView display are correct.

Change the Units of Measure

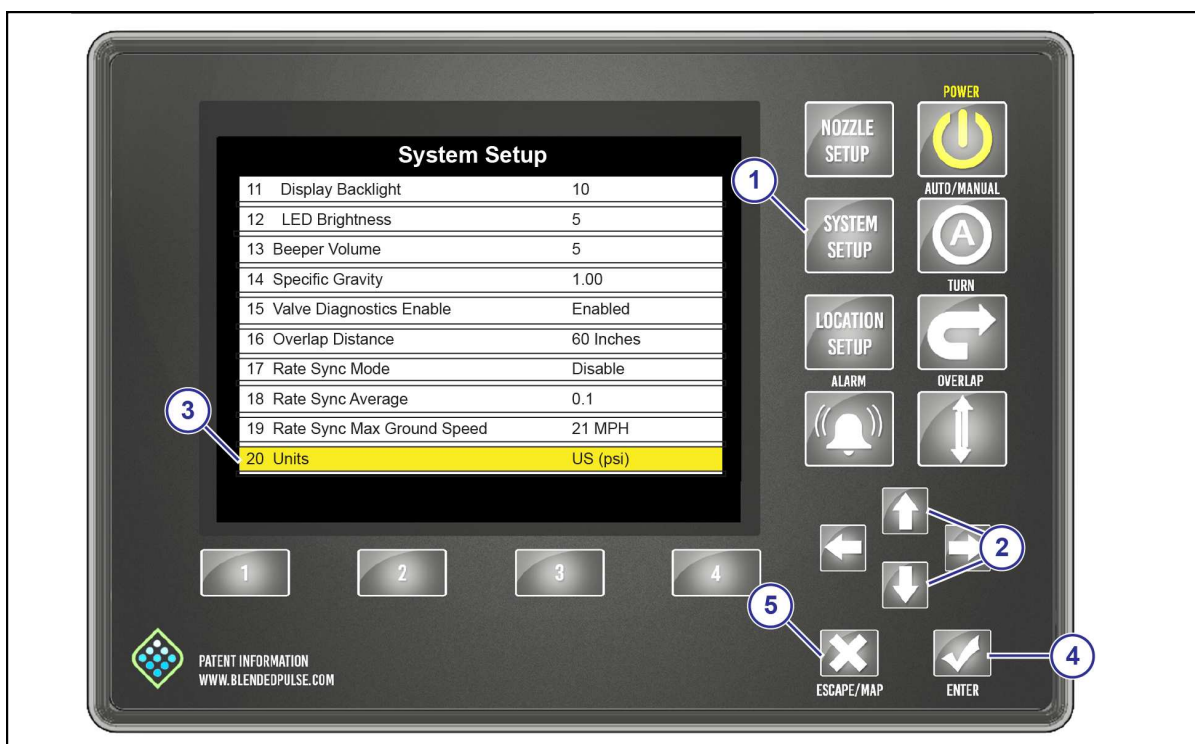


Fig. 22:

1. Press the **SYSTEM SETUP** button (1).
2. Use the **UP** or **DOWN** arrow buttons (2) to select **Units** (3) from the *System Setup* menu.
3. Press the **ENTER** button (4).
4. Use the **UP** or **DOWN** arrow buttons to select the desired units of measure.
5. Press the **ENTER** button.
6. Press the **ESCAPE/MAP** (5) button to go to the main operating screen.

Do the Location Setup Procedure



Fig. 23:

1. Press and hold the **LOCATION SETUP** button (1) for 10 seconds.

Note: It is normal for the screen to change as you press and hold the button.

2. Use the **LEFT** or **RIGHT** arrow buttons (2) to select **AUTO SETUP** (3).
3. Press the **ENTER** button (4).

Do the Nozzle Spacing Setup Procedure

1. Use the **UP** or **DOWN** arrow buttons to set the desired nozzle spacing.
The default setting is 20 in.
2. Press the **ENTER** button.

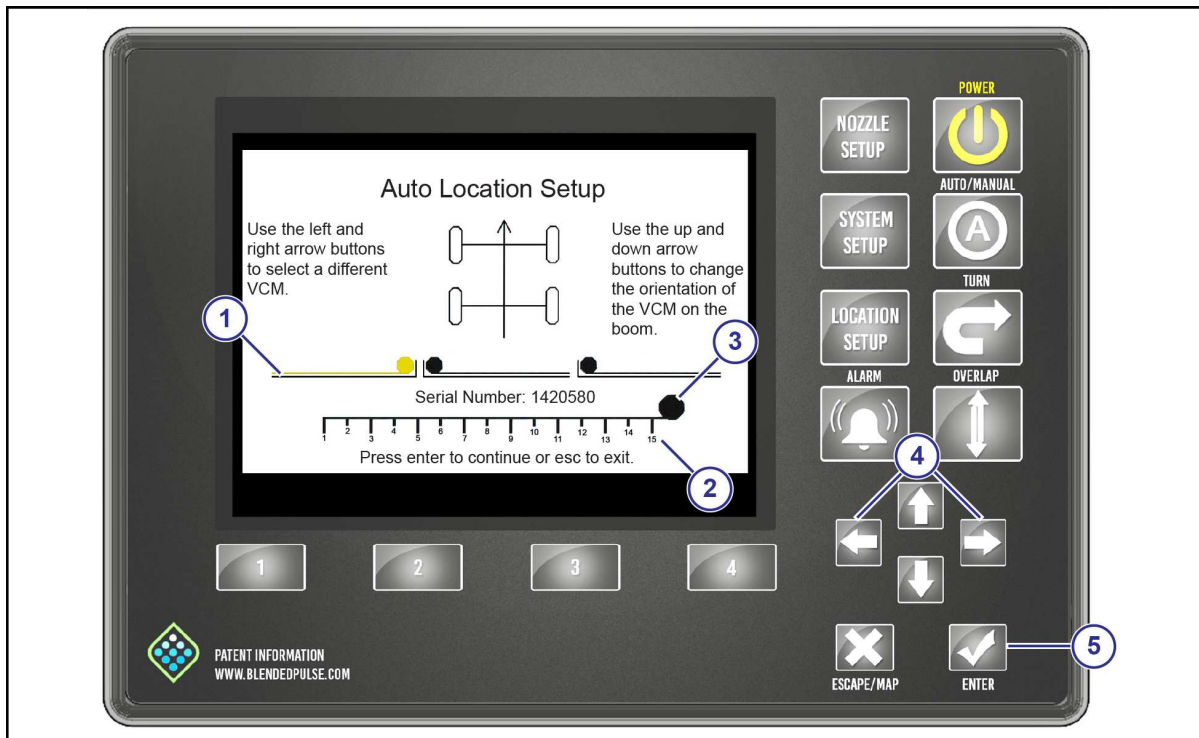


Fig. 24:

This screen shows a picture of the sprayer with the VCMs located on the boom. The VCMs are arranged on the boom from left to right according to the VCM serial number order and oriented according to the position of the potted tube relative to the center mast (1).

The graphic along the bottom shows a VCM with a 15-nozzle wire harness (2). The black dot (3) is the potted tube, and the nozzles are indicated with numbers. This graphic changes as you move the yellow highlighter from VCM to VCM. This can be an indicator of which VCM is which, based on the number and location of the valves on the VCM.

Start with the VCM that is located on the far left section of the left boom.

3. Use the left or right arrow buttons (4) to highlight the desired VCM.
4. Press the **ENTER** button (5) for each VCM.
The highlight color will change to red. The nozzles on that VCM will pulse.
5. When the leftmost VCM nozzles pulse, press the left arrow button to move the highlighted VCM to the leftmost position on the CapView screen.
6. Press **ENTER** to stop the pulsing.
7. Press the up or down arrow buttons to flip the VCM graphic, so the potted tube orientation show on the CapView screen is the same as the potted tube orientation found on the boom.

Serial numbers for all VCMs can be found on this screen as well; their locations should match up with serial number tags on each VCM on the boom.

8. Repeat the process from left to right, until all of the VCMs are moved to their proper location and flipped to their proper orientation.
9. When finished, press the **ESCAPE** button.
10. Make sure that the master switch is engaged and the boom section switches are off.
11. Engage and disengage each boom section control switch to correlate the boom valves to the VCMs.

Engage switch #1, disengage switch #1, then engage/disengage #2, then engage/disengage #3, etc., from left to right so that #1 is the leftmost boom.

The highlighter shows the VCM that is physically associated with that boom section switch.

Having 12 boom switches and only one VCM is possible. Later, you can assign soft booms so that the nozzles are turned on/off individually by the rate controller. You may need to start a job in the rate controller for the sprayer so that the boom valves can physically be turned on and off.

12. Press the **ENTER** button to return to the *Location Setup Table* screen.



Fig. 25:

The data on the *Location Setup Table* X-Axis should now match your machine.

13. Make sure that the data is correct, and if not, manually fix the location numbers. An example of this might be a nozzle that is offset a couple of inches because of bracket interference at the nozzle's exact location.
14. Press the **ESCAPE** button.

Any selected VCM in the **Location Setup Table** is highlighted in yellow. Press the **UP** or **DOWN** arrow button to highlight a different VCM.

The left columns, **VCM Serial Number**, shows all of the VCMs in numeric order. Press the **UP** or **DOWN** arrow button to go to the second screen when the first screen is full.

Numbers 1 to 9 represent the physical location of the nine nozzles on the highlighted VCM. Number 1 is the nozzle closest to the VCM (potted tube), and number 9 is the farthest from the VCM (potted tube).

The center columns, under **Nozzle Location**, shows the location data of the highlighted VCM on the sprayer boom. Press the right arrow button to highlight this data in yellow.

The **X-Axis** column shows the location of the nozzle. Zero is the center of the machine. Use a negative value to show the nozzle location is left of center. Use a positive value to show the nozzle location is right of center. Column two data will be in 20-in increments until a location setup has been done.

The **Y-Axis** column shows the distance in front of or behind the centerline of the spray boom. On most spray booms, this value will be zero. This distance is more commonly used on tool bars where there may be a front gang and rear gang of knives.

The right column under **Nozzle ON/OFF** is where a nozzle valve can be turned on or off. Press the arrow buttons to highlight the desired box. Press the **ENTER** button to select on or off.

The nozzle number from left to right along the entire boom. The leftmost nozzle on the boom is #1, and the right most nozzle would be #72 if you have 72 nozzles.

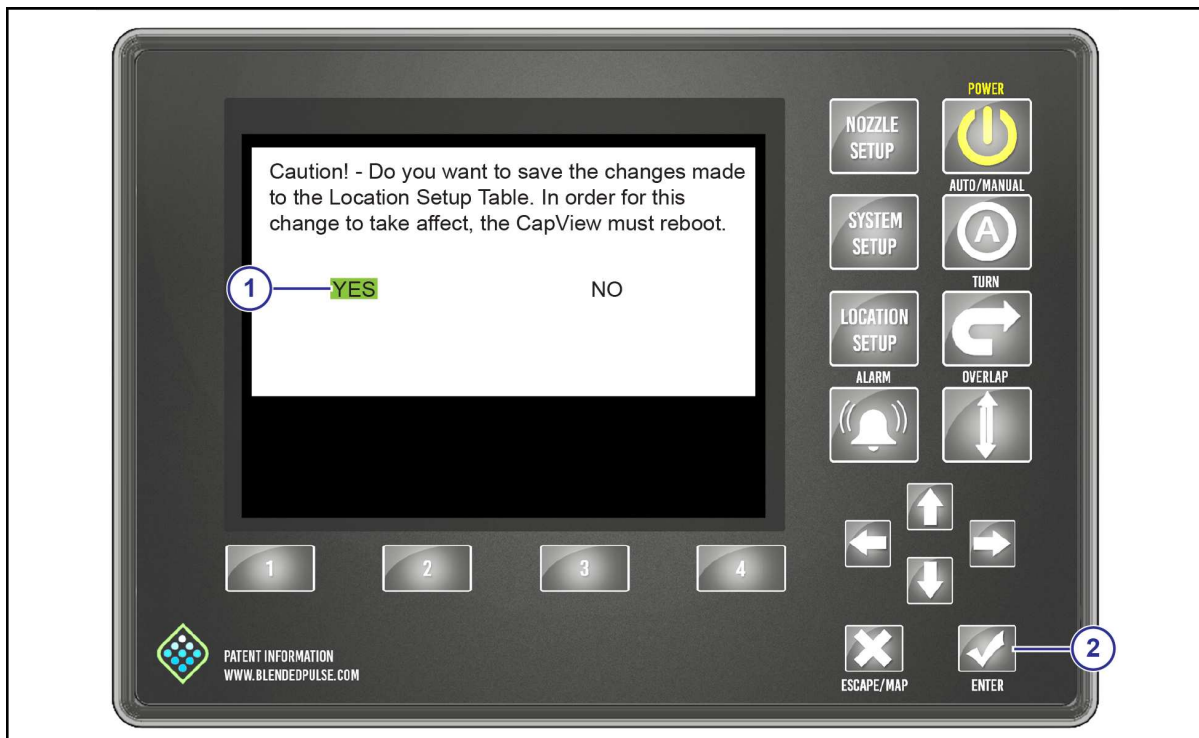


Fig. 26:

The screen will give the option **YES** (to save) or **NO** (not to save) the entered data.

15. If the data is correct, use the right or left arrow buttons to select **YES** (1).

16. Press the **ENTER** button (2).

A blue save bar will show and move across the screen. The CapView is saving all the data inside the VCMs. This process may take a few minutes to complete.

Important: The CapView will shutdown to reboot shortly after selecting **YES**.

System Setup Menus

System Setup Menu Descriptions

| Line Number | Line Title | Action |
|-------------|---|--|
| | Description | |
| 1 | Operation Mode | Press ENTER to change |
| | The PinPoint™ II system can operate in three modes: SharpShooter™ , Synchro™ or N-Ject™ . In SharpShooter™ mode the rate controller ties into the pump for flow control and the PinPoint™ II changes the nozzle duty cycle to maintain constant pressure. In Synchro™ mode the PinPoint™ II controls the pump for active pressure control and the rate controller ties into the Gateway Hub to control flow by changing the nozzle duty cycle. The N-Ject™ mode is used for anhydrous ammonia or liquid fertilizer application. | |
| 2 | Controller Gallon Counter | Press ENTER and then YES to reset. |
| | The controller gallons counter value should match the values from the rate controller. Resetting the controller gallons counter also resets the actual gallons counter. Make sure to reset the rate controller at the same time. The controller gallon counter shows the flow value per section. | |
| 3 | Actual Gallons Counter | Press ENTER and then YES to reset. |
| | The actual gallons counter value should match the tank volume. The difference between the controller gallon counter and actual gallon counter is the product saved using PinPoint™ II overlap control. The actual gallon counter shows the flow value per nozzle. The controller gallon counter minus the actual gallon counter is the total savings in product applied from the individual nozzle control. | |
| 4 | Controller Acre Counter | Press ENTER and then YES to reset. |
| | The controller acre counter counts the acres applied per section. | |
| 5 | Actual Acre Counter | Press ENTER and then YES to reset. |
| | The actual acre counter counts the acres applied per nozzle. The controller acre counter minus the actual acre counter is the additional acres an operator can apply per tank load from the individual nozzle control. | |
| 6 | Controller Gallons per Minute | |
| | The controller gallons per minute should match the rate controller flow display. The gallons per minute value is per section. | |
| 7 | Actual Gallons per Minute | |
| | The actual gallons per minute value is the flow that is actually being sprayed. It should match the turbine flowmeter (unless the correction mode is active at a very low flow rate or calculation mode is active). The gallons per minute value is per individual nozzle control. The control gallons per minute and the actual gallons per minute values should always be equal unless the PinPoint™ II is shutting off individual nozzles. When individual nozzles are being turned off the actual gallons per minute will be lower than the controller gallons per minute. | |

| Line Number | Line Title | Action |
|-------------|---|------------------------------|
| | Description | |
| 8 | Nozzle Control (Key FOB) | Press ENTER to change |
| | Most systems will have 12V Active boom switches. This means the boom switch wires get positive 12 VDC when turned on. To turn on the key fob, select Key FOB Active . In Key FOB mode, all the nozzles will be turned off, and a message will show on the operate screen that the Key FOB mode is active. To return to operation mode, turn the nozzle control activation value back to the previous value (typically 12V Active). Some systems will use the 12V GND switch signal. | |
| 9 | Pressure 1 | |
| | The pressure 1 value is the boom spray pressure. This value is shown as the green bar on the main operating screen. | |
| 10 | System Voltage | |
| | The system voltage is the voltage at the Gateway hub. This can be an indicator of system health. | |
| 11 | Display Backlight | Press ENTER to change |
| | Larger numbers make the CapView screen brighter for daytime use. Smaller numbers make the CapView screen dimmer for night-time use. Range: 1-10, if 5 or less the keypad backlight will turn on. | |
| 12 | LED Brightness | Press ENTER to change |
| | Larger numbers make the LED lights brighter for daytime use. Smaller numbers dim the LED lights for night-time use. Range: 1-10. | |
| 13 | Beeper Volume | Press ENTER to change |
| | Larger numbers make the alarm louder for outdoor use. Smaller numbers softens the alarm for indoor use. Range: 0-5, 0 turns off the beeper completely. | |
| 14 | Specific Gravity | Press ENTER to change |
| | Specific gravity refers to the density or weight per gallon as compared to water (Water = 8.35 lb./gal.). For water-based products use 1.00. For liquid fertilizer use 1.2 for 10 lb/gal product, etc. Specific gravity is used to calculate flow. | |
| 15 | Valve Diagnostics Enable | Press ENTER to change |
| | If the PinPoint™ II system is not using nozzles that use the CapstanAG nozzle diagnostics properly, the nozzle diagnostics can be disabled here. CapstanAG uses this feature on demonstration units and development units where lights are substituted for valves or reset to coil only. Coil only disables the plunger movement detection without disabling short or open data. | |
| 16 | Overlap Distance | Press ENTER to change |
| | CapstanAG has coined the term “Cat Whiskers” to describe this feature. Each nozzle has five imaginary cat whiskers by which it checks and marks the overlap map. There is a whisker in front, behind, right, left, and center. The center whisker marks the map as being sprayed. The other four whiskers are for checking if the nozzle needs to be turned off at an already sprayed area. The overlap distance refers to the distance that these four whiskers are from the center whisker. The PinPoint™ II map is in one-meter-squares, so it is advised to set this at a minimum of 40 in (1 meter). | |

| Line Number | Line Title | Action |
|-------------|---|--|
| | Description | |
| 17 | Rate Sync Mode | Press ENTER to change |
| | Rate Sync™ changes the nozzle duty cycle based on the vehicle speed obtained from the GPS receiver. | |
| 18 | Rate Sync Average | Press ENTER to change |
| | The Rate Sync™ average represents how often the rate sync samples the speed from GPS. PinPoint™ II has a 10hz GPS requirement, so the speed is sampled 10 times per second or once every 0.1 seconds. Higher values cause the system to react slower. | |
| 19 | Rate Sync Max Ground Speed | Press ENTER to change |
| | Enter the approximate speed that will allow the system to reach 100% duty cycle based on the current spray tip size being used. | |
| 20 | Units | Press ENTER to change |
| | Select the desired units of choice: US or SI units. | |
| 21 | Baud Rate | |
| | This shows the GPS baud rate that is detected by the system. 19,200 to 115,200. | |
| 22 | Revision Information | Press ENTER to change and then YES |
| | The revision information stores all hardware items by CAN address and shows the current version of all hardware and software items on the system. This includes the CapView, Gateway hub, and VCM software versions. | |
| 23 | Language | Press ENTER to change |
| | Select the desired language: English or Portuguese | |
| 24 | Previous Error List | Press ENTER to change |
| | This displays the 50 most recent errors. | |
| 25 | Advanced Settings | Press ENTER to see the menu |
| | Additional settings menu | |

Advanced Settings—Synchro™ Operation Mode

| Line Number | Line Title | Action |
|-------------|--|---|
| | Description | |
| 1 | Hour Meter | |
| | The hour meter shows the accumulated hours. The hour meter starts when at least one nozzle is on. | |
| 2 | Compass Heading | Press ENTER to and then YES to calibrate. |
| | The 3-dimensional compass is generally not used. It could be used for backup detection or low-speed turn compensation stability. | |
| 3 | Compass Offset | Enter the offset to calibrate |
| | This value is used after calibrating the 3-dimensional compass to correlate the chassis with the Gateway Hub. | |
| 4 | USB Mode | |
| | Thumb drive or computer. Thumb drive must be chosen to utilize a USB drive for different purposes. | |
| 5 | Deadband Pressure | Press ENTER to change. |
| | The deadband pressure is used to tune out instability by providing a pressure zone that is considered satisfactory, thus requiring no action by the control system. The higher the number, the less sensitive the control system. To stabilize an oscillating system, use a higher number. To speed up a sluggish system use a lower number. Range 0 to 100. | |
| 6 | Gain - System | Press ENTER to change. |
| | The system gain is used to tune pressure control. The system gain changes the total gain of the system according to the same ratios of proportional/integral/differential gain established in those settings. The system gain number is the one most often used to tune sluggish or oscillating systems. The higher the number, the more sensitive the control system. To stabilize an oscillating system, use a lower number. To speed up a sluggish system, use a higher number. | |
| 7 | Gain - Proportional | Press ENTER to change. |
| | The proportional gain causes the control system to respond faster when the errors are greater. The higher the number, the more sensitive the control system. To stabilize an oscillating system use a lower number. To speed up a sluggish system use a higher number. | |
| 8 | Gain - Integral | Press ENTER to change. |
| | The integral gain causes the control system to accelerate faster when the errors are greater. The higher the number, the more sensitive the control system. To stabilize an oscillating system use a lower number. To speed up a sluggish system use a higher number. Integral gain is generally set at 1/10th of the proportional gain. | |
| 9 | Gain - Differential | Press ENTER to change. |
| | The differential gain causes the control system to accumulate errors faster when errors are small. The higher the number, the more sensitive the control system. To stabilize an oscillating system, use a lower number. To speed up a sluggish system, use a higher number. Differential gain is rarely used and is generally set at 1/10th of the integral gain or zero. | |

| Line Number | Line Title | Action |
|-------------|---|-------------------------------|
| | Description | |
| 10 | Total Number Valve Expected | Press ENTER to change. |
| | The total number of valve expected value is the number of valves on the sprayer. At system power on, the system counts the number of valves reported by the VCMs. If the reported number matches the manually entered number for the value, then all is OK, and the system continues. If an error is detected, an alarm is sounded and diagnostic readouts are shown. The system cannot detect valve issues that may have occurred when the system was not running. If the valve was damaged, or corrosion sets in over the winter, this is the error you will get. The system cannot determine which nozzle is affected if the problem occurred when the system was powered off, so use the CapView location setup screen and look for a nozzle that is not connected. | |
| 11 | Scrolling Enable/Disable | Press ENTER to change. |
| | In the nozzle diagnostics on the operation screen, scroll from nozzle to nozzle. To focus on a single nozzle without the scrolling taking place, select disabled here. | |
| 12 | GPS - Ant. Ahead of Rear Axle | Press ENTER to change. |
| | Enter the number of inches from the rear axle to the GPS antenna. A positive number indicates that the antenna is ahead of the axle. A negative number indicates that the antenna is behind the axle. This value is used for the GPS overlap control to shut off the nozzles in the proper place. The GPS antenna must be located on the vehicle on which the boom is mounted. For pull-behind units, mount the GPS antenna on the implement. | |
| 13 | GPS - Ant. Right of Center | Press ENTER to change. |
| | Enter the number of inches that the GPS antenna is off-center. A positive number indicates that the antenna is right of center. A negative number indicates that the antenna is left of center. | |
| 14 | GPS Antenna Above Ground | Press ENTER to change. |
| | Enter the number of inches that the GPS antenna is above ground. | |
| 15 | GPS Boom Ahead of Rear Axle | Press ENTER to change. |
| | Enter the number of inches that the boom is from the rear axle. A positive number indicates that the boom is ahead of the rear axle. A negative number indicates that the boom is behind the rear axle. | |
| 16 | Forward/Reverse Detection | Press ENTER to change. |
| | For individual nozzle control to correctly perform the system must know if the sprayer is moving in forward or reverse. When the forward/reverse detection is set to OFF=Fwd Rev Switch , the system is looking for a 12V (reverse beeper) input to tell it the sprayer is reversing. If the system does not see the 12V signal, it assumes the sprayer is traveling in the forward direction. If this setting is changed to Compass w/Turn then a 3-D compass is used to detect forward/reverse, and the compass calibration is required. For operators who do not spray in reverse, the best option is to leave this setting at OFF=Fwd Rev Switch . | |

| Line Number | Line Title | Action |
|-------------|--|-------------------------------|
| | Description | |
| 17 | Look Ahead Time | Press ENTER to change. |
| | <p>The look ahead time is based on the fastest field speed, the value is an indicator of how much time the GPS and the system takes to react to coverage inputs. If the shutoff is too early, decrease the value. If the shutoff is too late, increase the value. Set the look ahead time value at the fastest travel speed expected.</p> <p>Note: When setting the overlap distance, set the Look Ahead Time value to 0.</p> | |
| 18 | Zero Rate Shutoff | Press ENTER to change. |
| | <p>When set to Shutoff the low pressure shutoff is enabled. To disable the low pressure shutoff, set to Minimum PWM%. When set to shutoff, the system will allow the duty cycle to drive to 0% or off. This is useful when applying VRT grids with a 0 application rate. Recommended setting is Minimum PWM% where it will only allow the system to go to the low limit nozzle PWM set on the Nozzle PWM Minimum line.</p> | |
| 19 | Pressure Control Hold | Press ENTER to change. |
| | Synchro™ mode operation pressure control hold must be set to Disable or 0. | |
| 20 | Pressure Sensor 1 Min. Voltage | Press ENTER to change. |
| | Used to set up pressure sensor 1, which is the PinPoint™ II spray pressure sensor. | |
| 21 | Pressure Sensor 1 Max. Voltage | Press ENTER to change. |
| | Used to set up pressure sensor 1, which is the PinPoint™ II spray pressure sensor. | |
| 22 | Pressure Sensor 1 Min. Pressure | Press ENTER to change. |
| | Used to set up pressure sensor 1, which is the PinPoint™ II spray pressure sensor. | |
| 23 | Pressure Sensor 1 Max. Pressure | Press ENTER to change. |
| | Used to set up pressure sensor 1, which is the PinPoint™ II spray pressure sensor. | |
| 24 | Pressure Sensor 1 Offset | Press ENTER to change. |
| | <p>It is common to have 1 to 5 VDC sensors and 0.5 to 5 VDC sensors. The PSI sensor offset is used when the sensor does not match a gauge. Entering an offset value will scale the sensor up or down. The sensor offset allowable range is ±1-9.</p> | |
| 25 | Servo Type | Press ENTER to change. |
| | <p>Case Sprayers 2017 and before will use PWM 12 Volt. Case sprayers 2017 and after will use PWM Ground. The RoGator factory controller uses PWM Ground. The Apache factory controller uses PWM Ground or Bypass Servo depending upon plumbing. The AgLeader rate controllers use PWM 12 Volt. Trimble rate controllers use PWM Ground. Raven ISO controller 2 uses PWM Ground.</p> | |
| 26 | Manual Mode Servo Speed | Press ENTER to change. |
| | <p>The manual mode servo speed controls how fast the pressure changes in manual mode. If the valve operates too slowly in manual mode, increase this value. If the valve operates too quickly in manual mode, decrease this value.</p> | |

| Line Number | Line Title | Action |
|-------------|---|-------------------------------|
| | Description | |
| 27 | Servo Minimum DC% | Press ENTER to change. |
| | The servo minimum value is the minimum duty cycle that the pump will be driven. It is important that this value corresponds with the minimum duty cycle used by the rate controller. This value also scales the minimum duty cycle of the pulsing boom nozzles. Raven uses Bit Integers 0 to 256 to set this minimum. Use math to determine this percentage. If the controller value is “150,” then the duty cycle percent is $150/256 \times 100 = 59\%$. | |
| 28 | Servo Maximum DC% | Press ENTER to change. |
| | The servo maximum value is the maximum duty cycle that the pump will be driven. It is important that this value corresponds with the maximum duty cycle used by the rate controller. This value also scales the maximum duty cycle of the pulsing boom nozzles. Raven uses Bit Integers 0 to 256 to set this maximum. Use math to determine this percentage. If the controller value is “250,” then the duty cycle percent is $250/256 \times 100 = 98\%$. | |
| 29 | Pump Speed Limit | Press ENTER to change. |
| | The pump speed limit is used on sprayers that are equipped with a pump speed sensor. When the pump speed limit is enabled, it will limit the maximum pump speed to the selected RPM. | |
| 30 | Pump Seal Shutdown | Press ENTER to change. |
| | When the sensor falls below the pump seal shutdown value, the pump shuts off to prevent the pump from operating dry and causing pump seal failure. This feature only works in Synchro™ mode with a PWM pump in Automatic mode. | |
| 31 | Nozzle PWM% Cycle Time | Press ENTER to change. |
| | The nozzle PWM% cycle time value only affects in-line or bypass valve servo types. The PWM% cycle time (4.0 seconds) is the time it takes for the pulsing nozzles to modulate from minimum to maximum duty cycle. To speed up a sluggish system reaction time, enter a lower number. To slow down the reaction time of an oscillating system, enter a higher number. | |
| 32 | Nozzle Pulse Frequency | Press ENTER to change. |
| | All CapstanAG sprayer systems run at 10 pulses per second pulse frequency. To run a faster pulse frequency, enter a larger number. CapstanAG does not recommend pulse frequencies slower than 10Hz in sprayer applications. | |
| 33 | Nozzle PWM Minimum | Press ENTER to change. |
| | The nozzle PWM minimum value is the minimum pulse duty cycle for the nozzle valves. You may not change this value any less than the Nozzle Pulse Frequency value. If the Nozzle Pulse Frequency is set to 10 pulses then the nozzle PWM minimum must be set to 10 or higher. If you are uncomfortable about running low duty cycles, then this value can be set higher. | |
| 34 | Nozzle PWM Maximum | Press ENTER to change. |
| | It is unlikely that you would set the nozzle PWM maximum lower than 100%, this is where the limit to the maximum duty cycle would be set. | |

| Line Number | Line Title | Action |
|-------------|--|---|
| | Description | |
| 35 | Flowmeter Minimum GPM | Press ENTER to change. |
| | The flowmeter minimum gallons per minute value is the minimum flow at which the turbine flowmeter is no longer accurate. When in correction mode, the PinPoint™ II will automatically calculate the flow below this value. This is especially important when the system is operating with only a few nozzles, like point rows, filling gaps, etc. The system calculation accurately measures flow through a single nozzle. | |
| 36 | Flowmeter Output Type | Press ENTER to change. |
| | In Correction mode, the flow reported to the rate controller automatically switches from the turbine flowmeter to a calculation whenever the flow falls below Flowmeter Minimum GPM and also when a partial boom section is pulsing. Transparent mode prohibits this switch and only uses the turbine value regardless of accuracy. Calculate mode uses only the calculation. | |
| 37 | Flowmeter Calibration | Press ENTER to change. |
| | It is important for the flow meter calibration value to match the tag on the turbine flowmeter so that the gallon counters will match the rate controller. The system uses “pulses per 10-gallons.” If the flowmeter tag is in “pulses per gallon,” multiply by 10. If the rate controller requires “pulses per gallon,” divide by 10. You can check this by monitoring the gallons per minute shown in <i>System Setup</i> and comparing it to the rate controller. | |
| 38 | Flowmeter Error Limit | Press ENTER to change. |
| | The flowmeter error limit, range Disabled to 50%. Flow % higher than the chosen % will cause a fault message and an alarm. | |
| 39 | Flowmeter Error | Press ENTER to change. |
| | The flowmeter error shows the real-time % difference between the flowmeter and the calculated flow. | |
| 40 | Minimum Valves ON | Press ENTER to change. |
| | The minimum valves on defaults to 1. Reduces the over application of chemical product with chemical injection. Used for chemical injection systems (not N-Ject™). | |
| 41 | Factory Reset | Press ENTER and then YES to change. |
| | The factory reset will require all setups in the entire system to be reset to default. The factory reset is required when repairing the system. Make sure that you have recorded the setups you prefer before resetting. With a properly prepared “cheat sheet,” a factory reset only takes a few minutes. If major components are changed, a factory reset may need to be performed. | |
| 42 | Contact Information | |
| | Selecting this line will open up a page with the CapstanAG toll-free phone number, website, and a QRC code that will direct you to the website. | |

Advanced Settings—SharpShooter™ Operation Mode

| Line Number | Line Title | Action |
|-------------|--|---|
| | Description | |
| 1 | Hour Meter | |
| | The hour meter shows the accumulated hours. The hour meter starts when at least one nozzle is on. | |
| 2 | Compass Heading | Press ENTER to and then YES to calibrate. |
| | The 3-dimensional compass is generally not used. It could be used for backup detection or low-speed turn compensation stability. | |
| 3 | Compass Offset | Enter the offset to calibrate |
| | This value is used after calibrating the 3-dimensional compass to correlate the chassis with the Gateway Hub. | |
| 4 | USB Mode | |
| | Thumb drive or computer . Thumb drive must be chosen to utilize a USB drive for different purposes. | |
| 5 | Deadband Pressure | Press ENTER to change. |
| | The deadband pressure is used to tune out instability by providing a pressure zone that is considered satisfactory, thus requiring no action by the control system. The higher the number, the less sensitive the control system. To stabilize an oscillating system, use a higher number. To speed up a sluggish system use a lower number. Range 0 to 100. | |
| 6 | Gain - System | Press ENTER to change. |
| | The system gain is used to tune pressure control. The system gain changes the total gain of the system according to the same ratios of proportional/integral/differential gain established in those settings. The system gain number is the one most often used to tune sluggish or oscillating systems. The higher the number, the more sensitive the control system. To stabilize an oscillating system, use a lower number. To speed up a sluggish system, use a higher number. | |
| 7 | Gain - Proportional | Press ENTER to change. |
| | The proportional gain causes the control system to respond faster when the errors are greater. The higher the number, the more sensitive the control system. To stabilize an oscillating system use a lower number. To speed up a sluggish system use a higher number. | |
| 8 | Gain - Integral | Press ENTER to change. |
| | The integral gain causes the control system to accelerate faster when the errors are greater. The higher the number, the more sensitive the control system. To stabilize an oscillating system use a lower number. To speed up a sluggish system use a higher number. Integral gain is generally set at 1/10th of the proportional gain. | |
| 9 | Gain - Differential | Press ENTER to change. |
| | The differential gain causes the control system to accumulate errors faster when errors are small. The higher the number, the more sensitive the control system. To stabilize an oscillating system, use a lower number. To speed up a sluggish system, use a higher number. Differential gain is rarely used and is generally set at 1/10th of the integral gain or zero. | |

| Line Number | Line Title | Action |
|-------------|---|-------------------------------|
| | Description | |
| 10 | Total Number Valve Expected | Press ENTER to change. |
| | The total number of valve expected value is the number of valves on the sprayer. Upon system power on, the system counts the number of valves reported by the VCMs. If the reported number matches the manually entered number for the value, then all is OK, and the system continues. If an error is detected, an alarm is sounded and diagnostic readouts are shown. The system cannot detect valve issues that may have occurred when the system was not running. If the valve was damaged, or corrosion sets in over the winter, this is the error you will get. The system cannot determine which nozzle is affected if the problem occurred when the system was powered off, so use the CapView location setup screen and look for a nozzle that is not connected. | |
| 11 | Scrolling Enable/Disable | Press ENTER to change. |
| | In the nozzle diagnostics on the operate screen, scroll from nozzle to nozzle. To focus on a single nozzle without the scrolling taking place, select disabled here. | |
| 12 | GPS - Ant. Ahead of Rear Axle | Press ENTER to change. |
| | Enter the number of inches from the rear axle to the GPS antenna. A positive number indicates that the antenna is ahead of the axle. A negative number indicates that the antenna is behind the axle. This value is used for the GPS overlap control to shut off the nozzles in the proper place. The GPS antenna must be located on the vehicle on which the boom is mounted. For pull-behind units, mount the GPS antenna on the implement. | |
| 13 | GPS - Ant. Right of Center | Press ENTER to change. |
| | Enter the number of inches that the GPS antenna is off-center. A positive number indicates that the antenna is right of center. A negative number indicates that the antenna is left of center. | |
| 14 | GPS Antenna Above Ground | Press ENTER to change. |
| | Enter the number of inches that the GPS antenna is above ground. | |
| 15 | GPS Boom Ahead of Rear Axle | Press ENTER to change. |
| | Enter the number of inches that the boom is from the rear axle. A positive number indicates that the boom is ahead of the rear axle. A negative number indicates that the boom is behind the rear axle. | |
| 16 | Forward/Reverse Detection | Press ENTER to change. |
| | For individual nozzle control to correctly perform the system must know if the sprayer is moving in forward or reverse. When the forward/reverse detection is set to OFF=Fwd Rev Switch , the system is looking for a 12V (reverse beeper) input to tell it the sprayer is reversing. If the system does not see the 12V signal, it assumes the sprayer is traveling in the forward direction. If this setting is changed to Compass w/Turn then a 3-D compass is used to detect forward/reverse, and the compass calibration is required. For operators who do not spray in reverse, the best option is to leave this setting at OFF=Fwd Rev Switch . | |

| Line Number | Line Title | Action |
|-------------|--|-------------------------------|
| | Description | |
| 17 | Look Ahead Time | Press ENTER to change. |
| | <p>The look ahead time is based on the fastest field speed, the value is an indicator of how much time the GPS and the system takes to react to coverage inputs. If the shutoff is too early, decrease the value. If the shutoff is too late, increase the value. Set the look ahead time value at the fastest travel speed expected.</p> <p>Note: When setting the overlap distance, set the Look Ahead Time value to 0.</p> | |
| 18 | Zero Rate Shutoff | Press ENTER to change. |
| | <p>When set to Shutoff the low pressure shutoff is enabled. To disable the low pressure shutoff, set to Minimum PWM%. When set to shutoff, the system will allow the duty cycle to drive to 0% or off. This is useful when applying VRT grids with a 0 application rate. Recommended setting is Minimum PWM% where it will only allow the system to go to the low limit nozzle PWM set on the Nozzle PWM Minimum line.</p> | |
| 19 | Low Pressure Shutoff | Press ENTER to change. |
| | <p>When used, the low pressure shutoff causes the solenoid valves to shut off, like diaphragm drip checks at this value. When the low pressure shutoff value is 8 PSI, a readout will show when PSI drops below 8 PSI. At this point, nozzle valves will close. Nozzle valves will open, and the readout will clear when the PSI increases to at least 12 PSI.</p> | |
| 20 | Low Pressure Turn-On | |
| | <p>When used, the low pressure turn-on causes the solenoid valves to turn on after a low pressure shutoff, like diaphragm drip checks.</p> | |
| 21 | Pressure Control Hold | Press ENTER to change. |
| | <p>SharpShooter™ mode operation pressure control hold must be set to disable or 0.</p> | |
| 22 | Pressure Sensor 1 Min. Voltage | Press ENTER to change. |
| | <p>Used to set up pressure sensor 1, which is the PinPoint™ II spray pressure sensor.</p> | |
| 23 | Pressure Sensor 1 Max. Voltage | Press ENTER to change. |
| | <p>Used to set up pressure sensor 1, which is the PinPoint™ II spray pressure sensor.</p> | |
| 24 | Pressure Sensor 1 Min. Pressure | Press ENTER to change. |
| | <p>Used to set up pressure sensor 1, which is the PinPoint™ II spray pressure sensor.</p> | |
| 25 | Pressure Sensor 1 Max. Pressure | Press ENTER to change. |
| | <p>Used to set up pressure sensor 1, which is the PinPoint™ II spray pressure sensor.</p> | |
| 26 | Pressure Sensor 1 Offset | Press ENTER to change. |
| | <p>It is common to have 1 to 5 VDC sensors and 0.5 to 5 VDC sensors. The PSI sensor offset is used when the sensor does not match a gauge. Entering an offset value will scale the sensor up or down. The sensor offset allowable range is ±1-9.</p> | |

| Line Number | Line Title | Action |
|-------------|--|-------------------------------|
| | Description | |
| 27 | Nozzle Pulse Frequency | Press ENTER to change. |
| | All CapstanAG sprayer systems run at 10 pulses per second pulse frequency. To run a faster pulse frequency, enter a larger number. CapstanAG does not recommend pulse frequencies slower than 10Hz in sprayer applications. | |
| 28 | Nozzle PWM Minimum | Press ENTER to change. |
| | The nozzle PWM minimum value is the minimum pulse duty cycle for the nozzle valves. You may not change this value any less than the Nozzle Pulse Frequency value. If the Nozzle Pulse Frequency is set to 10 pulses then the nozzle PWM minimum must be set to 10 or higher. If you are uncomfortable about running low duty cycles, then this value can be set higher. | |
| 29 | Nozzle PWM Maximum | Press ENTER to change. |
| | It is unlikely that you would set the nozzle PWM maximum lower than 100%, this is where to set the limit to the maximum duty cycle. | |
| 30 | Flowmeter Minimum GPM | Press ENTER to change. |
| | The flowmeter minimum gallons per minute value is the minimum flow at which the turbine flowmeter is no longer accurate. When in correction mode, the system will automatically calculate the flow below this value. This is important when the system is operating with only a few nozzles, like point rows, filling gaps, etc. The system calculation accurately measures flow through a single nozzle. | |
| 31 | Flowmeter Output Type | Press ENTER to change. |
| | In Correction mode, the flow reported to the rate controller automatically switches from the turbine flowmeter to a calculation whenever the flow falls below Flowmeter Minimum GPM and also when a partial boom section is pulsing. Transparent mode prohibits this switch and only uses the turbine value. Calculate mode uses only the calculation. | |
| 32 | Flowmeter Calibration | Press ENTER to change. |
| | It is important for the flow meter calibration value to match the tag on the turbine flowmeter so the gallon counters will match the rate controller. The system uses “pulses per 10-gallons.” If the flowmeter tag is in pulses per gallon, multiply by 10. If the rate controller requires pulses per gallon, divide by 10. Monitor the gallons per minute shown in System Setup and comparing it to the rate controller. | |
| 33 | Flowmeter Error Limit | Press ENTER to change. |
| | The flowmeter error limit, range Disabled to 50%. Flow % higher than the chosen % will cause a fault message and an alarm. | |
| 34 | Flowmeter Error | Press ENTER to change. |
| | The flowmeter error shows the real-time % difference between the flowmeter and the calculated flow. | |

| Line Number | Line Title | Action |
|-------------|---|---|
| | Description | |
| 35 | Low Flow Hold Flow Rate | |
| | The low flow hold flow rate is set to Disabled except on John Deere R Series sprayers this must be set to 10 GPM. | |
| 36 | Rate Sync Test Speed | Press ENTER to change. |
| | The Rate Sync™ test speed is not used at this time. | |
| 37 | Minimum Valves ON | Press ENTER to change. |
| | The minimum valves on defaults to 1. Reduces the over application of chemical product with chemical injection. Used for chemical injection systems (not N-Ject™). | |
| 38 | Factory Reset | Press ENTER and then YES to change. |
| | The factory reset will reset all setups in the entire system to the default settings. The factory reset is required when repairing or replacing parts of the system. Make sure that you have recorded the setups you prefer before resetting. With a properly prepared “cheat sheet,” a factory reset only takes a few minutes. | |
| 39 | Contact Information | |
| | Selecting this line will open up a page with the CapstanAG toll-free phone number, website, and a QRC code that will direct you to the website. | |

Do the Nozzle Setup Procedure

1. Press the **NOZZLE SETUP** button.

Nozzle Setup is to set up each individual nozzle for:

- Rank
- Flow Value—Used to adjust nozzle flow for fence row and wheel track
- Nozzle Size—Used to adjust to match tip size
- Valve Size—15.5 for standard valve assemblies and 24.0 for high flow valve assemblies
- Auxiliary an Soft Boom Attachment

Each individual nozzles can be tested, or the identity confirmed.

The *Nozzle Setup* screen includes set up for:

- Fence Rows
- Wheel Track
- Dust Control Nozzles
- Soft Booms for Non-conventional Nozzle Groupings

Individual nozzle tip sizes can be changed on the *Nozzle Setup* screen. Default nozzles are indicated with a “D.” Always make sure that the tip size in nozzle setup is correct.

Four different default nozzle sizes can be set up, one for each **PRESET** button. You can save the profile to a number by simply pressing the number buttons #1, #2, #3 or #4.

From the operation screen, any of the four preset nozzle setups can be selected by pressing and holding the desired **PRESET** button for approximately five seconds.

The nozzle setup should change.

2. Use the arrow buttons to highlight the desired information to change.
3. Press the **ENTER** button.
4. Change the information.
5. Press the **ENTER** button.

Set the Preset Buttons

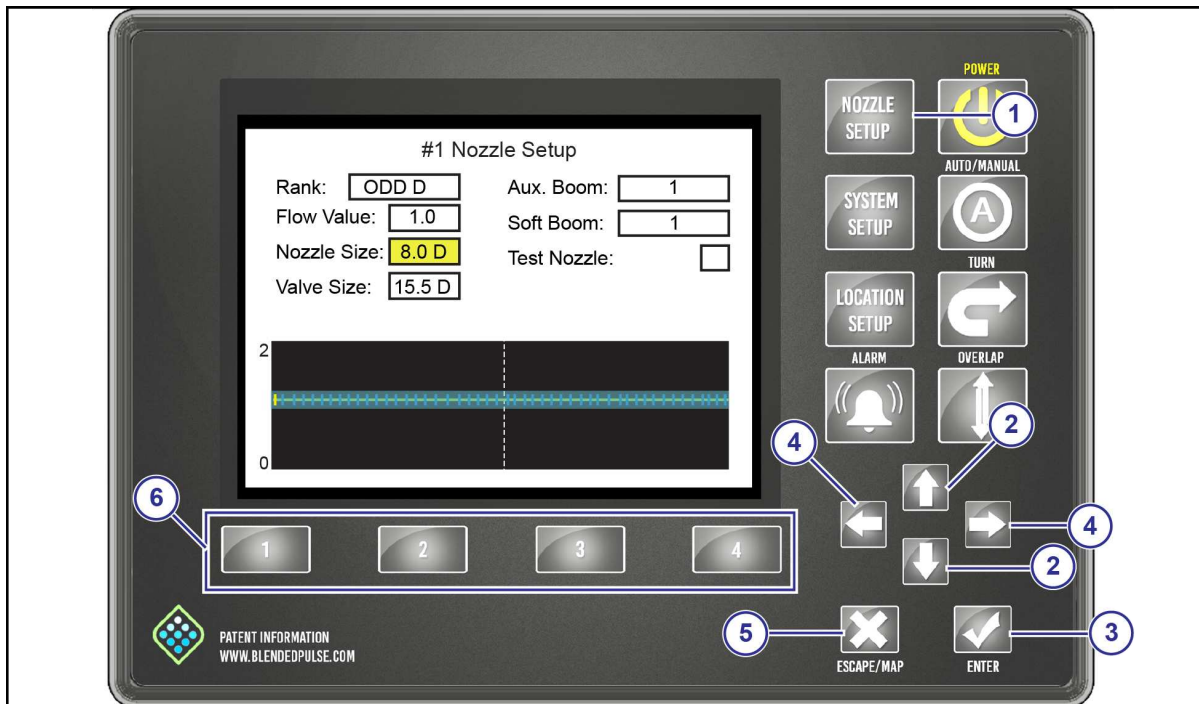


Fig. 27:

1. Press the **NOZZLE SETUP** button (1).
2. Use the **UP** or **DOWN** arrow buttons (2) to go to the **Nozzle Size**.
3. Press the **ENTER** button (3).
4. Use the **UP** or **DOWN** arrow buttons to change the value to match the desired tip size.
5. Press the **ENTER** button.

A message screen will show... **You are about to change the default tip size for all nozzles. Are you sure you wish to do this?**

6. Use the **LEFT** or **RIGHT** arrow buttons (4) to go to **Save**.
7. Press the **ENTER** button.
8. Press the **ESCAPE/MAP** button (5) to show the **Save Menu**.
9. Use the **LEFT** or **RIGHT** arrow buttons to select the preset you would like to save this profile to.
10. Press the desired preset button (6).

Note: When you change the nozzles, you must select the corresponding preset. Press and hold the correct Preset button until the light turns on.

System Dry Tests

Do these procedures to make sure that the soft boom and nozzle valves are operating correctly.

Do the Boom Shutoff Dry Test

1. Make sure that the engine is off and the key is on.
2. Turn on the CapView display and the rate controller.
3. Turn on all of the boom switches.
4. Go to the rate controller setup so that the section control valves can be engaged.
All nozzle valves on the boom should start clicking.
5. Turn off all of the boom sections.
6. Turn on boom section 1.
7. Repeat steps 5 and 6 for each boom section.
8. Make sure that the boom sections are operating in the correct order.

Note: If the clicking nozzle valves are not on the selected boom section, a VCM is not connected to the correct boom section on the Gateway hub. This can be fixed electronically.

Do the Key Fob Boom Shutoff Dry Test

Using the key fob to operate the boom sections lets the operator see the operation of the nozzle valves. Use the key fob to operate each nozzle.



Fig. 28:

1. Activate the Nozzle Control (Key Fob) on the CapView.

- a) Press the **SYSTEM SETUP** button (1).
- b) Use the **UP** or **DOWN** arrow buttons (2) to select **Nozzle Control (Key Fob)** (3).
- c) Press the **ENTER** button (4).
- d) Use the **UP** or **DOWN** arrow buttons to select **Key Fob Active** (5).
- e) Press the **ENTER** button.

When the key fob mode is activated, all the nozzles are turned off. The CapView shows that the Key FOB Mode is active. This is indicated by the text block in the upper left corner and the blinking LEDs.

2. Turn on all of the boom section switches and the master switch to let water flow to all of the boom sections.
3. Press the top/bottom buttons on the Key FOB to turn ON/OFF each boom section (1 thru 12).

Make sure that each boom section is operating (clicking) in the correct order.

Note: If the nozzles do not turn on in sequential order it indicates the VCMs are not setup correctly.

4. Press the right/left buttons on the Key FOB to turn ON/OFF each individual nozzle valve.

Make sure that each nozzle valve is operating (clicking) in the correct order.

Note: If a nozzle valve is leaking or dripping, use a marker to mark the nozzle valve. Continue to check all nozzle valves.

5. Press the center button on the Key FOB to turn OFF the whole boom.
6. Activate Nozzle Control (Key FOB) in the **SYSTEM SETUP** and change setting back to **12V Active** or the previous setting.

System Wet Tests

Do these procedures to make sure that the soft boom and nozzle valves are operating correctly.

Do the Boom Shutoff Wet Test

1. Fill the sprayer with approximately 400 gallons of water.
2. Make sure that the CapView and rate controller are off.
3. Start the machine engine and set to idle speed.
4. Turn on the CapView and rate controller.
5. Use the rate controller to start the pump.
6. Increase the engine speed to half throttle.
7. Set the CapView to the desired pressure.
8. Turn on all of the boom switches.

All of the nozzle valves on the boom should start to spray.

9. Turn off all of the boom sections.

10. Turn of boom section 1.

The nozzle valves on boom section 1 should start to spray.

11. Repeat steps 9 and 10 for each boom section.

12. Make sure that each boom section operates in the correct order.

Note: If the clicking nozzle valves are not on the selected boom section, a VCM is not connected to the correct boom section on the Gateway hub. This can be fixed electronically.

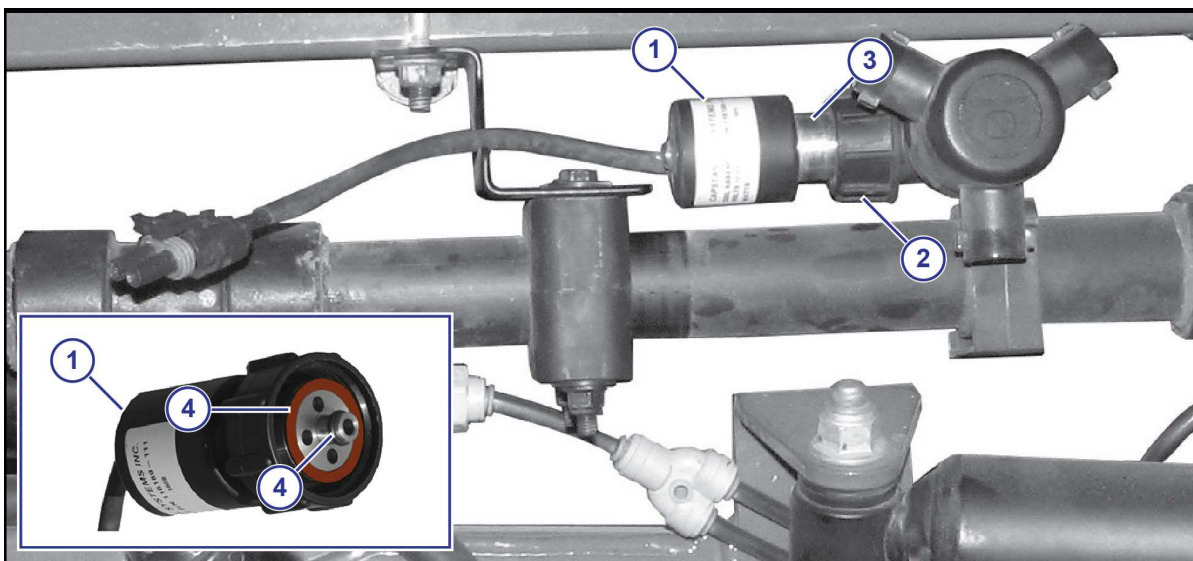


Fig. 29:

13. If the coil housing (1) spins, tighten the fly nut (2) until the coil housing does not spin.

14. If the coil housing does not spin, remove the nozzle valve (3).

15. Inspect the O-rings (4). If an O-ring is damaged, replace the O-ring.

If the O-rings appear to be okay, install the existing nozzle valve.

Do the Key Fob Boom Shutoff Wet Test

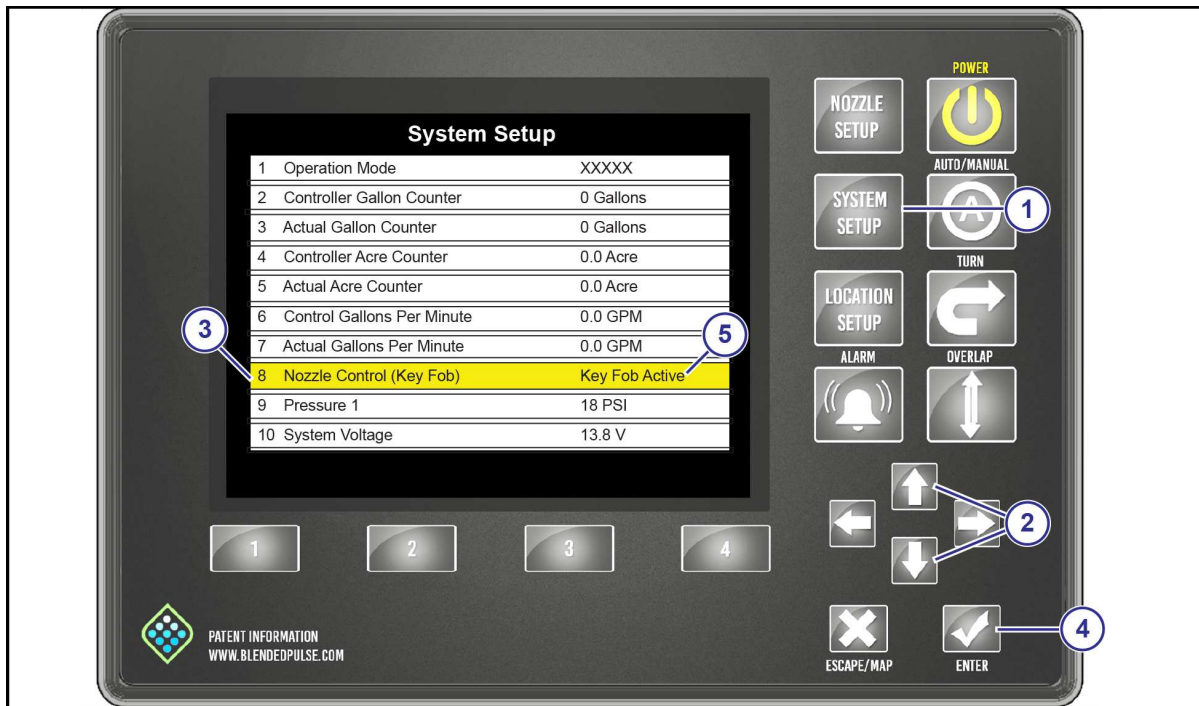


Fig. 30:

Using the key fob to operate the boom sections lets the operator see the operation of the nozzle valves. Use the Key FOB to operate each nozzle.

The Key FOB works well when checking for plugged tips without wasting a significant amount of product.

1. Activate the Nozzle Control (Key Fob) on the CapView.

- Press the **SYSTEM SETUP** button (1).
- Use the **UP** or **DOWN** arrow buttons (2) to select **Nozzle Control (Key Fob)** (3).
- Press the **ENTER** button (4).
- Use the **UP** or **DOWN** arrow buttons to select **Key Fob Active** (5).
- Press the **ENTER** button.

When the key fob mode is activated, all the nozzles are turned off. The CapView shows that the Key FOB Mode is active. This is indicated by the text block in the upper left corner and the blinking LEDs.

2. Turn on all of the boom section switches and the master switch to let water flow to all of the boom sections.

3. Press the top/bottom buttons on the Key FOB to turn ON/OFF each boom section (1 thru 12).

Make sure that each boom section is operating (clicking) in the correct order.

4. Press the right/left buttons on the Key FOB to turn ON/OFF each individual nozzle valve.

Make sure that each nozzle valve is operating (clicking) in the correct order.

Note: If a nozzle valve is leaking, use a marker to mark it and continue to check the nozzle valves.

5. Press the center button on the Key FOB to turn OFF the whole boom.

6. Activate Nozzle Control (Key FOB) in the **SYSTEM SETUP** and change to **12V Active** or the previous setting.

Do the Pressure Control Test

1. Make sure that the tank has enough water to do the procedure.
2. Make sure that the CapView and the rate controller are off.
3. Start the machine engine and set the engine to idle speed.
4. Turn on the CapView and rate controller.
5. Use the rate controller to start the pump.
6. Press the **AUTO** button on the CapView to put the system in automatic mode.
7. Put the rate controller in manual mode, or set a test speed and put the rate controller in automatic mode.
8. Turn on all of the boom sections.
The system will spray.
9. Slowly increase the engine to full speed.
10. Press the **ENTER** button of the CapView to change between set point.

If the pressure is stable at each of the set points and changes between the set points at a reasonable rate, the system has passed the pressure control test.

If the pressure is unstable at any of the set points, decrease the system gain value in the **ADVANCED SETTINGS** menu.

If the pressure changes too slowly between the set points, increase the system gain value in the **ADVANCED SETTINGS** menu.

Do the Flow Control Test

1. Make sure that the tank has enough water to do the procedure.
2. While stationary, set the test speed in the rate controller.
3. On the rate controller, set an appropriate application rate for the nozzles on the machine.
4. Turn on the boom section switches and the master switch.
5. Make sure that the actual rate is the same as the target rate.

If the target rate changes, the actual rate should change to the same value.

If the rate change is unstable or too slow, the gain values in the rate controller should be changed.

Do the Look Ahead Time and Overlap Test

The look ahead time and the overlap test show how the system is tuned to the speed of the GPS sensor and the time that it takes for overlap messages to make it to the nozzle valves. The look ahead time can be set with the help of two people to watch the nozzle valves at a known overlap point.

When setting the look ahead time and overlap distance, the overlap distance must be set to ZERO. Reset the distance to 40 plus after setting the look ahead time.

It is important to do this procedure without the **Overlap** turned on to make sure that all of the valves are turning on early enough and turning off late enough.

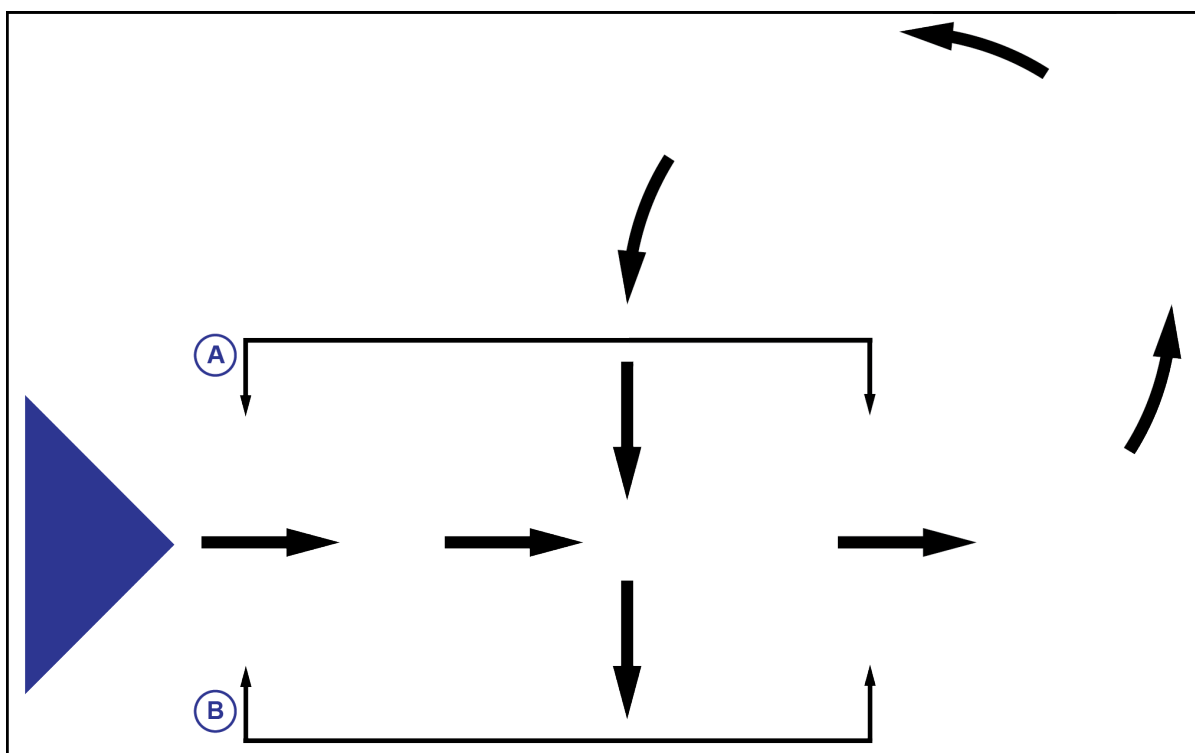


Fig. 31:

1. Put a person at point A and another at the point B.
The people should be on either side of the machine at the starting point.
2. Start spraying and move the machine forward.
3. Continue to move straight forward for approximately 150 ft (45 m).
4. Then while continuing to spray, turn left.
5. Move a short distance and then turn around to go to the previously sprayed area (point A).

When the boom reaches point B, the nozzle valves should start spraying.

When the boom reaches point A, the nozzle valves should stop spraying.

If the people notice that the nozzle valve shutoff time or the spray on time is early or late, adjust the **Look Ahead Time** in the **SYSTEM SETUP** menu. If the shutoff is too late, increase the value. If the shutoff is too early, decrease the value.

Do the Compass Calibration Procedure

The compass calibration is not required if the Gateway hub is installed in standard vertical orientation.

In typical installations the compass is disabled; however, by selecting Compass (w/Turn) as a Forward/Reverse Detection Method in the **SYSTEM SETUP**, the 3-Dimensional compass can be used for forward/reverse detection and for low-speed turn compensation stability. If this option is selected, the compass needs to be calibrated so that the machine knows the plane of the earth.

1. Make sure that the machine is facing north.



Fig. 32:

2. Press the **SYSTEM SETUP** (1) button.
3. Use the up or down arrows (2) to select **ADVANCED SETTINGS**.
4. Press the **ENTER** button (3).
5. Use the up or down arrows to select to Compass Heading (4).
6. Press the **ENTER** button.
7. Use the **LEFT** or **RIGHT** arrow button to select **YES**.
8. Drive the machine in a slow, smooth, right-hand circle until the machine is again facing north.
9. Stop the machine when it is facing north and do not move the machine.
10. Press the **ENTER** button.

A heading value will show on the CapView.

Important: If 6502 shows on the CapView, an error has occurred. Do the compass calibration procedure again.

Note: If the calibration fails twice, cycle the power and do the procedure again.

11. Use the **UP** or **DOWN** arrows to select to the **Compass Offset** (5).
12. Press the **ENTER** button.
13. Enter the value into the Compass Offset value.

This calibrates where North is in the plane of the earth.

After a couple of seconds, the Compass Heading should read 0 Degrees when facing north.

This may be off a few degrees. The compass only needs to be within 90 degrees to make backup detection work correctly.

Setting the GPS Settings

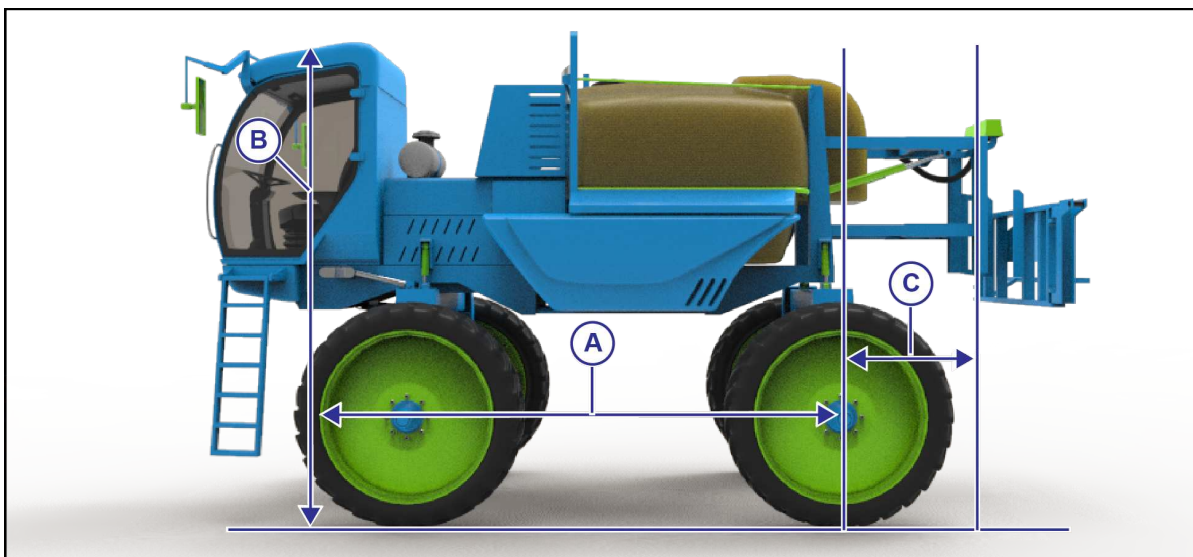


Fig. 33:

Before operation make sure that the GPS setting values are correct.

Measure and record the values for:

- (A)** Antenna Ahead of the Rear Axle—Inches from the rear axle centerline to the GPS antenna centerline
 - A positive number indicates the antenna is ahead of the rear axle.
 - A negative number indicates the antenna is behind the rear axle.
- (B)** Antenna Above Ground—Inches that the GPS antenna is above the ground.
- (C)** Boom Ahead of Rear Axle—Inches from the boom centerline to the rear axle centerline.
 - A positive number indicates the boom is ahead of the rear axle.
 - A negative number indicates the boom is behind the rear axle.
- Not Shown** Antenna Right of Center—Inches that the GPS antenna is off-center
 - A positive number indicates that the antenna is right of center.
 - A negative number indicates that the antenna is left of center.

Note: If the GPS signal is taken from a navigation controller, the virtual position may be electronically repositioned over the rear axle causing the GPS setting values to vary from the measured values on the sprayer. The GPS Boom Ahead of Rear Axle value will always be the actual measured distance from the GPS antenna centerline to the boom centerline at ground level, while A, B, and C can be 0.

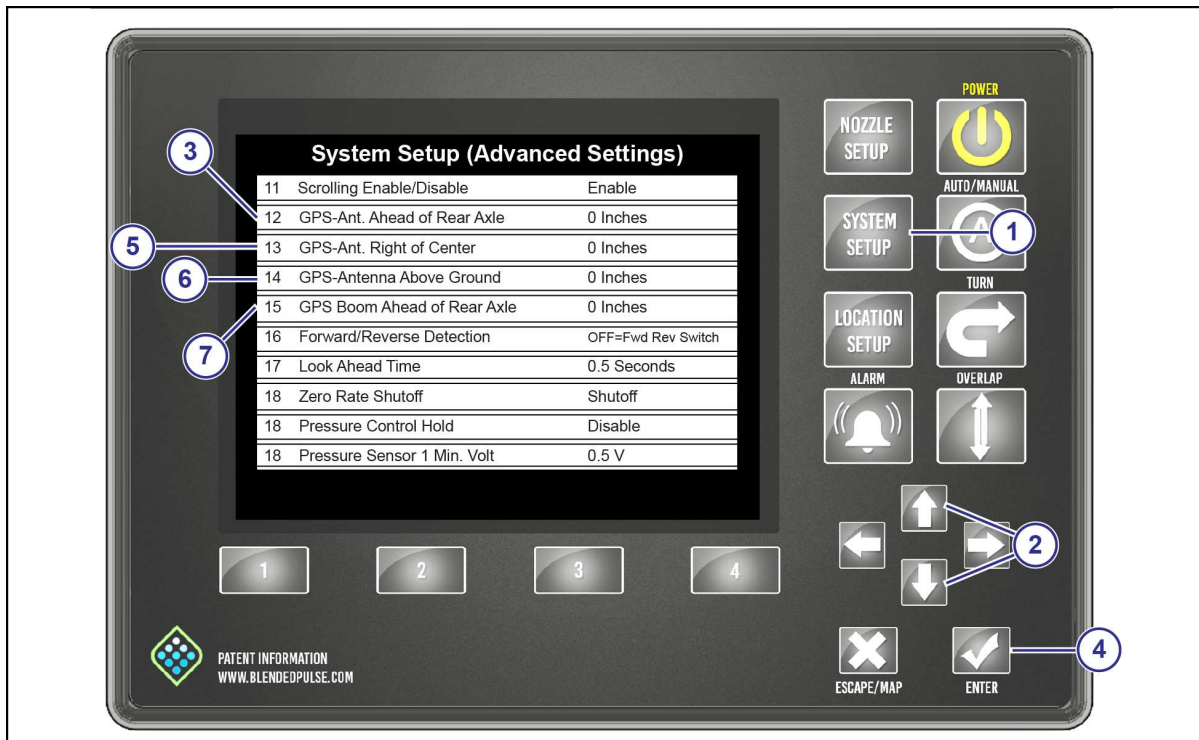


Fig. 34:


1. Press the **SYSTEM SETUP** button (1).
2. Use the **UP** or **DOWN** arrow buttons (2) to select **GPS-Ant. Ahead of Rear Axle** (3).
3. Enter the number of inches from the rear axle centerline to the GPS antenna centerline.


This value is used for GPS overlap control to shut off nozzles in the proper place. The GPS antenna must be located on the vehicle on which the boom is mounted. For pull-behind units, mount the GPS antenna on the trailed unit.

4. Press the **ENTER** button (4).
5. Use the **UP** or **DOWN** arrow buttons to select **GPS-Ant. Right of Center** (5).
6. Enter the number of inches that the GPS antenna is off-center.
7. Press the **ENTER** button.
8. Use the **UP** or **DOWN** arrow buttons to select **GPS Antenna Above Ground** (6).
9. Enter the number of inches that the GPS antenna is above the ground.
10. Press the **ENTER** button.
11. Use the **UP** or **DOWN** arrow buttons to select **GPS Boom Head of Rear Axle** (7).
12. Enter the number of inches from the boom centerline to the rear axle centerline.
13. Press the **ENTER** button.

Machine Specific Information

Location Setup Information
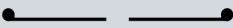
| Machine Type | | | VCM Orientation | |
|-----------------|--------------------------------|-------------|---|-------|
| | | | Left | Right |
| | | |  | |
| Boom Section #1 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #2: | | | |
| Boom Section #2 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #1: | | | |
| Boom Section #3 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #2: | | | |
| Boom Section #4 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #3: | | | |
| Boom Section #5 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #4: | | | |
| Boom Section #6 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #5: | | | |
| Boom Section #7 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #6: | | | |
| Boom Section #8 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #7: | | | |

| Machine Type | | | VCM Orientation | |
|------------------|---------------------------------|-------------|---|-------|
| | | | Left | Right |
| | | |  | |
| Boom Section #8 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #7: | | | |
| | Move these nozzles to Boom #9: | | | |
| Boom Section #9 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #8: | | | |
| | Move these nozzles to Boom #10: | | | |
| Boom Section #10 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #9: | | | |
| | Move these nozzles to Boom #11: | | | |
| Boom Section #11 | Left VCM SN: | Nozzle Qty. | | |
| | Right VCM SN: | Nozzle Qty. | | |
| | Move these nozzles to Boom #10: | | | |
| | Move these nozzles to Boom #12: | | | |

System Setup Information

| Line Number | Line Name | Actual Setting |
|-------------|-------------------------------|----------------|
| 1 | Operation Mode | |
| 2 | Controller Gallon Counter | |
| 3 | Actual Gallon Counter | |
| 4 | Controller Acre Counter | |
| 5 | Actual Acre Counter | |
| 6 | Controller Gallons Per Minute | |
| 7 | Actual Gallons Per Minute | |
| 8 | Nozzle Control (Key FOB) | |
| 9 | Pressure 1 | |
| 10 | System Voltage | |
| 11 | Display Backlight | |
| 12 | LED Brightness | |
| 13 | Beeper Volume | |
| 14 | Specific Gravity | |
| 15 | Valve Diagnostics Enable | |
| 16 | Overlap Distance | |
| 17 | Rate Sync Mode | |
| 18 | Rate Sync Average | |
| 19 | Rate Max Ground Speed | |
| 20 | Units | |
| 21 | Baud Rate | |
| 22 | Revision Information | |
| 23 | Language | |
| 24 | Previous Error Lists | |
| 25 | Advanced Settings | |

Advanced Settings—Synchro™ Setup Information

| Line Number | Line Name | Actual Setting |
|-------------|----------------------------------|----------------|
| 1 | Hour Meter | |
| 2 | Compass Heading | |
| 3 | Compass Offset | |
| 4 | USB Mode | |
| 5 | Deadband Pressure | |
| 6 | Gain - System | |
| 7 | Gain - Proportional | |
| 8 | Gain - Integral | |
| 9 | Gain - Differential | |
| 10 | Total Number Valve Expected | |
| 11 | Scrolling Enable/Disable | |
| 12 | GPS - Antenna Ahead Of Rear Axle | |
| 13 | GPS - Antenna Right Of Center | |
| 14 | GPS - Antenna Above Ground | |
| 15 | GPS - Boom Head Of Rear Axle | |
| 16 | Forward/Reverse Detection | |
| 17 | Look Ahead Time | |
| 18 | Zero Rate Shutoff | |
| 19 | Pressure Control Hold | |
| 20 | Pressure Sensor 1 Min. Volt | |
| 21 | Pressure Sensor 1 Max. Volt | |
| 22 | Pressure Sensor 1 Min. PSI | |
| 23 | Pressure Sensor 1 Max. PSI | |
| 24 | Pressure Sensor 1 Offset | |
| 25 | Servo Type | |
| 26 | Manual Mode Servo Speed | |
| 27 | Servo Minimum DC% | |
| 28 | Servo Maximum DC% | |
| 29 | Pump Speed Limit | |
| 30 | Pump Seal Shutdown | |
| 31 | Nozzle PWM% Cycle Time | |

| Line Number | Line Name | Actual Setting |
|-------------|------------------------|----------------|
| 32 | Nozzle Pulse Frequency | |
| 33 | Nozzle PWM Minimum | |
| 34 | Nozzle PWM Maximum | |
| 35 | Flowmeter Minimum GPM | |
| 36 | Flowmeter Output Type | |
| 37 | Flowmeter Calibration | |
| 38 | Flowmeter Error Limit | |
| 39 | Flowmeter Error | |
| 40 | Minimum Valves On | |
| 41 | Factory Reset | |
| 42 | Contact Information | |

Advanced Settings—SharpShooter™ Setup Information

| Line Number | Line Name | Actual Setting |
|-------------|----------------------------------|----------------|
| 1 | Hour Meter | |
| 2 | Compass Heading | |
| 3 | Compass Offset | |
| 4 | USB Mode | |
| 5 | Deadband Pressure | |
| 6 | Gain - System | |
| 7 | Gain - Proportional | |
| 8 | Gain - Integral | |
| 9 | Gain - Differential | |
| 10 | Total Number Valve Expected | |
| 11 | Scrolling Enable/Disable | |
| 12 | GPS - Antenna Ahead Of Rear Axle | |
| 13 | GPS - Antenna Right Of Center | |
| 14 | GPS - Antenna Above Ground | |
| 15 | GPS - Boom Head Of Rear Axle | |
| 16 | Forward/Reverse Detection | |
| 17 | Look Ahead Time | |
| 18 | Zero Rate Shutoff | |
| 19 | Low Pressure Shutoff | |
| 20 | Low Pressure Turn-ON | |
| 21 | Pressure Control Hold | |
| 22 | Pressure Sensor 1 Min. Volt | |
| 23 | Pressure Sensor 1 Max. Volt | |
| 24 | Pressure Sensor 1 Min. PSI | |
| 25 | Pressure Sensor 1 Max. PSI | |
| 26 | Pressure Sensor 1 Offset | |
| 27 | Nozzle Pulse Frequency | |
| 28 | Nozzle PWM Minimum | |
| 29 | Nozzle PWM Maximum | |
| 30 | Flowmeter Minimum GPM | |
| 31 | Flowmeter Output Type | |

| Line Number | Line Name | Actual Setting |
|-------------|-------------------------|----------------|
| 32 | Flowmeter Calibration | |
| 33 | Flowmeter Error Limit | |
| 34 | Flowmeter Error | |
| 35 | Low Flow Hold Flow Rate | |
| 36 | Rate Sync Test Speed | |
| 37 | Minimum Valves On | |
| 38 | Factory Reset | |
| 39 | Contact Information | |

Chapter 6: Operation

Operate in Automatic Pressure Control (AUTO) Mode

Spraying is usually done in AUTO mode.

The PinPoint™ II system default is manual mode, to change to AUTO mode:

1. Start the machine engine.
2. Press the **POWER** button to start the CapView and the rate controller.
3. Press the **AUTO/MANUAL** button to activate the automatic pressure control.

The LED light within the **AUTO/MANUAL** button indicates that the system is in automatic pressure mode.

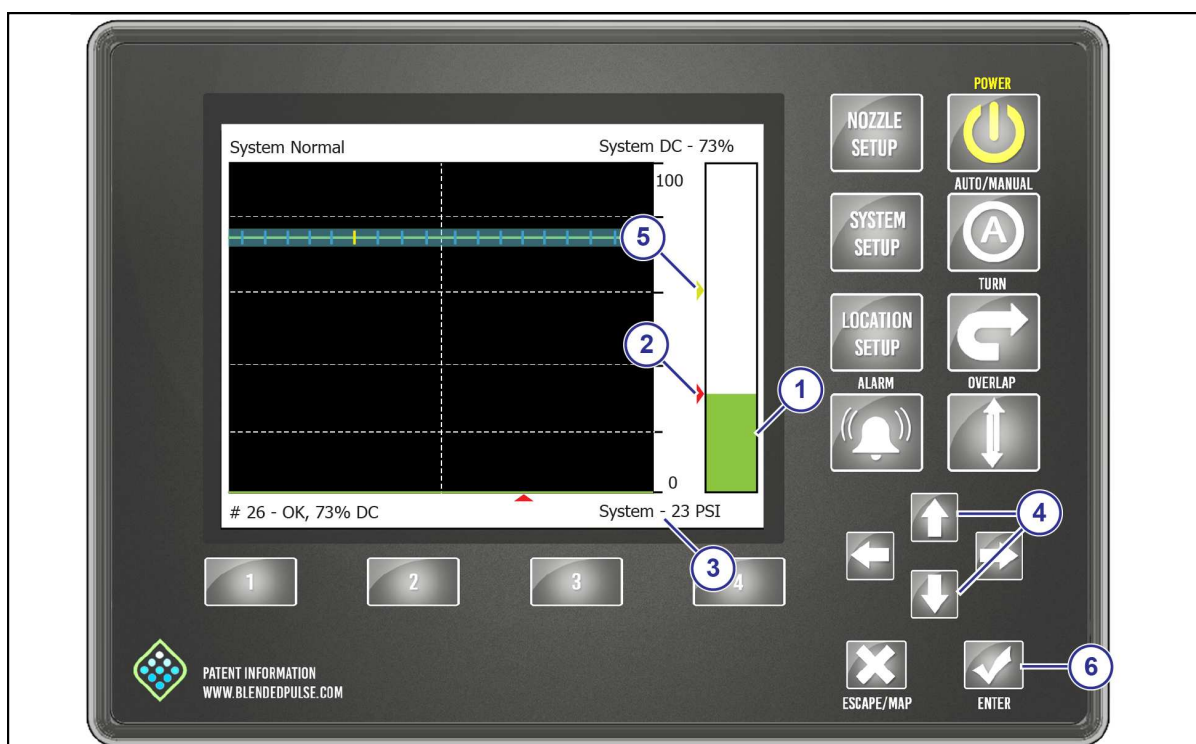


Fig. 35:

The green pressure bar (1) represents the pressure.

The red arrow (2) and the text on the bottom right corner (3) indicates the target pressure.

Use the **UP** or **DOWN** arrow buttons (4) to change the target pressure.

The yellow arrow (5) indicates the alternate target pressure. To change the alternate target pressure, press the **ENTER** button (6).

Manual Mode Operation

Manual mode is usually used for troubleshooting purposes, should the operator encounter rate or pressure instability issues while spraying. Switching to manual mode could allow the operator to finish a field or job before contacting the dealer to solve the problem.

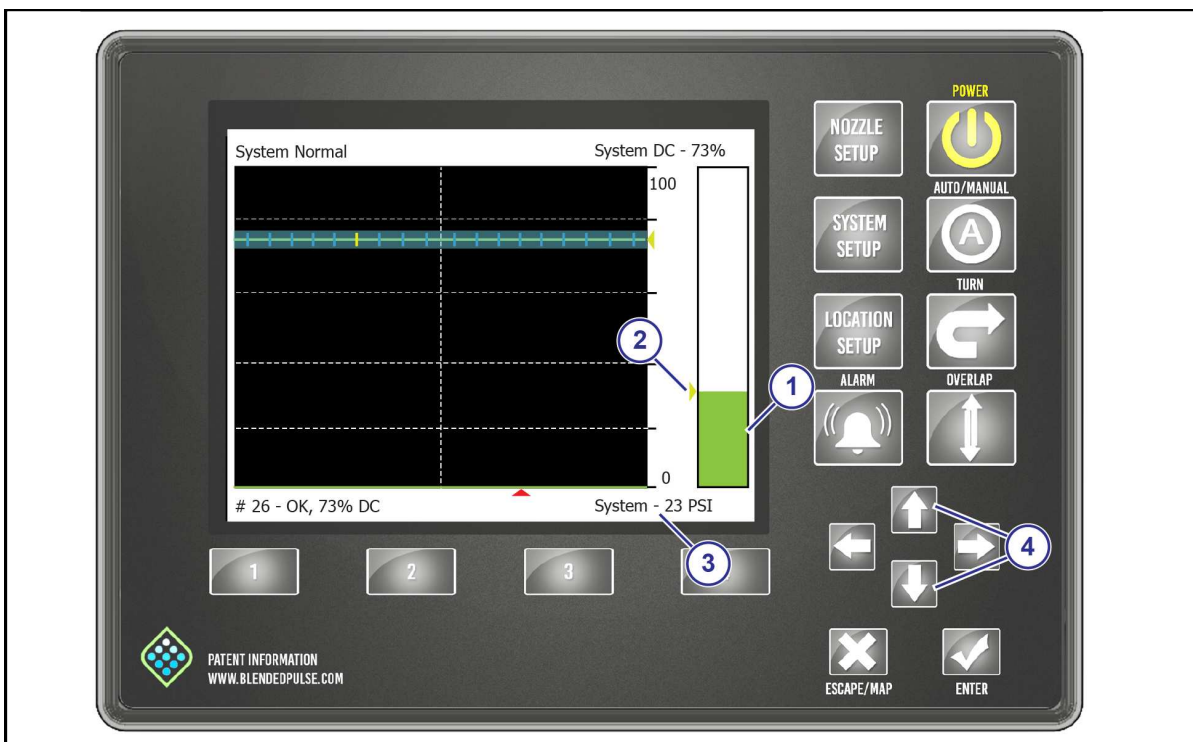


Fig. 36:

In manual mode, the actual pressure is shown in three different ways:

- (1) Green Pressure Bar
- (2) Yellow Error
- (3) Text on the bottom right corner

In Sharpshooter mode, use the **UP** or **DOWN** arrows (4) to control the nozzle duty cycle, regardless of the pressure sensor reading or target pressure set point.

In Synchro™ mode, use the **UP** and **DOWN** arrows control the pump.

Spray Without the PinPoint™ II System

To spray without the PinPoint™ system, use one of these:

- CapstanAG nozzle valves
- Alternate valve bodies

Spray Through the CapstanAG Nozzle Valves

- The display must be off.
- The rate controller will control the rate.
- The nozzle valves will open and close with the boom signal (without pulsing).

Spray Through Alternate Valve Bodies

Note: Use of alternate valve bodies is recommended for high flow applications (30 gal or more per acre), if you do not have CapstanAG high-flow valve assemblies.

If using Wilger nozzle bodies:

- Disconnect the key switched power harness connector from the CapView harness.
- Install a cap onto the connectors.

The CapView must be off.

The rate controller will control the rate.

Manual open the drip checks.

Nozzle Display

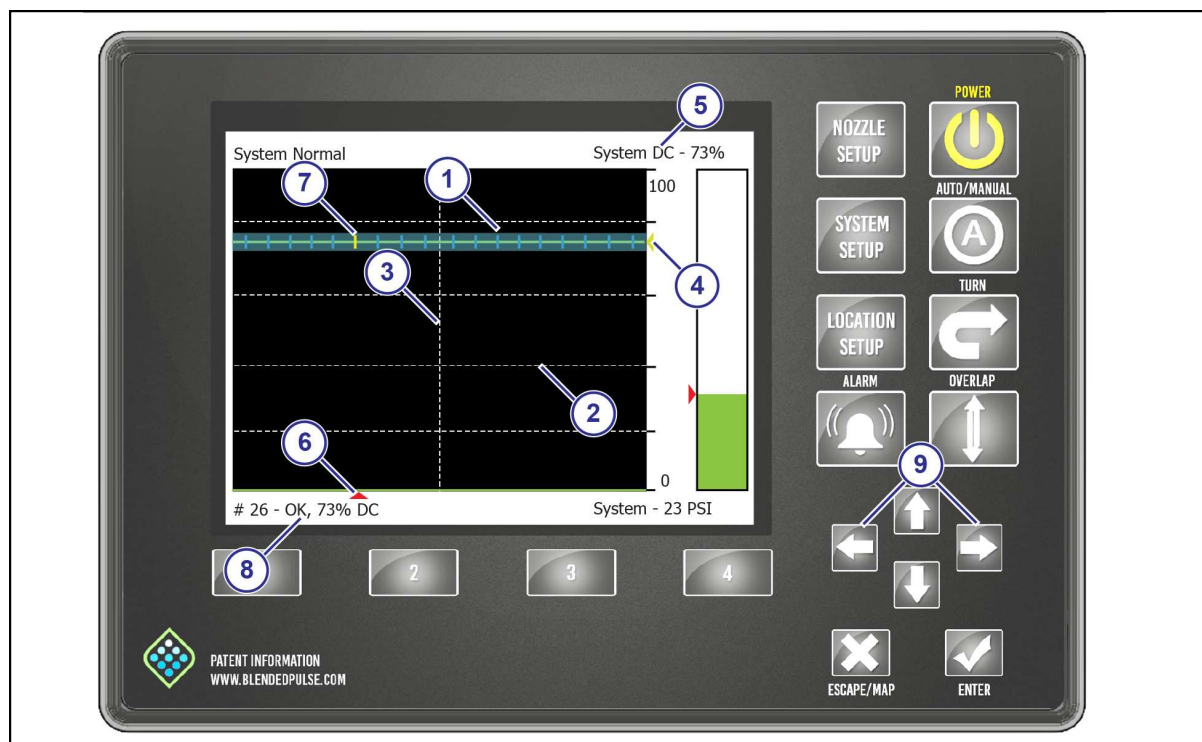


Fig. 37:

Each nozzle on the boom's duty cycle is indicated with a blue tick mark (1) on the scale.

The bottom of the graphic is 0%, and the top is 100%. The grid lines (2) are in 20% increments. A vertical grid line (3) indicates the center of the boom.

The yellow arrow (4) indicates the average duty cycle of all the nozzles. The text block (5) in the upper right corner indicates the average system duty cycle.

The red arrow along (6) the bottom of the duty cycle graphic moves from nozzle to nozzle and left to right two nozzles per second. The corresponding tick mark turns yellow (7) as the red arrow moves along.

The text box (8) at the lower left side shows the nozzle diagnostic information for the nozzle corresponding to the red arrow and yellow tick mark.

If a nozzle error is detected, that nozzle's tick mark will blink yellow, the alarm will sound, and the alarm and nozzle setup-# LED(s) will blink.

The **LEFT** and **RIGHT** arrows (9) will override the scrolling red arrow so that the red arrow may be moved to the detected nozzle. The text block at the lower left side may show one of the following notices:

- Coil Circuit Open
- Coil Circuit Shorted Closed
- Valve Lodged Open
- Valve Lodged Closed

After a few seconds, the red arrow will begin to scroll again.

Overlap Control

Press the **OVERLAP** button to turn the overlap control on or off.

Overlap can be turned off for situations that include:

- Spraying Rinse Water
- Troubleshooting
- No GPS Signal
- Other

Mapping

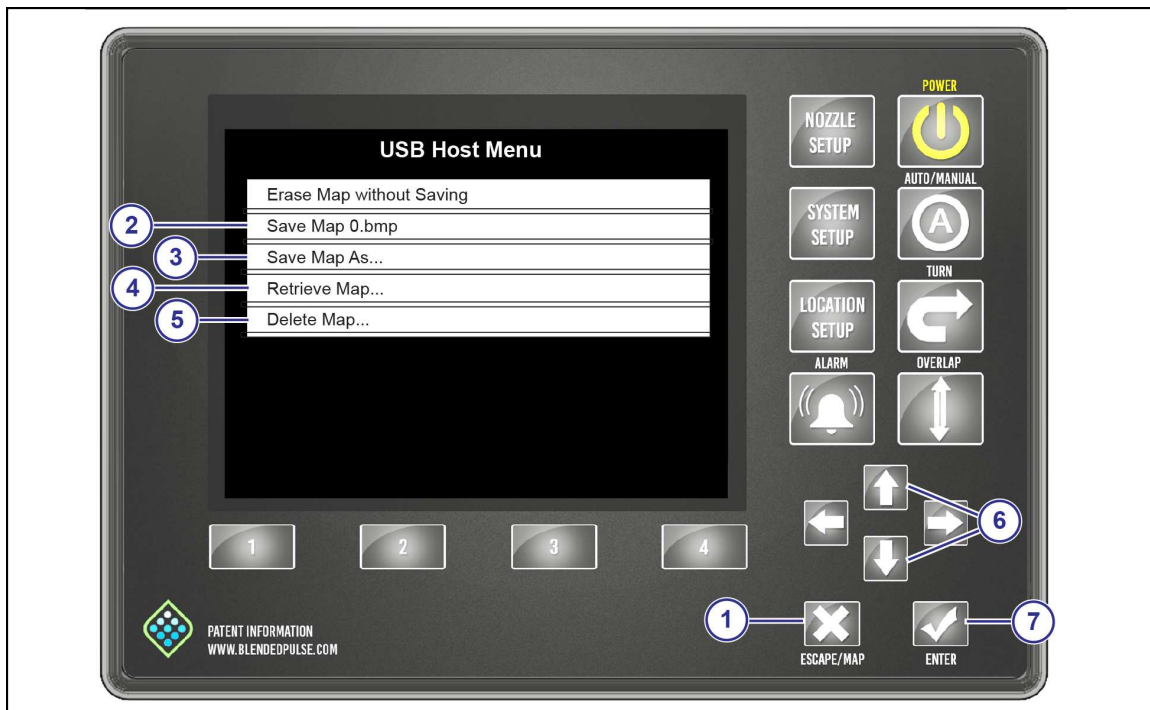


Fig. 38:

Make sure that the **OVERLAP** is off before you enter the **MAP** menu.

Press the **ESCAPE/MAP** button (1) to go to the *Save Map Menu*.

From the *Save Map Menu*, maps can be viewed, saved, deleted, moved, copied, etc.

Maps are stored in bitmap format and can be viewed with MS-Paint or a similar picture viewer program.

Maps can also be made on CapMaps™ Software on your computer and uploaded to the CapView display. For more information see CapMaps™—Boundary Mapping.

A new map is started when the CapView is turned on, and the **OVERLAP** button is selected.

The system establishes a map origin and must stay within a 3-mile radius of the origin point.

If the map range is exceeded, an error message will show (Map out of bounds), and the alarm will sound.

If the **Save Map #.bmp** (2) is selected, the map will be saved, and a new map will start.

Select **Save Map As...** (3) to give the map a specific name.

Select **Retrieve Map...** (4) to load a map that has already been made.

Select **Delete Map...** (5) to delete the current map.

RECOMMENDATION: If you are done spraying the field, select **Delete Map...**

Press the **UP** or **DOWN** arrow buttons (6) to select the desired map setting.

Press the **ENTER** button to save.

To shortcut to the Save Map Menu, press the **ESCAPE** button (7).

Upload a Boundary File to the CapView

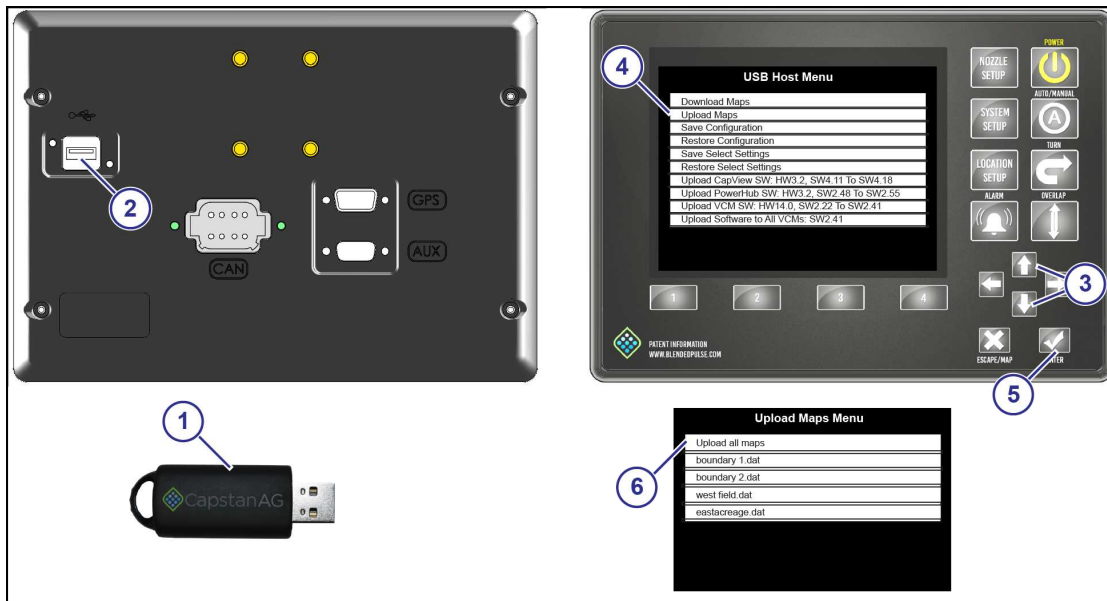


Fig. 39:

1. Insert the thumb drive (1) into the back of the CapView display (2).
The **USB Host Menu** will show on the display screen.
2. Use the up or down arrow button (3) to select **Upload Maps** (4).
3. Press the **ENTER** button (5).
The **Upload Maps Menu** will show.
4. Select the desired map(s) or select **Upload all maps** (6).
5. Press the **ENTER** button.
The upload is complete when the blue scroll bar at the bottom of the screen disappears.
6. Remove the thumb drive from the CapView.

Use a Map on the CapView

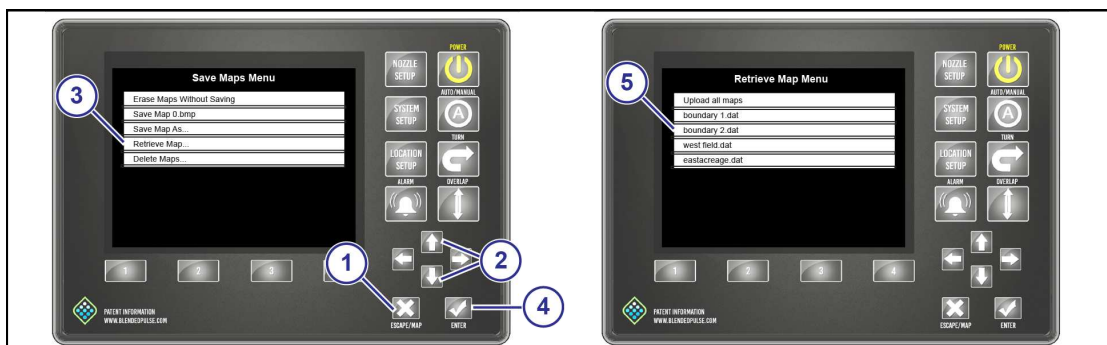


Fig. 40:

1. Press the **ESCAPE/MAP** button (1).
2. Use the up or down arrow button (2) to select **Retrieve Map** (3).

3. Press the **ENTER** button (4).
4. Use the up or down arrow button to select the desired boundary map (5).
5. Press the **ENTER** button.

The upload is complete when the blue scroll bar at the bottom of the screen disappears.

6. Press the **ESCAPE/MAP** button twice to go to the main operating screen.
You are now ready to spray.

Download Maps

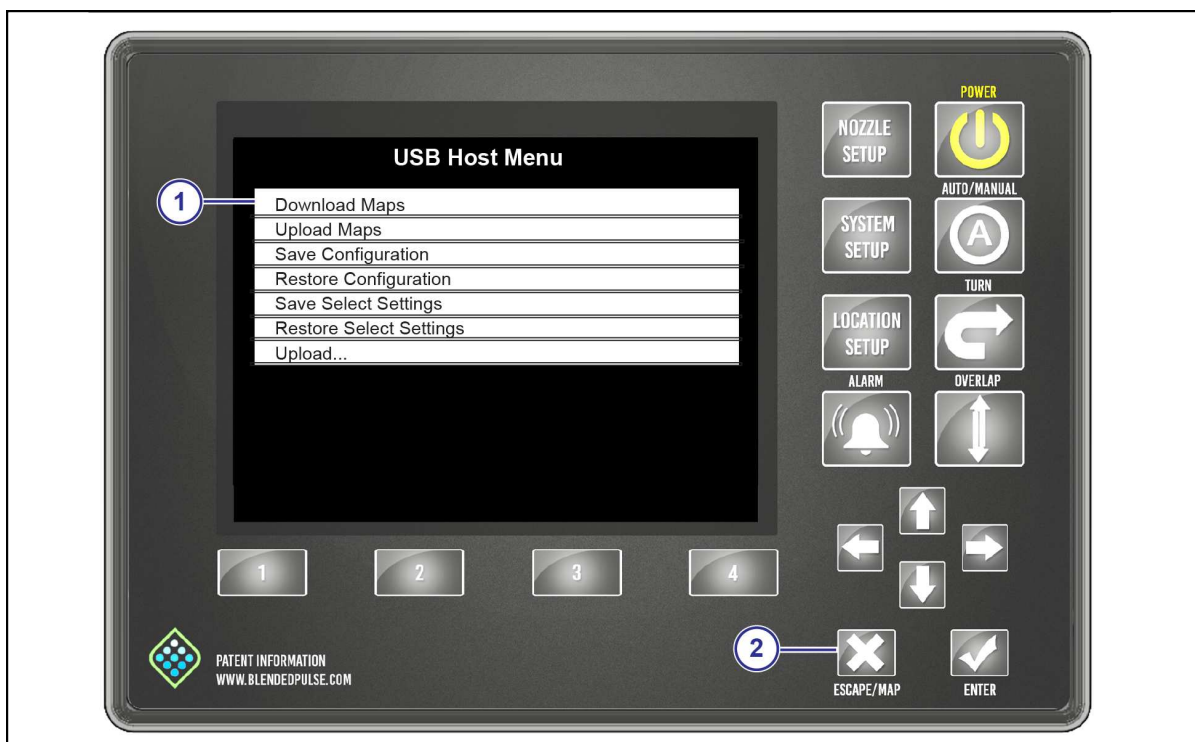


Fig. 41:

1. Insert a USB device into the back of the CapView.

Note: Use a USB device no larger than 64 GB in the CapView.

The **USB Host Menu** will show.

2. Select **Download Maps** (1).
3. Press the **ESCAPE** button (2) to close the **USB Host Menu**.

CapMaps™—Boundary Mapping

Install the CapMaps™ Software

If you have a previous version of the CapMaps™ software on your computer, you must uninstall that version before installing a new version of software.

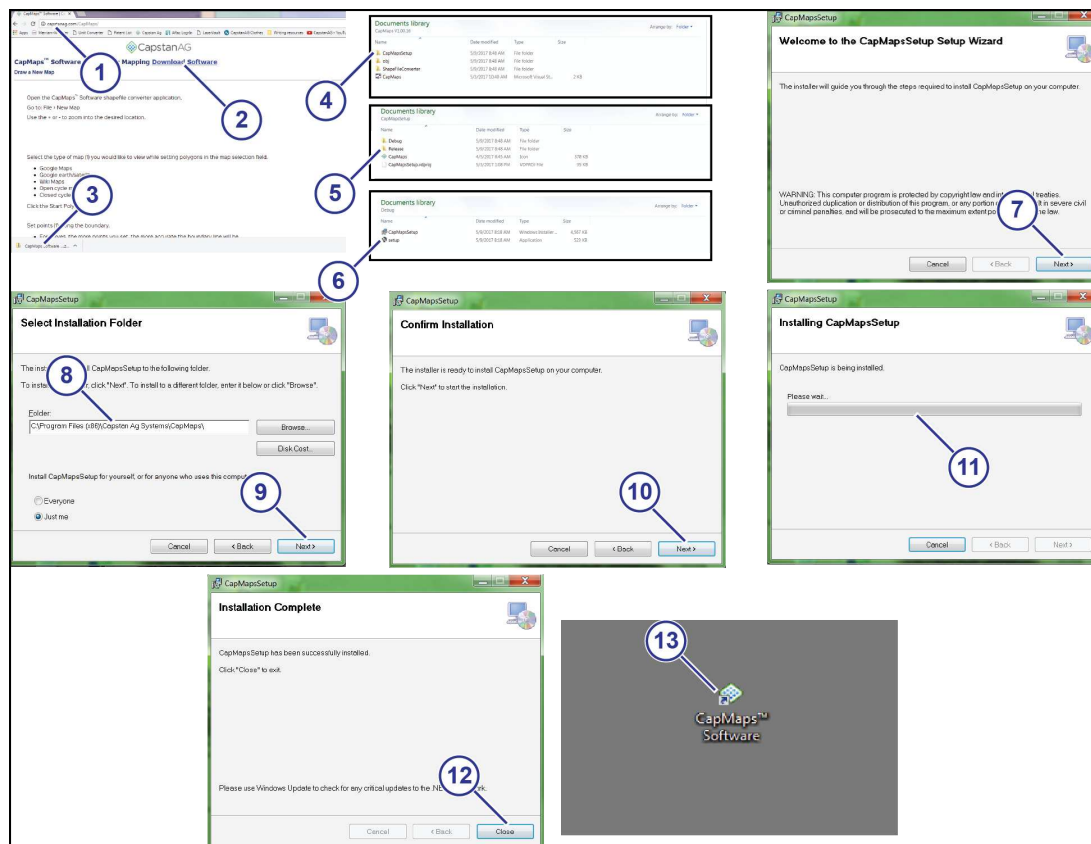


Fig. 42:

1. On your computer, open a web browser and go to capstanag.com/CapMaps (1).
- Important:** Capital letter must be used for CapMaps when typing in the web address.
2. Click on **Download Software** (2).
The software will automatically begin downloading to your computer.
3. When the software download is complete, open the download folder (3) on your computer.
4. Extract all the files from the zipped folder.
5. Open the extracted folder.
6. Double click **CapMapsSetup** folder (4) to open the folder.
7. Double click the **Release** folder (5) to open the folder.
8. Double click the **setup** icon (6).
The setup wizard will start.
9. Click **Next >** (7).
10. Make sure that the program will be installed in the desired location (8).

11. Click **Next** > (9).

12. Click **Next** > (10).

You can watch the progress of the software installation (11).

13. When the installation is complete, click **Close** (12).

A **CapMaps™ Software** icon (13) will show on the computer desktop.

14. Double click the icon to start the program.

Draw a Map

1. Open the CapMaps™ Software shapefile converter application.

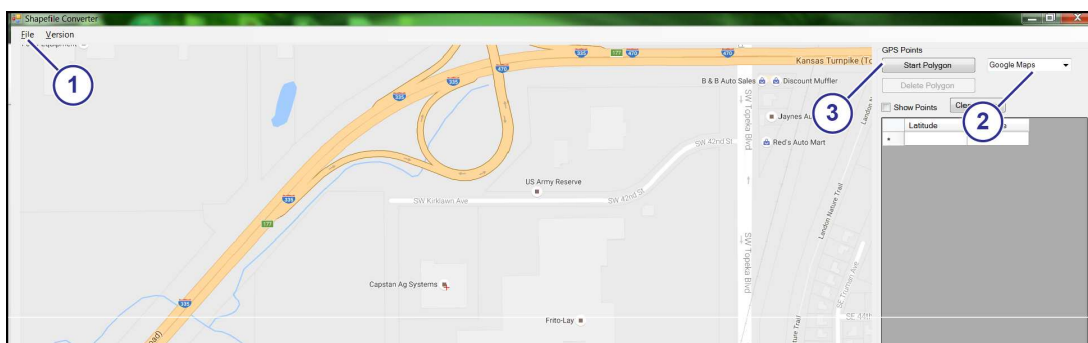


Fig. 43:

2. Go to: **File** > **New Map** (1).

3. Use the + or - to zoom to the desired location.

4. Select the type of map (2) you would like to view while setting polygons in the map selection field:

- Google Maps
- Google Earth/Satellite
- Wiki Maps
- Open cycle maps
- Closed cycle maps

5. Click the **Start Polygon** icon (3).

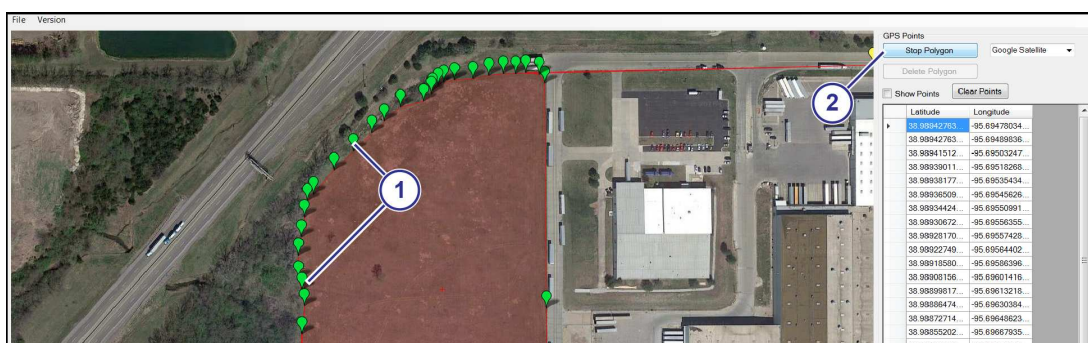


Fig. 44:

6. Set points (1) along the boundary.

For curves, the more points you set, the more accurate the boundary line will be.

You can manually enter latitude and longitude coordinates.

7. When you have set all of the points desired along the boundary, click the **Stop Polygon** icon (2).



Fig. 45:

8. Enter the name (1) of the field in the window that shows on the screen.
9. Click **OK** (2).
10. To add another field to the same map, repeat steps 5, 6, and 7.

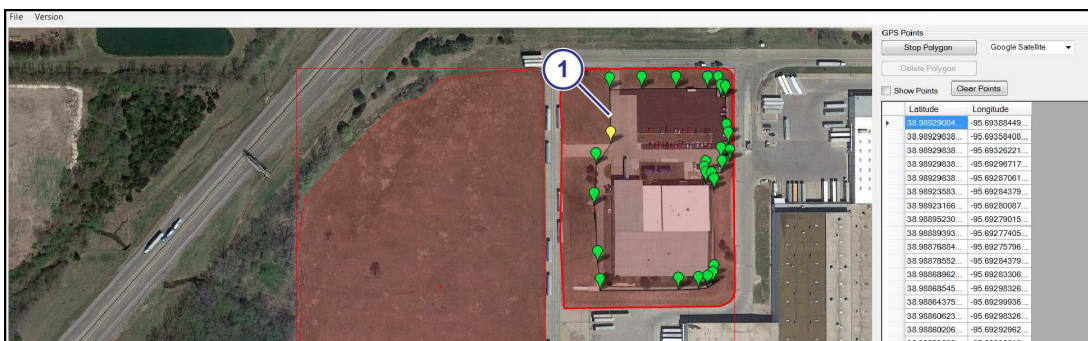


Fig. 46:

11. To add a no spray area within an existing field, repeat steps 5, 6, and 7 with the boundary of an existing field.

The no spray area (1) must be completely within the spray area of the existing field.

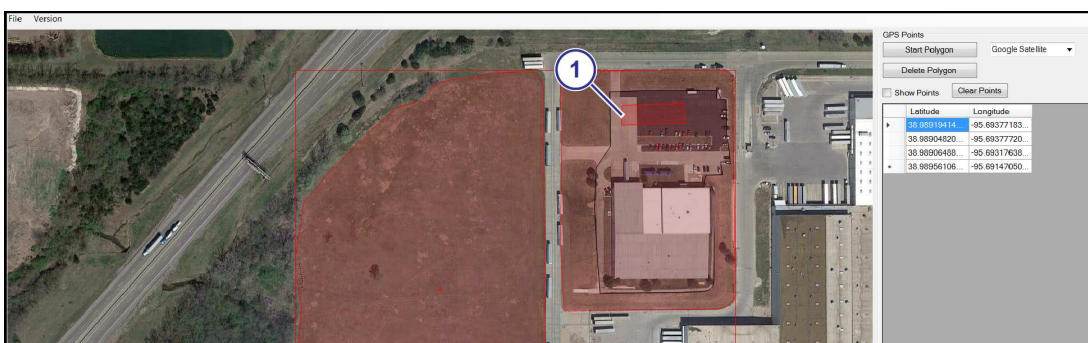


Fig. 47:

12. If points are added within a no spray area, that area (1) will become a spray area.
13. When all of the spray/no spray areas are on the map, select: **File > Save As PinPoint II Map**.

Important: Make sure that you save the map to an external memory device, like a thumb drive.

Convert a Shapefile into a PinPoint™ II Map

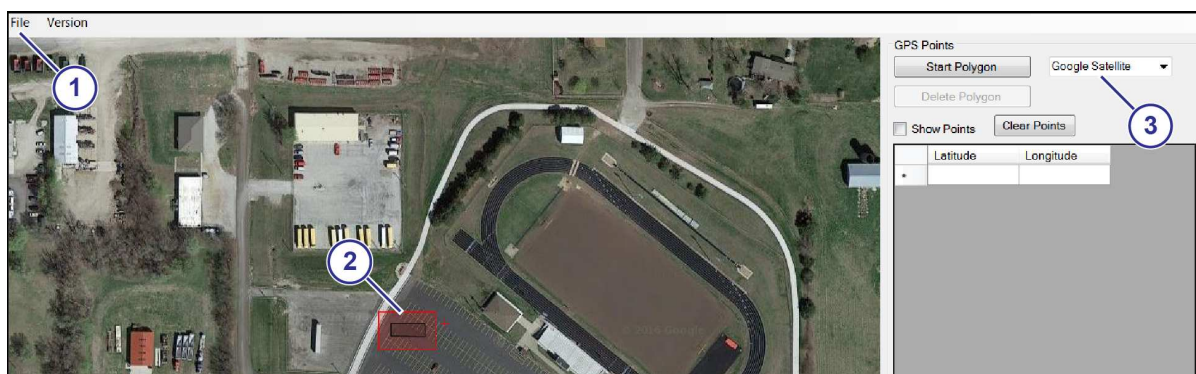


Fig. 48:

1. Open the CapMaps™ Software shapefile converter application.
2. Go to: **File > Open Shapefile (1)**.
3. Select the desired shapefile to open.
The shapefile will show in red (2) on the Google map.
4. If desired, change the type of map (3) that you would like to view.
 - Google Maps
 - Google Earth/Satellite
 - Wiki Maps
 - Open cycle maps
 - Closed cycle maps
5. To save a shapefile as a PinPoint II boundary files, select **File > Save As PinPoint II Map**.

Important: Make sure that you save the map to an external memory device, like a thumb drive.

Convert a Batch of Shapefiles to PinPoint™ II Maps

1. Open the CapMaps™ software shapefile converter application.
2. Go to: **File > Batch PinPoint 1 Map Conversion**.
3. Select the desire shapefiles to convert.
All converted shapefiles will save as PinPoint II Maps to the external memory device with the same name as the original files.
4. To view the converted shapefiles, select: **File > Open Shapefile** and select the desired file.

Uninstall the CapMaps™ Software

If you have a previous version of the CapMaps™ Software on your computer, you must uninstall that version before installing a new version of software.

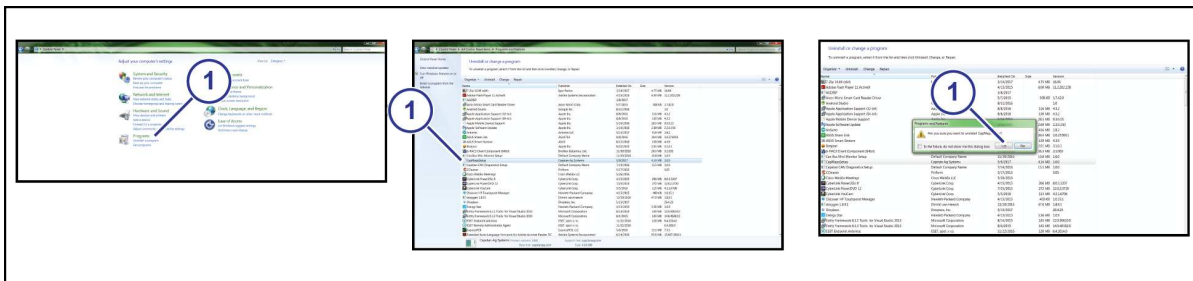


Fig. 49:

1. Open the **Control Panel** on your computer.
2. Click on **Uninstall a Program** (1).
3. Double click **CapMapsSetup** (2) from the list of installed programs.
4. Click **Yes** (3) to confirm the uninstall of the program.
5. When the uninstall is complete, close the list of installed programs.

Overlap Distance

The PinPoint™ system uses 1-meter-squares to record where spraying has occurred. Any nozzle applying product that touches one of these squares will cause the system to consider this as an area that has been applied. As the machine travels along, each nozzle looks to see if the approaching square has been applied or not. If not, applying will continue. If so, the nozzle shuts off.

Note: The overlap distance is set to zero when calibrating the look ahead on times for overlap control.

Change the Overlap Distance



Fig. 50:

Overlap Distance in the *System Setup Menu* can be set to skip or overlap. The value is in inches. Positive numbers cause intentional overlap, and negative numbers cause intentional skips.

1. Press the **SYSTEM SETUP** button (1).
2. Use the **UP** or **DOWN** arrow buttons (2) to move to the **Overlap Distance** (3).
3. Press the **ENTER** button (4).
4. Change the value of the overlap distance.
5. Press the **ENTER** button to save.
6. Press the **ESCAPE** button (5) to leave the *System Setup Menu*.

Flowmeter Signal

Since the rate controller does not know the PinPoint™ II system is shutting off nozzles, the system manipulates the flowmeter signal to cause the rate controller to apply the proper rate. At low flow rates, the system replaces the turbine flowmeter signal with a calculated value that is accurate down to a single nozzle.

The flowmeter minimum GPM is the minimum flow at which the turbine flowmeter is no longer accurate.

In correction mode, the flow reported to the rate controller automatically changes from the turbine flowmeter to calculation whenever the flow falls below the flowmeter minimum GPM value.

The flowmeter output type, set as **Correction**, the system will automatically calculate the flow below the minimum flow value. This is especially important when the system is operating with only a few nozzles, like point rows, filling gaps, etc. The system calculation accurately measures flow through a single nozzle.

Transparent mode does not allow this change, and only uses the turbine value regardless of its accuracy.

Calculate mode uses only the calculation.

Change the Flowmeter Settings—Synchro™ Mode

1. Press the **SYSTEM SETUP** button.
2. Use the **UP** or **DOWN** arrow buttons to move to the **Advanced Settings**.
3. Press the **ENTER** button.
4. Use the **UP** or **DOWN** arrow buttons to move to the **Flowmeter Minimum**.
5. Press the **ENTER** button.
6. Change the value.
7. Press the **ENTER** button.
8. Use the **UP** or **DOWN** arrow buttons to move to the **Flowmeter Output Type**.
9. Press the **ENTER** button.
10. Change the output type.
11. Press the **ENTER** button.

Change the Flowmeter Settings—SharpShooter Mode™

1. Press the **SYSTEM SETUP** button.
2. Use the **UP** or **DOWN** arrow buttons to move to the **Advanced Settings**.
3. Press the **ENTER** button.
4. Use the **UP** or **DOWN** arrow buttons to move to the **Flowmeter Minimum**.

5. Press the **ENTER** button.
6. Change the value.
7. Press the **ENTER** button.
8. Use the **UP** or **DOWN** arrow buttons to move to the **Flowmeter Output Type**.
9. Press the **ENTER** button.
10. Change the output type.
11. Press the **ENTER** button.

Turn Compensation

With a standard spray boom, the flow rate is averaged over the entire boom, and the flow rate is based on the speed of the sprayer chassis. This results in over application on the inner radius of the turn and under application on the outer radius of the turn because the nozzles are traveling at different speeds than the chassis is during a turn. A tighter turn radius results in a higher level of misapplication.

With the turn compensation feature engaged, each nozzle will apply the correct amount of product based on each nozzle's speed, calculated using GPS.

The amount of correction available to each nozzle during a turn compensation turn can be limited by the amount of available duty cycle during the turn. The ideal target duty cycle during a tight turn is 55%.

Nozzles determined to be moving backward will turn off. If only part of the boom is spraying, the flowmeter signal is managed, so the correct rate is applied.

Turn compensation calculates a turn radius from a GPS signal and adjusts the flow per nozzle to maintain a constant rate. Turn compensation can be turned off for situations that include troubleshooting and no GPS.

Press the **TURN** button on the CapView display to turn on and off the turn compensation feature.

If you need more information about turn compensation, contact your CapstanAG Field Representative or your servicing dealer.

Counters



Fig. 51:

The counters (1) are shown on the *System Setup* screen.

Gallon Counters

The PinPoint™ system manages the flow meter signal to keep the rate controller accurate when the nozzles are turned off.

It is important to show the amount of manipulating that has occurred.

The **Controller Gallon Counter** on the CapView should match the values from the rate controller.

The **Actual Gallon Counter** values on the CapView should match the tank volume.

The difference between the controller counters and the actual counters is the amount of product saved by using the PinPoint™ II system.

Acre Counters

The **Controller Acre Counter** on the CapView should match the values from the rate controller.

The **Actual Acre Counter** counts the acres applied per nozzle. The controller acre counter minus the actual acre counter is the additional acres an operator can apply per tank load from the individual nozzle control.

Reset the Counters

1. Press the **SYSTEM SETUP** button.
2. Use the **UP** or **DOWN** arrow buttons to select the desired counter.
3. Press the **ENTER** button.
4. A menu will show, confirm your intention.

Alarm

If the alarm on the CapView sounds, press the **ALARM** button to silence the alarm. The LED(s) will continue to blink. If the issue is not resolved after several minutes, the alarm will sound again.

Important: It is the responsibility of the operator to stop using the system if the system is not applying product or operating correctly.

Nozzle Speed Ranges

Metric Nozzle Speed Ranges

Nozzle Spacing - 38 cm

Speed Range (KPH) - 38 cm Nozzle Spacing

| Tip Size | Gauge (kPa) | 30 l/ha | | | | 50 l/ha | | | | 60 l/ha | | | | 70 l/ha | | | | 80 l/ha | | | | 100 l/ha | | | | 120 l/ha | | | |
|---------------|-------------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|
| | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | |
| | | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% |
| 0.1 GPM #1 | 138 | 4 | 7 | 11 | 14 | 2 | 4 | 6 | 8 | 2 | 4 | 5 | 7 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 3 | 4 |
| | 207 | 4 | 9 | 13 | 17 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 9 | 2 | 4 | 6 | 7 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 |
| | 276 | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 9 | 2 | 4 | 6 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 4 | 5 |
| | 345 | 6 | 11 | 17 | 22 | 3 | 7 | 10 | 13 | 3 | 6 | 8 | 11 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 6 |
| | 414 | 6 | 12 | 18 | 24 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 | 3 | 5 | 8 | 10 | 2 | 5 | 7 | 9 | 2 | 4 | 5 | 7 | 2 | 3 | 5 | 6 |
| 0.15 GPM #1.5 | 483 | 7 | 13 | 20 | 26 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 13 | 3 | 6 | 8 | 11 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 |
| | 138 | 5 | 11 | 16 | 21 | 3 | 6 | 9 | 13 | 3 | 5 | 8 | 11 | 2 | 5 | 7 | 9 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 |
| | 207 | 6 | 13 | 19 | 26 | 4 | 8 | 12 | 15 | 3 | 6 | 10 | 13 | 3 | 6 | 8 | 11 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 |
| | 276 | 7 | 15 | 22 | 30 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 15 | 3 | 6 | 10 | 13 | 3 | 6 | 8 | 11 | 2 | 4 | 7 | 9 | 2 | 4 | 6 | 7 |
| | 345 | 8 | 17 | 25 | 33 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 17 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 |
| 0.2 GPM #2 | 414 | 9 | 18 | 27 | 36 | 5 | 11 | 16 | 22 | 5 | 9 | 14 | 18 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 14 | 3 | 5 | 8 | 11 | 2 | 5 | 7 | 9 |
| | 483 | 10 | 20 | 30 | 39 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 | 4 | 8 | 13 | 17 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 |
| | 138 | 7 | 14 | 21 | 28 | 4 | 8 | 13 | 17 | 3 | 7 | 10 | 14 | 3 | 6 | 9 | 12 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 |
| | 207 | 9 | 17 | 26 | 34 | 5 | 10 | 15 | 21 | 4 | 9 | 13 | 17 | 4 | 7 | 11 | 15 | 3 | 6 | 10 | 13 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 9 |
| | 276 | 10 | 20 | 30 | 40 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 | 4 | 8 | 13 | 17 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 |
| 0.25 GPM #2.5 | 345 | 11 | 22 | 33 | 44 | 7 | 13 | 20 | 27 | 6 | 11 | 17 | 22 | 5 | 9 | 14 | 19 | 4 | 8 | 12 | 17 | 3 | 7 | 10 | 13 | 3 | 6 | 8 | 11 |
| | 414 | 12 | 24 | 36 | 48 | 7 | 15 | 22 | 29 | 6 | 12 | 18 | 24 | 5 | 10 | 16 | 21 | 5 | 9 | 14 | 18 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 |
| | 483 | | | | | 8 | 16 | 24 | 31 | 7 | 13 | 20 | 26 | 6 | 11 | 17 | 22 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 13 |
| | 138 | 9 | 17 | 26 | 35 | 5 | 10 | 16 | 21 | 4 | 9 | 13 | 17 | 4 | 7 | 11 | 15 | 3 | 7 | 10 | 13 | 3 | 5 | 8 | 10 | 2 | 4 | 7 | 9 |
| | 207 | 11 | 21 | 32 | 43 | 6 | 13 | 19 | 26 | 5 | 11 | 16 | 21 | 5 | 9 | 14 | 18 | 4 | 8 | 12 | 16 | 3 | 6 | 10 | 13 | 3 | 5 | 8 | 11 |
| 0.3 GPM #3 | 276 | | | | | 7 | 15 | 22 | 30 | 6 | 12 | 18 | 25 | 5 | 11 | 16 | 21 | 5 | 9 | 14 | 18 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 |
| | 345 | | | | | 8 | 16 | 25 | 33 | 7 | 14 | 21 | 27 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 21 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 14 |
| | 414 | | | | | 9 | 18 | 27 | 36 | 8 | 15 | 23 | 30 | 6 | 13 | 19 | 26 | 6 | 11 | 17 | 23 | 5 | 9 | 14 | 18 | 4 | 8 | 11 | 15 |
| | 483 | | | | | 10 | 20 | 29 | 39 | 8 | 16 | 24 | 33 | 7 | 14 | 21 | 28 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 |
| | 138 | 10 | 21 | 31 | 41 | 6 | 12 | 19 | 25 | 5 | 10 | 16 | 21 | 4 | 9 | 13 | 18 | 4 | 8 | 12 | 16 | 3 | 6 | 9 | 12 | 3 | 5 | 8 | 10 |
| 0.4 GPM #4 | 207 | | | | | 8 | 15 | 23 | 30 | 6 | 13 | 19 | 25 | 5 | 11 | 16 | 22 | 5 | 10 | 14 | 19 | 4 | 8 | 11 | 15 | 3 | 6 | 10 | 13 |
| | 276 | | | | | 9 | 18 | 26 | 35 | 7 | 15 | 22 | 29 | 6 | 13 | 19 | 25 | 6 | 11 | 17 | 22 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 15 |
| | 345 | | | | | 10 | 20 | 30 | 39 | 8 | 16 | 25 | 33 | 7 | 14 | 21 | 28 | 6 | 12 | 18 | 25 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 |
| | 414 | | | | | 11 | 22 | 32 | 43 | 9 | 18 | 27 | 36 | 8 | 15 | 23 | 31 | 7 | 13 | 20 | 27 | 5 | 11 | 16 | 22 | 4 | 9 | 13 | 18 |
| | 483 | | | | | 12 | 23 | 35 | 47 | 10 | 19 | 29 | 39 | 8 | 17 | 25 | 33 | 7 | 15 | 22 | 29 | 6 | 12 | 17 | 23 | 5 | 10 | 15 | 19 |
| 0.5 GPM #5 | 138 | | | | | 8 | 16 | 25 | 33 | 7 | 14 | 20 | 27 | 6 | 12 | 18 | 23 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 14 |
| | 207 | | | | | 10 | 20 | 30 | 40 | 8 | 17 | 25 | 33 | 7 | 14 | 21 | 29 | 6 | 13 | 19 | 25 | 5 | 10 | 15 | 20 | 4 | 8 | 13 | 17 |
| | 276 | | | | | 12 | 23 | 35 | 46 | 10 | 19 | 29 | 39 | 8 | 17 | 25 | 33 | 7 | 14 | 22 | 29 | 6 | 12 | 17 | 23 | 5 | 10 | 14 | 19 |
| | 345 | | | | | | | | | 11 | 22 | 32 | 43 | 9 | 18 | 28 | 37 | 8 | 16 | 24 | 32 | 6 | 13 | 19 | 26 | 5 | 11 | 16 | 22 |
| | 414 | | | | | | | | | 12 | 24 | 35 | 47 | 10 | 20 | 30 | 41 | 9 | 18 | 27 | 35 | 7 | 14 | 21 | 28 | 6 | 12 | 18 | 24 |
| 0.5 GPM #5 | 483 | | | | | | | | | | | | | 11 | 22 | 33 | 44 | 10 | 19 | 29 | 38 | 8 | 15 | 23 | 31 | 6 | 13 | 19 | 26 |
| | 138 | | | | | 10 | 20 | 30 | 40 | 8 | 17 | 25 | 34 | 7 | 14 | 22 | 29 | 6 | 13 | 19 | 25 | 5 | 10 | 15 | 20 | 4 | 8 | 13 | 17 |
| | 207 | | | | | | | | | 10 | 21 | 31 | 41 | 9 | 18 | 26 | 35 | 8 | 15 | 23 | 31 | 6 | 12 | 18 | 25 | 5 | 10 | 15 | 21 |
| | 276 | | | | | | | | | 12 | 24 | 36 | 47 | 10 | 20 | 30 | 41 | 9 | 18 | 27 | 36 | 7 | 14 | 21 | 28 | 6 | 12 | 18 | 24 |
| | 345 | | | | | | | | | | | | | 11 | 23 | 34 | 45 | 10 | 20 | 30 | 40 | 8 | 16 | 24 | 32 | 7 | 13 | 20 | 26 |
| 0.5 GPM #5 | 414 | | | | | | | | | | | | | | | | | 11 | 22 | 33 | 44 | 9 | 17 | 26 | 35 | 7 | 15 | 22 | 29 |
| | 483 | | | | | | | | | | | | | | | | | 12 | 24 | 35 | 47 | 9 | 19 | 28 | 38 | 8 | 16 | 24 | 31 |

Speed Range (KPH) - 38 cm Nozzle Spacing

| Tip Size | Gauge (kPa) | 30 l/ha | | | | 50 l/ha | | | | 60 l/ha | | | | 70 l/ha | | | | 80 l/ha | | | | 100 l/ha | | | | 120 l/ha | | | |
|----------------|-------------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|
| | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | |
| | | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% |
| 0.6 GPM #6 | 138 | | | | | | | | | 10 | 20 | 30 | 39 | 8 | 17 | 25 | 34 | 7 | 15 | 22 | 30 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 |
| | 207 | | | | | | | | | | | | | 10 | 21 | 31 | 41 | 9 | 18 | 27 | 36 | 7 | 14 | 22 | 29 | 6 | 12 | 18 | 24 |
| | 276 | | | | | | | | | 12 | 24 | 36 | 48 | 12 | 24 | 36 | 48 | 10 | 21 | 31 | 42 | 8 | 17 | 25 | 33 | 7 | 14 | 21 | 28 |
| | 345 | | | | | | | | | | | | | | | | | 12 | 23 | 35 | 47 | 9 | 19 | 28 | 37 | 8 | 16 | 23 | 31 |
| | 414 | | | | | | | | | | | | | | | | | | | | | 10 | 20 | 31 | 41 | 9 | 17 | 26 | 34 |
| | 483 | | | | | | | | | | | | | | | | | | | | | 11 | 22 | 33 | 44 | 9 | 18 | 28 | 37 |
| 0.8 GPM #8 | 138 | | | | | | | | | | | | | 11 | 21 | 32 | 43 | 9 | 19 | 28 | 38 | 8 | 15 | 23 | 30 | 6 | 13 | 19 | 25 |
| | 207 | | | | | | | | | | | | | | | | | 11 | 23 | 34 | 46 | 9 | 18 | 28 | 37 | 8 | 15 | 23 | 31 |
| | 276 | | | | | | | | | | | | | | | | | | | | | 11 | 21 | 32 | 42 | 9 | 18 | 27 | 35 |
| | 345 | | | | | | | | | | | | | | | | | | | | | 12 | 24 | 36 | 48 | 10 | 20 | 30 | 40 |
| | 414 | | | | | | | | | | | | | | | | | | | | | | | | | 11 | 22 | 33 | 43 |
| | 483 | | | | | | | | | | | | | | | | | | | | | | | | | 12 | 23 | 35 | 47 |
| 1.0 GPM #10 | 138 | | | | | | | | | | | | | | | | | 11 | 22 | 33 | 44 | 9 | 18 | 27 | 36 | 7 | 15 | 22 | 30 |
| | 207 | | | | | | | | | | | | | | | | | | | | | 11 | 22 | 33 | 43 | 9 | 18 | 27 | 36 |
| | 276 | | | | | | | | | | | | | | | | | | | | | | | | | 10 | 21 | 31 | 42 |
| | 345 | | | | | | | | | | | | | | | | | | | | | | | | | 12 | 23 | 35 | 47 |
| | 414 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 483 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1.2 GPM #12 | 138 | | | | | | | | | | | | | | | | | | | | | 10 | 20 | 30 | 40 | 8 | 17 | 25 | 33 |
| | 207 | | | | | | | | | | | | | | | | | | | | | | | | | 10 | 20 | 31 | 41 |
| | 276 | | | | | | | | | | | | | | | | | | | | | | | | | 12 | 24 | 35 | 47 |
| | 345 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 414 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 483 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1.25 GPM #12.5 | 138 | | | | | | | | | | | | | | | | | | | | | | | | | 10 | 21 | 31 | 42 |
| | 207 | | | | | | | | | | | | | | | | | | | | | | | | | 12 | 24 | 36 | 48 |
| | 276 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 345 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 414 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 483 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1.5 GPM #15 | 138 | | | | | | | | | | | | | | | | | | | | | | | | | 12 | 23 | 35 | 46 |
| | 207 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 276 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 345 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 414 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 483 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Nozzle Spacing - 50 cm

Speed Range (KPH) - 50 cm Nozzle Spacing

| Tip Size | Gauge (kPa) | 30 l/ha | | | | 50 l/ha | | | | 60 l/ha | | | | 70 l/ha | | | | 80 l/ha | | | | 100 l/ha | | | | 120 l/ha | | | |
|---------------|-------------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|
| | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | |
| | | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% |
| 0.1 GPM #1 | 138 | 3 | 5 | 8 | 11 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 | 1 | 1 | 2 | 3 |
| | 207 | 3 | 7 | 10 | 13 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 |
| | 276 | 4 | 8 | 11 | 15 | 2 | 5 | 7 | 9 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 5 | 1 | 2 | 3 | 4 |
| | 345 | 4 | 8 | 13 | 17 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 | 2 | 4 | 5 | 7 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 |
| | 414 | 5 | 9 | 14 | 19 | 3 | 6 | 8 | 11 | 2 | 5 | 7 | 9 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 5 |
| 0.15 GPM #1.5 | 483 | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 9 | 2 | 4 | 6 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 4 | 5 |
| | 138 | 4 | 8 | 12 | 16 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 |
| | 207 | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 4 | 6 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 4 | 5 |
| | 276 | 6 | 11 | 17 | 23 | 3 | 7 | 10 | 14 | 3 | 6 | 8 | 11 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 6 |
| | 345 | 6 | 13 | 19 | 25 | 4 | 8 | 11 | 15 | 3 | 6 | 9 | 13 | 3 | 5 | 8 | 11 | 2 | 5 | 7 | 9 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 |
| 0.2 GPM #2 | 414 | 7 | 14 | 21 | 28 | 4 | 8 | 12 | 17 | 3 | 7 | 10 | 14 | 3 | 6 | 9 | 12 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 |
| | 483 | 7 | 15 | 22 | 30 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 15 | 3 | 6 | 10 | 13 | 3 | 6 | 8 | 11 | 2 | 4 | 7 | 9 | 2 | 4 | 6 | 7 |
| | 138 | 5 | 11 | 16 | 21 | 3 | 6 | 10 | 13 | 3 | 5 | 8 | 11 | 2 | 5 | 7 | 9 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 |
| | 207 | 7 | 13 | 20 | 26 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 13 | 3 | 6 | 8 | 11 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 |
| | 276 | 8 | 15 | 23 | 30 | 5 | 9 | 14 | 18 | 4 | 8 | 11 | 15 | 3 | 6 | 10 | 13 | 3 | 6 | 8 | 11 | 2 | 5 | 7 | 9 | 2 | 4 | 6 | 8 |
| 0.25 GPM #2.5 | 345 | 8 | 17 | 25 | 34 | 5 | 10 | 15 | 20 | 4 | 8 | 13 | 17 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 13 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 |
| | 414 | 9 | 18 | 28 | 37 | 6 | 11 | 17 | 22 | 5 | 9 | 14 | 18 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 14 | 3 | 6 | 8 | 11 | 2 | 5 | 7 | 9 |
| | 483 | 10 | 20 | 30 | 40 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 | 4 | 9 | 13 | 17 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 |
| | 138 | 7 | 13 | 20 | 26 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 13 | 3 | 6 | 8 | 11 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 |
| | 207 | 8 | 16 | 24 | 32 | 5 | 10 | 15 | 19 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 14 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 |
| 0.3 GPM #3 | 276 | 9 | 19 | 28 | 37 | 6 | 11 | 17 | 22 | 5 | 9 | 14 | 19 | 4 | 8 | 12 | 16 | 4 | 7 | 11 | 14 | 3 | 6 | 8 | 11 | 2 | 5 | 7 | 9 |
| | 345 | 10 | 21 | 31 | 42 | 6 | 13 | 19 | 25 | 5 | 10 | 16 | 21 | 4 | 9 | 13 | 18 | 4 | 8 | 12 | 16 | 3 | 6 | 9 | 13 | 3 | 5 | 8 | 10 |
| | 414 | 11 | 23 | 34 | 46 | 7 | 14 | 21 | 27 | 6 | 11 | 17 | 23 | 5 | 10 | 15 | 20 | 4 | 9 | 13 | 17 | 3 | 7 | 10 | 14 | 3 | 6 | 9 | 11 |
| | 483 | | | | | 7 | 15 | 22 | 30 | 6 | 12 | 19 | 25 | 5 | 11 | 16 | 21 | 5 | 9 | 14 | 19 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 |
| | 138 | 8 | 16 | 24 | 32 | 5 | 9 | 14 | 19 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 14 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 9 | 2 | 4 | 6 | 8 |
| 0.4 GPM #4 | 207 | 10 | 19 | 29 | 39 | 6 | 12 | 17 | 23 | 5 | 10 | 14 | 19 | 4 | 8 | 12 | 17 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 |
| | 276 | 11 | 22 | 33 | 45 | 7 | 13 | 20 | 27 | 6 | 11 | 17 | 22 | 5 | 10 | 14 | 19 | 4 | 8 | 13 | 17 | 3 | 7 | 10 | 13 | 3 | 6 | 8 | 11 |
| | 345 | | | | | 7 | 15 | 22 | 30 | 6 | 12 | 19 | 25 | 5 | 11 | 16 | 21 | 5 | 9 | 14 | 19 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 |
| | 414 | | | | | 8 | 16 | 25 | 33 | 7 | 14 | 20 | 27 | 6 | 12 | 18 | 23 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 14 |
| | 483 | | | | | 9 | 18 | 27 | 35 | 7 | 15 | 22 | 29 | 6 | 13 | 19 | 25 | 6 | 11 | 17 | 22 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 15 |
| 0.5 GPM #5 | 138 | 10 | 21 | 31 | 41 | 6 | 12 | 19 | 25 | 5 | 10 | 16 | 21 | 4 | 9 | 13 | 18 | 4 | 8 | 12 | 16 | 3 | 6 | 9 | 12 | 3 | 5 | 8 | 10 |
| | 207 | | | | | 8 | 15 | 23 | 30 | 6 | 13 | 19 | 25 | 5 | 11 | 16 | 22 | 5 | 10 | 14 | 19 | 4 | 8 | 11 | 15 | 3 | 6 | 10 | 13 |
| | 276 | | | | | 9 | 18 | 26 | 35 | 7 | 15 | 22 | 29 | 6 | 13 | 19 | 25 | 5 | 11 | 16 | 22 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 15 |
| | 345 | | | | | 10 | 20 | 30 | 39 | 8 | 16 | 25 | 33 | 7 | 14 | 21 | 28 | 6 | 12 | 18 | 25 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 |
| | 414 | | | | | 11 | 22 | 32 | 43 | 9 | 18 | 27 | 36 | 8 | 15 | 23 | 31 | 7 | 13 | 20 | 27 | 5 | 11 | 16 | 22 | 4 | 9 | 13 | 18 |
| 0.5 GPM #5 | 483 | | | | | 12 | 23 | 35 | 47 | 10 | 19 | 29 | 39 | 8 | 17 | 25 | 33 | 7 | 15 | 22 | 29 | 6 | 12 | 17 | 23 | 5 | 10 | 15 | 19 |
| | 138 | | | | | 8 | 15 | 23 | 31 | 6 | 13 | 19 | 25 | 5 | 11 | 16 | 22 | 5 | 10 | 14 | 19 | 4 | 8 | 11 | 15 | 3 | 6 | 10 | 13 |
| | 207 | | | | | 9 | 19 | 28 | 37 | 8 | 16 | 23 | 31 | 7 | 13 | 20 | 27 | 6 | 12 | 18 | 23 | 5 | 9 | 14 | 19 | 4 | 8 | 12 | 16 |
| | 276 | | | | | 11 | 22 | 32 | 43 | 9 | 18 | 27 | 36 | 8 | 15 | 23 | 31 | 7 | 14 | 20 | 27 | 5 | 11 | 16 | 22 | 5 | 9 | 14 | 18 |
| | 345 | | | | | 12 | 24 | 36 | 48 | 10 | 20 | 30 | 40 | 9 | 17 | 26 | 35 | 8 | 15 | 23 | 30 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 |
| 0.5 GPM #5 | 414 | | | | | | | | | 11 | 22 | 33 | 44 | 9 | 19 | 28 | 38 | 8 | 17 | 25 | 33 | 7 | 13 | 20 | 26 | 6 | 11 | 17 | 22 |
| | 483 | | | | | | | | | 12 | 24 | 36 | 48 | 10 | 20 | 31 | 41 | 9 | 18 | 27 | 36 | 7 | 14 | 21 | 29 | 6 | 12 | 18 | 24 |

Speed Range (KPH) - 50 cm Nozzle Spacing

| Tip Size | Gauge (kPa) | 30 l/ha | | | | 50 l/ha | | | | 60 l/ha | | | | 70 l/ha | | | | 80 l/ha | | | | 100 l/ha | | | | 120 l/ha | | | |
|----------------|-------------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|----------|-----|-----|------|
| | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Ma | | | |
| | | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% |
| 0.6 GPM #6 | 138 | | | | | 9 | 18 | 27 | 36 | 7 | 15 | 22 | 30 | 6 | 13 | 19 | 26 | 6 | 11 | 17 | 22 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 15 |
| | 207 | | | | | 11 | 22 | 33 | 44 | 9 | 18 | 28 | 37 | 8 | 16 | 24 | 31 | 7 | 14 | 21 | 28 | 6 | 11 | 17 | 22 | 5 | 9 | 14 | 18 |
| | 276 | | | | | | | | | 11 | 21 | 32 | 42 | 9 | 18 | 27 | 36 | 8 | 16 | 24 | 32 | 6 | 13 | 19 | 25 | 5 | 11 | 16 | 21 |
| | 345 | | | | | | | | | 12 | 24 | 36 | 47 | 10 | 20 | 30 | 41 | 9 | 18 | 27 | 36 | 7 | 14 | 21 | 28 | 6 | 12 | 18 | 24 |
| | 414 | | | | | | | | | | | | | 11 | 22 | 33 | 44 | 10 | 19 | 29 | 39 | 8 | 16 | 23 | 31 | 6 | 13 | 19 | 26 |
| | 483 | | | | | | | | | | | | | 12 | 24 | 36 | 48 | 11 | 21 | 32 | 42 | 8 | 17 | 25 | 34 | 7 | 14 | 21 | 28 |
| 0.8 GPM #8 | 138 | | | | | 11 | 23 | 34 | 46 | 10 | 19 | 29 | 38 | 8 | 16 | 24 | 33 | 7 | 14 | 21 | 29 | 6 | 11 | 17 | 23 | 5 | 10 | 14 | 19 |
| | 207 | | | | | | | | | 12 | 23 | 35 | 47 | 10 | 20 | 30 | 40 | 9 | 17 | 26 | 35 | 7 | 14 | 21 | 28 | 6 | 12 | 17 | 23 |
| | 276 | | | | | | | | | | | | | 12 | 23 | 35 | 46 | 10 | 20 | 30 | 40 | 8 | 16 | 24 | 32 | 7 | 13 | 20 | 27 |
| | 345 | | | | | | | | | | | | | | | | | 11 | 23 | 34 | 45 | 9 | 18 | 27 | 36 | 8 | 15 | 23 | 30 |
| | 414 | | | | | | | | | | | | | | | | | | | | 10 | 20 | 30 | 40 | 8 | 16 | 25 | 33 | |
| | 483 | | | | | | | | | | | | | | | | | | | | 11 | 21 | 32 | 43 | 9 | 18 | 27 | 36 | |
| 1.0 GPM #10 | 138 | | | | | | | | | 11 | 22 | 34 | 45 | 10 | 19 | 29 | 39 | 8 | 17 | 25 | 34 | 7 | 13 | 20 | 27 | 6 | 11 | 17 | 22 |
| | 207 | | | | | | | | | | | | | 12 | 24 | 35 | 47 | 10 | 21 | 31 | 41 | 8 | 17 | 25 | 33 | 7 | 14 | 21 | 28 |
| | 276 | | | | | | | | | | | | | | | | | 12 | 24 | 36 | 48 | 10 | 19 | 29 | 38 | 8 | 16 | 24 | 32 |
| | 345 | | | | | | | | | | | | | | | | | | | | | | | | | 9 | 18 | 27 | 36 |
| | 414 | | | | | | | | | | | | | | | | | | | | | | | | | 10 | 19 | 29 | 39 |
| | 483 | | | | | | | | | | | | | | | | | | | | | | | | | 11 | 21 | 32 | 42 |
| 1.2 GPM #12 | 138 | | | | | | | | | | | | | 11 | 22 | 33 | 44 | 10 | 19 | 29 | 38 | 8 | 15 | 23 | 30 | 6 | 13 | 19 | 25 |
| | 207 | | | | | | | | | | | | | | | | | 12 | 23 | 35 | 47 | 9 | 19 | 28 | 37 | 8 | 16 | 23 | 31 |
| | 276 | | | | | | | | | | | | | | | | | | | | | | | | | 9 | 18 | 27 | 36 |
| | 345 | | | | | | | | | | | | | | | | | | | | | | | | | 10 | 20 | 30 | 40 |
| | 414 | | | | | | | | | | | | | | | | | | | | | | | | | 11 | 22 | 33 | 44 |
| | 483 | | | | | | | | | | | | | | | | | | | | | | | | | 12 | 24 | 36 | 48 |
| 1.25 GPM #12.5 | 138 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 207 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 276 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 345 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 414 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 483 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1.5 GPM #15 | 138 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 207 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 276 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 345 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 414 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 483 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Blended Pulse™ Droplet Classification Table-Metric

Droplet Classification Table ASABE S-572.1

| Extremely Fine (EF) | Very Fine (VF) | Fine (F) | Medium (M) | Coarse (C) | Very Coarse (VC) | Extremely Coarse (EC) | Ultra Coarse (UC) |
|---------------------|----------------|----------|------------|------------|------------------|-----------------------|-------------------|
| <50 | 50 - 136 | 137-177 | 178-218 | 219-349 | 350-428 | 429-622 | >622 |

** Blanks cells represent nozzles either not available or below the manufacturers operating specifications

** Hypro and TeeJet droplet classifications below may not match manufacturers spec sheets. The chart below adjusts the droplet classification to be representative of the Actual Nozzle Pressure

| Hypro and TeeJet Orpjet Classifications below may not match manufacturers spec sheets. The chart below adjusts the Orpjet classification to be representative of the Actual Nozzle Pressure | | | | | | | | | | | | | | | | | | | | |
|---|-------------|--------------|-----------|-----------|-----------|-----------|-----------|------------|-----------|-----------|-----------|----------|--------------|-----------|------------|-----------|-------------|---------------|-----------|-----------|
| Tip Size | Gauge (kPa) | Nozzle (kPa) | Wilger | | | | Hypro | | | | | | | TeeJet | | | | | | |
| | | | ER (110°) | SR (110°) | MR (110°) | DR (110°) | HF (140°) | GRD (120°) | LD (110°) | VP (110°) | TR (110°) | F (110°) | TTJ60 (110°) | XR (110°) | XRC (110°) | DG (110°) | TJ60 (110°) | DGTJ60 (110°) | TT (110°) | TP (110°) |
| 0.1 GPM #1 | 138 | 137 | F | | | | | | | | | | | | F | | | | C | |
| | 207 | 206 | F | | | | | | | | | | | F | F | | | | M | F |
| | 276 | 275 | VF | | | | | | | | | | | F | F | | | | M | F |
| | 345 | 343 | VF | | | | | | | | | | | F | F | | | | M | F |
| | 414 | 412 | VF | | | | | | | | | | | VF | VF | | | | F | VF |
| | 483 | 481 | VF | | | | | | | | | | | | | | | | F | |
| 0.15 GPM #1.5 | 138 | 137 | F | | | | | | | | | | | | F | | | | C | |
| | 207 | 205 | F | M | C | VC | | | | | | | F | F | | M | | F | M | F |
| | 276 | 273 | F | M | C | C | | | | | | | F | F | | F | | F | M | F |
| | 345 | 342 | VF | M | C | C | | | | | | | F | F | | F | | F | M | F |
| | 414 | 410 | VF | M | C | C | | | | | | | F | F | | F | | F | F | F |
| | 483 | 478 | VF | F | M | C | | | | | | | | | | | | | F | |
| 0.2 GPM #2 | 138 | 136 | F | | | | | M | M | F | M | | C | M | F | | | | VC | |
| | 207 | 203 | F | C | C | XC | | M | M | F | F | F | C | F | F | M | F | M | C | F |
| | 276 | 271 | F | M | C | VC | | M | M | F | F | F | M | F | F | M | VF | M | M | F |
| | 345 | 339 | F | M | C | VC | | M | M | F | F | F | M | F | F | M | VF | F | M | F |
| | 414 | 407 | F | M | C | C | | M | M | F | F | F | M | F | F | M | VF | F | M | F |
| | 483 | 475 | VF | M | C | C | | F | M | F | F | | M | | | | | | F | |
| 0.25 GPM #2.5 | 138 | 134 | M | | | | | M | M | M | | | VC | M | M | | | | VC | |
| | 207 | 202 | M | C | VC | XC | | M | M | F | | | C | M | F | | | | C | |
| | 276 | 269 | M | C | C | VC | | M | M | F | | | C | F | F | | | | M | |
| | 345 | 336 | F | M | C | VC | | M | M | F | | | M | F | F | | | | M | |
| | 414 | 403 | F | M | C | VC | | M | M | F | | | M | F | F | | | | M | |
| | 483 | 470 | F | M | C | C | | F | M | F | | | M | | | | | | F | |
| 0.3 GPM #3 | 138 | 133 | M | | | | | M | C | M | M | | VC | M | M | | | | VC | |
| | 207 | 199 | M | C | VC | XC | | M | C | F | M | F | C | M | F | C | F | M | C | F |
| | 276 | 266 | F | C | VC | XC | | M | M | F | F | F | C | F | F | M | F | M | C | F |
| | 345 | 332 | F | C | C | VC | | M | M | F | F | F | M | F | F | M | F | F | M | F |
| | 414 | 399 | F | C | C | VC | | M | M | F | F | F | M | F | F | M | F | F | M | F |
| | 483 | 465 | F | C | C | VC | | M | M | F | F | | M | | | | | | M | |
| 0.4 GPM #4 | 138 | 129 | C | | | | | C | C | M | M | | VC | M | M | | | | VC | |
| | 207 | 194 | C | C | VC | XC | | C | C | M | M | M | C | M | M | C | F | C | C | M |
| | 276 | 259 | M | C | VC | XC | | C | M | F | F | F | C | M | M | M | F | C | C | M |
| | 345 | 323 | M | C | C | VC | XC | | M | M | F | F | F | M | F | F | M | F | M | F |
| | 414 | 388 | M | C | C | VC | | M | M | F | F | F | M | F | F | M | F | M | M | F |
| | 483 | 452 | M | C | C | VC | | M | M | F | F | | M | | | | | | M | |
| 0.5 GPM #5 | 138 | 125 | C | | | | | C | C | M | C | | VC | M | M | | | | VC | |
| | 207 | 187 | C | VC | XC | XC | | C | C | M | M | M | C | M | M | C | M | | VC | M |
| | 276 | 250 | M | C | XC | XC | | C | C | F | F | F | C | M | M | C | M | | C | M |
| | 345 | 312 | M | C | C | XC | XC | | M | M | F | F | F | C | M | M | M | F | C | F |
| | 414 | 375 | M | C | C | VC | XC | | M | M | F | F | F | C | F | F | M | F | C | F |
| | 483 | 437 | M | C | VC | XC | XC | | M | M | F | F | | M | | | | | M | |

Droplet Classification Table ASABE S-572.1

| Extremely Fine (EF) | Very Fine (VF) | Fine (F) | Medium (M) | Coarse (C) | Very Coarse (VC) | Extremely Coarse (EC) | Ultra Coarse (UC) |
|---------------------|----------------|----------|------------|------------|------------------|-----------------------|-------------------|
| <50 | 50 - 136 | 137-177 | 178-218 | 219-349 | 350-428 | 429-622 | >622 |

** Blanks cells represent nozzles either not available or below the manufacturers operating specifications

** Hypro and TeeJet droplet classifications below may not match manufacturers spec sheets. The chart below adjusts the droplet classification to be representative of the Actual Nozzle Pressure

| Tip Size | Gauge (kPa) | Nozzle (kPa) | Wilger | | | | Hypro | | | | | | | TeeJet | | | | | | |
|----------------|-------------|--------------|-----------|-----------|-----------|-----------|-----------|------------|-----------|-----------|-----------|----------|--------------|-----------|------------|-----------|-------------|---------------|-----------|-----------|
| | | | ER (110°) | SR (110°) | MR (110°) | DR (110°) | HF (140°) | GRD (120°) | LD (110°) | VP (110°) | TR (110°) | F (110°) | TTJ60 (110°) | XR (110°) | XRC (110°) | DG (110°) | TJ60 (110°) | DGTJ60 (110°) | TT (110°) | TP (110°) |
| 0.6 GPM #6 | 138 | 120 | C | | | | | VC | VC | M | C | | VC | M | C | | | | VC | |
| | 207 | 180 | C | XC | XC | | | C | C | M | C | M | C | M | M | | M | C | VC | M |
| | 276 | 240 | C | VC | XC | XC | | C | C | M | M | M | C | M | M | | M | C | VC | M |
| | 345 | 300 | C | VC | XC | XC | | C | C | M | M | M | C | M | M | | F | C | VC | M |
| | 414 | 360 | C | C | XC | XC | | C | C | F | M | F | C | M | M | | F | C | C | M |
| | 483 | 420 | C | C | VC | XC | | C | C | F | M | | M | | | | | | C | |
| 0.8 GPM #8 | 138 | 109 | C | | | | | VC | VC | C | C | | VC | C | C | | | | VC | |
| | 207 | 163 | C | XC | XC | | VC | VC | VC | C | C | | VC | C | C | | M | C | VC | C |
| | 276 | 218 | C | XC | XC | XC | UC | C | C | M | C | M | C | M | C | | M | C | VC | C |
| | 345 | 272 | C | VC | XC | XC | UC | C | C | M | M | M | C | M | M | | M | C | C | M |
| | 414 | 327 | C | VC | XC | XC | UC | C | C | M | M | M | C | M | M | | M | C | C | M |
| | 483 | 381 | C | VC | XC | XC | XC | C | C | M | M | | C | | | | | | C | |
| 1.0 GPM #10 | 138 | 97 | VC | | | | | | | | | | | | | | | | | |
| | 207 | 146 | VC | | | | UC | | | C | VC | | XC | C | C | | M | | UC | |
| | 276 | 195 | C | XC | XC | UC | UC | | | C | C | M | XC | C | C | | M | | XC | |
| | 345 | 243 | C | XC | XC | UC | UC | | | M | M | M | VC | C | C | | M | | XC | |
| | 414 | 292 | C | VC | XC | UC | UC | | | M | M | M | VC | M | M | | M | | VC | |
| | 483 | 341 | C | VC | XC | XC | UC | | | M | M | | VC | | | | | | VC | |
| 1.2 GPM #12 | 138 | 83 | | | | | | | | | | | | | | | | | | |
| | 207 | 124 | | | | | | | | | | | | | | | | | UC | |
| | 276 | 135 | | | | | | | | | | | | | | | | | UC | |
| | 345 | 207 | | | | | | | | | | | | | | | | | XC | |
| | 414 | 248 | | | | | | | | | | | | | | | | | VC | |
| | 483 | 290 | | | | | | | | | | | | | | | | | VC | |
| 1.25 GPM #12.5 | 138 | 84 | XC | | | | | | | | | | | | | | | | | |
| | 207 | 125 | XC | | | | | | | | | | | | | | | | | |
| | 276 | 167 | VC | XC | UC | | | | | | | | | | | | | | | |
| | 345 | 209 | VC | XC | UC | UC | | | | | | | | | | | | | | |
| | 414 | 251 | VC | XC | XC | UC | | | | | | | | | | | | | | |
| | 483 | 292 | C | VC | XC | XC | | | | | | | | | | | | | | |
| 1.5 GPM #15 | 138 | 71 | XC | | | | | | | | | | | | | | | | | |
| | 207 | 107 | XC | | | | UC | | | VC | VC | | | | VC | | | | | |
| | 276 | 142 | XC | | | | UC | | | VC | VC | | | | VC | | | | | |
| | 345 | 178 | VC | XC | UC | | UC | | | VC | VC | C | | | VC | | | | | |
| | 414 | 214 | VC | XC | XC | UC | UC | | | VC | VC | C | | | VC | | | | | |
| | 483 | 249 | VC | XC | XC | UC | UC | | | C | C | | | | | | | | | |

US Measurements Nozzle Speed Ranges

Nozzle Spacing - 15 in

Speed Range (MPH) - 15" Nozzle Spacing

| Tip Size | Gauge (PSI) | 3 GPA | | | | 5 GPA | | | | 8 GPA | | | | 10 GPA | | | | 12 GPA | | | | 15 GPA | | | | 20 GPA | | | |
|---------------|-------------|-------|----|-----|----|-------|----|-----|----|-------|----|-----|----|--------|----|-----|----|--------|----|-----|----|--------|---|-----|----|--------|---|-----|----|
| | | Min | - | Max | | Min | - | Max | | Min | - | Max | | Min | - | Max | | Min | - | Max | | Min | - | Max | | Min | - | Max | |
| 0.1 GPM #1 | 20 | 2 | 5 | 7 | 9 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 3 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 | 0 | 1 | 1 | 2 | 0 | 1 | 1 | 1 |
| | 30 | 3 | 6 | 9 | 11 | 2 | 3 | 5 | 7 | 1 | 2 | 3 | 4 | 1 | 2 | 3 | 3 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 | 0 | 1 | 1 | 2 |
| | 40 | 3 | 7 | 10 | 13 | 2 | 4 | 6 | 8 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 | 1 | 1 | 2 | 3 | 0 | 1 | 1 | 2 |
| | 50 | 4 | 7 | 11 | 15 | 2 | 4 | 7 | 9 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 4 | 1 | 2 | 3 | 4 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 |
| | 60 | 4 | 8 | 12 | 16 | 2 | 5 | 7 | 10 | 2 | 3 | 5 | 6 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 | 1 | 1 | 2 | 2 |
| 0.15 GPM #1.5 | 70 | 4 | 9 | 13 | 17 | 3 | 5 | 8 | 10 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 3 | 3 | 1 | 1 | 2 | 3 |
| | 20 | 3 | 7 | 10 | 14 | 2 | 4 | 6 | 8 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 3 | 3 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 |
| | 30 | 4 | 9 | 13 | 17 | 3 | 5 | 8 | 10 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 3 | 3 | 1 | 1 | 2 | 3 |
| | 40 | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 12 | 2 | 4 | 6 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 1 | 2 | 3 |
| | 50 | 6 | 11 | 17 | 22 | 3 | 7 | 10 | 13 | 2 | 4 | 6 | 8 | 1 | 3 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 |
| 0.2 GPM #2 | 60 | 6 | 12 | 18 | 24 | 4 | 7 | 11 | 14 | 2 | 5 | 7 | 9 | 2 | 4 | 5 | 7 | 2 | 3 | 5 | 6 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 |
| | 70 | 7 | 13 | 20 | 26 | 4 | 8 | 12 | 16 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 |
| | 20 | 5 | 9 | 14 | 19 | 3 | 6 | 8 | 11 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 5 | 1 | 2 | 3 | 4 | 1 | 1 | 2 | 3 |
| | 30 | 6 | 11 | 17 | 23 | 3 | 7 | 10 | 14 | 2 | 4 | 6 | 9 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 5 | 1 | 2 | 3 | 3 |
| | 40 | 7 | 13 | 20 | 26 | 4 | 8 | 12 | 16 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 |
| 0.25 GPM #2.5 | 50 | 7 | 15 | 22 | 29 | 4 | 9 | 13 | 18 | 3 | 5 | 8 | 11 | 2 | 4 | 7 | 9 | 2 | 4 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 4 |
| | 60 | | | | | 5 | 10 | 14 | 19 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 | 1 | 2 | 4 | 5 |
| | 70 | | | | | 5 | 10 | 16 | 21 | 3 | 6 | 10 | 13 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 9 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 5 |
| | 20 | 6 | 12 | 17 | 23 | 3 | 7 | 10 | 14 | 2 | 4 | 6 | 9 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 5 | 1 | 2 | 3 | 3 |
| | 30 | 7 | 14 | 21 | 28 | 4 | 8 | 13 | 17 | 3 | 5 | 8 | 11 | 2 | 4 | 6 | 8 | 2 | 4 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 4 |
| 0.3 GPM #3 | 40 | | | | | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 2 | 4 | 5 |
| | 50 | | | | | 5 | 11 | 16 | 22 | 3 | 7 | 10 | 14 | 3 | 5 | 8 | 11 | 2 | 5 | 7 | 9 | 2 | 4 | 5 | 7 | 1 | 3 | 4 | 5 |
| | 60 | | | | | 6 | 12 | 18 | 24 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 1 | 3 | 4 | 6 |
| | 70 | | | | | 6 | 13 | 19 | 26 | 4 | 8 | 12 | 16 | 3 | 6 | 10 | 13 | 3 | 5 | 8 | 11 | 2 | 4 | 6 | 9 | 2 | 3 | 5 | 6 |
| | 20 | 7 | 14 | 21 | 27 | 4 | 8 | 12 | 16 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 |
| 0.4 GPM #4 | 30 | | | | | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 13 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 5 |
| | 40 | | | | | 6 | 12 | 17 | 23 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 1 | 3 | 4 | 6 |
| | 50 | | | | | 7 | 13 | 20 | 26 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 13 | 3 | 5 | 8 | 11 | 2 | 4 | 7 | 9 | 2 | 3 | 5 | 7 |
| | 60 | | | | | 7 | 14 | 21 | 29 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 5 | 7 |
| | 70 | | | | | 5 | 10 | 14 | 19 | 5 | 10 | 14 | 19 | 4 | 8 | 12 | 15 | 3 | 6 | 10 | 13 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 |
| 0.5 GPM #5 | 20 | | | | | 5 | 11 | 16 | 22 | 3 | 7 | 10 | 14 | 3 | 5 | 8 | 11 | 2 | 5 | 7 | 9 | 2 | 4 | 5 | 7 | 1 | 3 | 4 | 5 |
| | 30 | | | | | 7 | 13 | 20 | 27 | 4 | 8 | 12 | 17 | 3 | 7 | 10 | 13 | 3 | 6 | 8 | 11 | 2 | 4 | 7 | 9 | 2 | 3 | 5 | 7 |
| | 40 | | | | | | | | | 5 | 10 | 14 | 19 | 4 | 8 | 12 | 15 | 3 | 6 | 10 | 13 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 |
| | 50 | | | | | | | | | 5 | 11 | 16 | 21 | 4 | 9 | 13 | 17 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 11 | 2 | 4 | 6 | 9 |
| | 60 | | | | | | | | | 6 | 12 | 18 | 23 | 5 | 9 | 14 | 19 | 4 | 8 | 12 | 16 | 3 | 6 | 9 | 13 | 2 | 5 | 7 | 9 |
| 0.5 GPM #5 | 70 | | | | | 6 | 13 | 19 | 25 | 6 | 12 | 18 | 23 | 5 | 10 | 15 | 20 | 4 | 8 | 13 | 17 | 3 | 7 | 10 | 14 | 3 | 5 | 8 | 10 |
| | 20 | | | | | 7 | 13 | 20 | 27 | 4 | 8 | 12 | 17 | 3 | 7 | 10 | 13 | 3 | 6 | 8 | 11 | 2 | 4 | 7 | 9 | 2 | 3 | 5 | 7 |
| | 30 | | | | | | | | | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 14 | 3 | 5 | 8 | 11 | 2 | 4 | 6 | 8 |
| | 40 | | | | | | | | | 6 | 12 | 18 | 24 | 5 | 9 | 14 | 19 | 4 | 8 | 12 | 16 | 3 | 6 | 9 | 13 | 2 | 5 | 7 | 9 |
| | 50 | | | | | | | | | 7 | 13 | 20 | 26 | 5 | 11 | 16 | 21 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 14 | 3 | 5 | 8 | 11 |
| 0.5 GPM #5 | 60 | | | | | | | | | 7 | 14 | 22 | 29 | 6 | 12 | 17 | 23 | 5 | 10 | 14 | 19 | 4 | 8 | 12 | 15 | 3 | 6 | 9 | 12 |
| | 70 | | | | | | | | | 6 | 12 | 19 | 25 | 6 | 12 | 19 | 25 | 5 | 10 | 16 | 21 | 4 | 8 | 12 | 17 | 3 | 6 | 9 | 12 |

Speed Range (MPH) - 15" Nozzle Spacing

| Tip Size | Gauge (PSI) | 3 GPA | | | | 5 GPA | | | | 8 GPA | | | | 10 GPA | | | | 12 GPA | | | | 15 GPA | | | | 20 GPA | | | |
|----------------|-------------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|
| | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | |
| | | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% |
| 0.6 GPM #6 | 20 | | | | | | | | | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 13 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 |
| | 30 | | | | | | | | | 6 | 12 | 18 | 24 | 5 | 10 | 14 | 19 | 4 | 8 | 12 | 16 | 3 | 6 | 10 | 13 | 2 | 5 | 7 | 10 |
| | 40 | | | | | | | | | 7 | 14 | 21 | 28 | 6 | 11 | 17 | 22 | 5 | 9 | 14 | 18 | 4 | 7 | 11 | 15 | 3 | 6 | 8 | 11 |
| | 50 | | | | | | | | | | | | | 6 | 12 | 19 | 25 | 5 | 10 | 15 | 21 | 4 | 8 | 12 | 17 | 3 | 6 | 9 | 12 |
| | 60 | | | | | | | | | | | | | 7 | 14 | 20 | 27 | 6 | 11 | 17 | 23 | 5 | 9 | 14 | 18 | 3 | 7 | 10 | 14 |
| | 70 | | | | | | | | | | | | | 7 | 15 | 22 | 29 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 | 4 | 7 | 11 | 15 |
| 0.8 GPM #8 | 20 | | | | | | | | | 6 | 12 | 19 | 25 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 17 | 3 | 7 | 10 | 13 | 2 | 5 | 7 | 10 |
| | 30 | | | | | | | | | 8 | 15 | 23 | 30 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 | 3 | 6 | 9 | 12 |
| | 40 | | | | | | | | | | | | | 7 | 14 | 21 | 28 | 6 | 12 | 18 | 23 | 5 | 9 | 14 | 19 | 4 | 7 | 11 | 14 |
| | 50 | | | | | | | | | | | | | | | | | 7 | 13 | 20 | 26 | 5 | 10 | 16 | 21 | 4 | 8 | 12 | 16 |
| | 60 | | | | | | | | | | | | | | | | | 7 | 14 | 22 | 29 | 6 | 11 | 17 | 23 | 4 | 9 | 13 | 17 |
| | 70 | | | | | | | | | | | | | | | | | | 7 | 14 | 22 | 29 | 6 | 12 | 19 | 25 | 5 | 9 | 14 |
| 1.0 GPM #10 | 20 | | | | | | | | | 7 | 15 | 22 | 29 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 | 3 | 6 | 9 | 12 |
| | 30 | | | | | | | | | | | | | 7 | 14 | 22 | 29 | 6 | 12 | 18 | 24 | 5 | 10 | 14 | 19 | 4 | 7 | 11 | 14 |
| | 40 | | | | | | | | | | | | | | | | | 7 | 14 | 21 | 28 | 6 | 11 | 17 | 22 | 4 | 8 | 12 | 17 |
| | 50 | | | | | | | | | | | | | | | | | | | | | 6 | 12 | 19 | 25 | 5 | 9 | 14 | 19 |
| | 60 | | | | | | | | | | | | | | | | | | | | | 7 | 14 | 20 | 27 | 5 | 10 | 15 | 20 |
| | 70 | | | | | | | | | | | | | | | | | | | | | 7 | 15 | 22 | 29 | 6 | 11 | 17 | 22 |
| 1.2 GPM #12 | 20 | | | | | | | | | | | | | | | | | 6 | 11 | 17 | 22 | 4 | 9 | 13 | 18 | 3 | 7 | 10 | 13 |
| | 30 | | | | | | | | | | | | | | | | | 7 | 14 | 20 | 27 | 5 | 11 | 16 | 22 | 4 | 8 | 12 | 16 |
| | 40 | | | | | | | | | | | | | | | | | | | | | 6 | 13 | 19 | 25 | 5 | 9 | 14 | 19 |
| | 50 | | | | | | | | | | | | | | | | | | | | | 7 | 14 | 21 | 28 | 5 | 11 | 16 | 21 |
| | 60 | | | | | | | | | | | | | | | | | | | | | | | | | 6 | 12 | 17 | 23 |
| | 70 | | | | | | | | | | | | | | | | | | | | | | | | | 6 | 12 | 19 | 25 |
| 1.25 GPM #12.5 | 20 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 30 | | | | | | | | | | | | | | | | | 7 | 14 | 21 | 28 | 6 | 11 | 17 | 22 | 4 | 8 | 13 | 17 |
| | 40 | | | | | | | | | | | | | | | | | | | | | 6 | 13 | 19 | 26 | 5 | 10 | 14 | 19 |
| | 50 | | | | | | | | | | | | | | | | | | | | | 7 | 14 | 22 | 29 | 5 | 11 | 16 | 22 |
| | 60 | | | | | | | | | | | | | | | | | | | | | | | | | 6 | 12 | 18 | 24 |
| | 70 | | | | | | | | | | | | | | | | | | | | | | | | | 6 | 13 | 19 | 25 |
| 1.5 GPM #15 | 20 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 30 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 40 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 50 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 60 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | 70 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Nozzle Spacing - 20 in

Speed Range (MPH) - 20" Nozzle Spacing

| Tip Size | Gauge (PSI) | 3 GPA | | | | 5 GPA | | | | 8 GPA | | | | 10 GPA | | | | 12 GPA | | | | 15 GPA | | | | 20 GPA | | | |
|---------------|-------------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|
| | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | |
| | | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% |
| 0.1 GPM #1 | 20 | 2 | 3 | 5 | 7 | 1 | 2 | 3 | 4 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 | 0 | 1 | 1 | 2 | 0 | 1 | 1 | 1 | 0 | 1 | 1 | 1 |
| | 30 | 2 | 4 | 6 | 9 | 1 | 3 | 4 | 5 | 1 | 2 | 2 | 3 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 | 0 | 1 | 1 | 2 | 0 | 1 | 1 | 1 |
| | 40 | 2 | 5 | 7 | 10 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 4 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 | 0 | 1 | 1 | 2 | 0 | 1 | 1 | 1 |
| | 50 | 3 | 6 | 8 | 11 | 2 | 3 | 5 | 7 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 | 0 | 1 | 1 | 2 |
| | 60 | 3 | 6 | 9 | 12 | 2 | 4 | 5 | 7 | 1 | 2 | 3 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 | 1 | 1 | 2 | 2 | 0 | 1 | 1 | 2 |
| | 70 | 3 | 7 | 10 | 13 | 2 | 4 | 6 | 8 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 | 1 | 1 | 2 | 3 | 0 | 1 | 1 | 2 |
| 0.15 GPM #1.5 | 20 | 3 | 5 | 8 | 10 | 2 | 3 | 5 | 6 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 | 0 | 1 | 1 | 2 |
| | 30 | 3 | 6 | 10 | 13 | 2 | 4 | 6 | 8 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 | 1 | 1 | 2 | 3 | 0 | 1 | 1 | 2 |
| | 40 | 4 | 7 | 11 | 15 | 2 | 4 | 7 | 9 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 4 | 1 | 2 | 3 | 4 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 |
| | 50 | 4 | 8 | 12 | 17 | 2 | 5 | 7 | 10 | 2 | 3 | 5 | 6 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 | 1 | 1 | 2 | 2 |
| | 60 | 5 | 9 | 14 | 18 | 3 | 5 | 8 | 11 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 5 | 1 | 2 | 3 | 4 | 1 | 1 | 2 | 3 |
| | 70 | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 12 | 2 | 4 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 1 | 2 | 3 |
| 0.2 GPM #2 | 20 | 3 | 7 | 10 | 14 | 2 | 4 | 6 | 8 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 3 | 3 | 1 | 1 | 2 | 3 | 1 | 1 | 2 | 2 |
| | 30 | 4 | 9 | 13 | 17 | 3 | 5 | 8 | 10 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 3 | 3 | 1 | 1 | 2 | 3 |
| | 40 | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 12 | 2 | 4 | 6 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 1 | 2 | 3 |
| | 50 | 5 | 11 | 16 | 22 | 3 | 7 | 10 | 13 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 |
| | 60 | 6 | 12 | 18 | 24 | 4 | 7 | 11 | 14 | 2 | 5 | 7 | 9 | 2 | 4 | 5 | 7 | 2 | 3 | 5 | 6 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 |
| | 70 | 6 | 13 | 19 | 26 | 4 | 8 | 12 | 16 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 |
| 0.25 GPM #2.5 | 20 | 4 | 9 | 13 | 17 | 3 | 5 | 8 | 10 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 3 | 3 | 1 | 1 | 2 | 3 |
| | 30 | 5 | 11 | 16 | 21 | 3 | 6 | 10 | 13 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 |
| | 40 | 6 | 12 | 18 | 24 | 4 | 7 | 11 | 15 | 2 | 5 | 7 | 9 | 2 | 4 | 5 | 7 | 2 | 3 | 5 | 6 | 1 | 2 | 4 | 5 | 1 | 2 | 3 | 4 |
| | 50 | 7 | 14 | 20 | 27 | 4 | 8 | 12 | 16 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 |
| | 60 | 7 | 15 | 22 | 30 | 4 | 9 | 13 | 18 | 3 | 6 | 8 | 11 | 2 | 4 | 7 | 9 | 2 | 4 | 6 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 4 |
| | 70 | | | | | 5 | 10 | 15 | 19 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 | 1 | 2 | 4 | 5 |
| 0.3 GPM #3 | 20 | 5 | 10 | 15 | 21 | 3 | 6 | 9 | 12 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 | 1 | 2 | 2 | 3 |
| | 30 | 6 | 13 | 19 | 25 | 4 | 8 | 11 | 15 | 2 | 5 | 7 | 9 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 |
| | 40 | 7 | 15 | 22 | 29 | 4 | 9 | 13 | 17 | 3 | 5 | 8 | 11 | 2 | 4 | 7 | 9 | 2 | 4 | 5 | 7 | 1 | 3 | 4 | 6 | 1 | 2 | 3 | 4 |
| | 50 | | | | | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 2 | 4 | 5 |
| | 60 | | | | | 5 | 11 | 16 | 21 | 3 | 7 | 10 | 13 | 3 | 5 | 8 | 11 | 2 | 4 | 7 | 9 | 2 | 4 | 5 | 7 | 1 | 3 | 4 | 5 |
| | 70 | | | | | 6 | 12 | 17 | 23 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 1 | 3 | 4 | 6 |
| 0.4 GPM #4 | 20 | 7 | 14 | 20 | 27 | 4 | 8 | 12 | 16 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 3 | 4 | 5 | 1 | 2 | 3 | 4 |
| | 30 | | | | | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 2 | 4 | 5 |
| | 40 | | | | | 6 | 12 | 17 | 23 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 1 | 3 | 4 | 6 |
| | 50 | | | | | 6 | 13 | 19 | 26 | 4 | 8 | 12 | 16 | 3 | 6 | 10 | 13 | 3 | 5 | 8 | 11 | 2 | 4 | 6 | 9 | 2 | 3 | 5 | 6 |
| | 60 | | | | | 7 | 14 | 21 | 28 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 9 | 2 | 4 | 5 | 7 |
| | 70 | | | | | 8 | 15 | 23 | 30 | 5 | 10 | 14 | 19 | 4 | 8 | 11 | 15 | 3 | 6 | 10 | 13 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 |
| 0.5 GPM #5 | 20 | | | | | 5 | 10 | 15 | 20 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 7 | 1 | 2 | 4 | 5 |
| | 30 | | | | | 6 | 12 | 18 | 24 | 4 | 8 | 11 | 15 | 3 | 6 | 9 | 12 | 3 | 5 | 8 | 10 | 2 | 4 | 6 | 8 | 2 | 3 | 5 | 6 |
| | 40 | | | | | 7 | 14 | 21 | 28 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 9 | 2 | 4 | 5 | 7 |
| | 50 | | | | | | | | | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 | 3 | 7 | 10 | 13 | 3 | 5 | 8 | 11 | 2 | 4 | 6 | 8 |
| | 60 | | | | | | | | | 5 | 11 | 16 | 22 | 4 | 9 | 13 | 17 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 12 | 2 | 4 | 6 | 9 |
| | 70 | | | | | | | | | 6 | 12 | 18 | 23 | 5 | 9 | 14 | 19 | 4 | 8 | 12 | 16 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 9 |

Speed Range (MPH) - 20" Nozzle Spacing

| Tip Size | Gauge (PSI) | 3 GPA | | | | 5 GPA | | | | 8 GPA | | | | 10 GPA | | | | 12 GPA | | | | 15 GPA | | | | 20 GPA | | | |
|----------------|-------------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|-----------|-----|-----|------|
| | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | | Min - Max | | | |
| | | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% | 25% | 50% | 75% | 100% |
| 0.6 GPM #6 | 20 | | | | | 6 | 12 | 18 | 24 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 8 | 1 | 3 | 4 | 6 |
| | 30 | | | | | 7 | 14 | 22 | 29 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 14 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 5 | 7 |
| | 40 | | | | | | | | | 5 | 10 | 16 | 21 | 4 | 8 | 12 | 17 | 3 | 7 | 10 | 14 | 3 | 6 | 8 | 11 | 2 | 4 | 6 | 8 |
| | 50 | | | | | | | | | 6 | 12 | 17 | 23 | 5 | 9 | 14 | 19 | 4 | 8 | 12 | 15 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 9 |
| | 60 | | | | | | | | | 6 | 13 | 19 | 25 | 5 | 10 | 15 | 20 | 4 | 8 | 13 | 17 | 3 | 7 | 10 | 14 | 3 | 5 | 8 | 10 |
| | 70 | | | | | | | | | 7 | 14 | 21 | 27 | 5 | 11 | 16 | 22 | 5 | 9 | 14 | 18 | 4 | 7 | 11 | 15 | 3 | 5 | 8 | 11 |
| 0.8 GPM #8 | 20 | | | | | 7 | 15 | 22 | 30 | 5 | 9 | 14 | 19 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 10 | 2 | 4 | 6 | 7 |
| | 30 | | | | | | | | | 6 | 11 | 17 | 23 | 5 | 9 | 14 | 18 | 4 | 8 | 11 | 15 | 3 | 6 | 9 | 12 | 2 | 5 | 7 | 9 |
| | 40 | | | | | | | | | 7 | 13 | 20 | 26 | 5 | 11 | 16 | 21 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 14 | 3 | 5 | 8 | 11 |
| | 50 | | | | | | | | | 7 | 15 | 22 | 30 | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 | 3 | 6 | 9 | 12 |
| | 60 | | | | | | | | | | | | | 6 | 13 | 19 | 26 | 5 | 11 | 16 | 22 | 4 | 9 | 13 | 17 | 3 | 6 | 10 | 13 |
| | 70 | | | | | | | | | | | | | 7 | 14 | 21 | 28 | 6 | 12 | 17 | 23 | 5 | 9 | 14 | 19 | 3 | 7 | 10 | 14 |
| 1.0 GPM #10 | 20 | | | | | | | | | 6 | 11 | 17 | 22 | 4 | 9 | 13 | 18 | 4 | 7 | 11 | 15 | 3 | 6 | 9 | 12 | 2 | 4 | 7 | 9 |
| | 30 | | | | | | | | | 7 | 14 | 20 | 27 | 5 | 11 | 16 | 22 | 5 | 9 | 14 | 18 | 4 | 7 | 11 | 14 | 3 | 5 | 8 | 11 |
| | 40 | | | | | | | | | | | | | 6 | 12 | 19 | 25 | 5 | 10 | 16 | 21 | 4 | 8 | 12 | 17 | 3 | 6 | 9 | 12 |
| | 50 | | | | | | | | | | | | | 7 | 14 | 21 | 28 | 6 | 12 | 17 | 23 | 5 | 9 | 14 | 19 | 3 | 7 | 10 | 14 |
| | 60 | | | | | | | | | | | | | | | | | 6 | 13 | 19 | 25 | 5 | 10 | 15 | 20 | 4 | 8 | 11 | 15 |
| | 70 | | | | | | | | | | | | | 7 | 14 | 21 | 28 | 6 | 12 | 17 | 23 | 5 | 9 | 14 | 19 | 4 | 8 | 12 | 17 |
| 1.2 GPM #12 | 20 | | | | | | | | | 6 | 12 | 19 | 25 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 17 | 3 | 7 | 10 | 13 | 2 | 5 | 7 | 10 |
| | 30 | | | | | | | | | | | | | 6 | 12 | 18 | 24 | 5 | 10 | 15 | 20 | 4 | 8 | 12 | 16 | 3 | 6 | 9 | 12 |
| | 40 | | | | | | | | | | | | | 7 | 14 | 21 | 28 | 6 | 12 | 18 | 23 | 5 | 9 | 14 | 19 | 4 | 7 | 11 | 14 |
| | 50 | | | | | | | | | | | | | | | | | 7 | 13 | 20 | 26 | 5 | 11 | 16 | 21 | 4 | 8 | 12 | 16 |
| | 60 | | | | | | | | | | | | | | | | | 7 | 14 | 22 | 29 | 6 | 12 | 17 | 23 | 4 | 9 | 13 | 17 |
| | 70 | | | | | | | | | | | | | | | | | | | | | 6 | 12 | 19 | 25 | 5 | 9 | 14 | 19 |
| 1.25 GPM #12.5 | 20 | | | | | | | | | 8 | 16 | 23 | 31 | 6 | 13 | 19 | 25 | 5 | 10 | 16 | 21 | 4 | 8 | 13 | 17 | 3 | 6 | 9 | 13 |
| | 30 | | | | | | | | | | | | | 7 | 14 | 22 | 29 | 6 | 12 | 18 | 24 | 5 | 10 | 14 | 19 | 4 | 7 | 11 | 14 |
| | 40 | | | | | | | | | | | | | | | | | 7 | 13 | 20 | 27 | 5 | 11 | 16 | 22 | 4 | 8 | 12 | 16 |
| | 50 | | | | | | | | | | | | | | | | | 7 | 15 | 22 | 29 | 6 | 12 | 18 | 24 | 4 | 9 | 13 | 18 |
| | 60 | | | | | | | | | | | | | | | | | | | | | 6 | 13 | 19 | 25 | 5 | 10 | 14 | 19 |
| | 70 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1.5 GPM #15 | 20 | | | | | | | | | | | | | 7 | 14 | 21 | 28 | 6 | 12 | 17 | 23 | 5 | 9 | 14 | 18 | 3 | 7 | 10 | 14 |
| | 30 | | | | | | | | | | | | | | | | | 7 | 13 | 20 | 27 | 5 | 11 | 16 | 21 | 4 | 8 | 12 | 16 |
| | 40 | | | | | | | | | | | | | | | | | 7 | 15 | 22 | 30 | 6 | 12 | 18 | 24 | 4 | 9 | 13 | 18 |
| | 50 | | | | | | | | | | | | | | | | | | | | | 7 | 13 | 20 | 26 | 5 | 10 | 15 | 20 |
| | 60 | | | | | | | | | | | | | | | | | | | | | 7 | 14 | 21 | 28 | 5 | 11 | 16 | 21 |
| | 70 | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Blended Pulse™ Droplet Classification Table-US Measurements

Droplet Classification Table ASABE S-572.1

| Extremely Fine (EF) | Very Fine (VF) | Fine (F) | Medium (M) | Coarse (C) | Very Coarse (VC) | Extremely Coarse (EC) | Ultra Coarse (UC) |
|---------------------|----------------|----------|------------|------------|------------------|-----------------------|-------------------|
| <50 | 50 - 136 | 137-177 | 178-218 | 219-349 | 350-428 | 429-622 | >622 |

** Blanks cells represent nozzles either not available or below the manufacturers operating specifications

** Hypro and TeeJet droplet classifications below may not match manufacturers spec sheets. The chart below adjusts the droplet classification to be representative of the Actual Nozzle Pressure

| Hypro and TeeJet orjet classifications below may not match manufacturers spec sheets. The chart below adjusts the orjet classification to be representative of the Actual Nozzle Pressure | | | | | | | | | | | | | | | | | | | | |
|---|-----------|------------|-----------|-----------|-----------|-----------|-----------|------------|-----------|-----------|-----------|----------|--------------|-----------|------------|-----------|-------------|---------------|-----------|-----------|
| Tip Size | Gauge PSI | Nozzle PSI | Wilger | | | | Hypro | | | | | | TeeJet | | | | | | | |
| | | | ER (110°) | SR (110°) | MR (110°) | DR (110°) | HF (140°) | GRD (120°) | LD (110°) | VP (110°) | TR (110°) | F (110°) | TTJ60 (110°) | XR (110°) | XRC (110°) | DG (110°) | TJ60 (110°) | DGTJ60 (110°) | TT (110°) | TP (110°) |
| 0.1 GPM #1 | 20 | 20 | F | | | | | | | | | | | F | | | | | C | |
| | 30 | 30 | F | | | | | | | | | | F | F | | | | M | F | |
| | 40 | 40 | VF | | | | | | | | | | F | F | | | | M | F | |
| | 50 | 50 | VF | | | | | | | | | | F | F | | | | M | F | |
| | 60 | 60 | VF | | | | | | | | | | VF | VF | | | | F | VF | |
| | 70 | 70 | VF | | | | | | | | | | | | | | | F | | |
| 0.15 GPM #1.5 | 20 | 20 | F | | | | | | | | | | F | | | | | C | | |
| | 30 | 30 | F | M | C | VC | | | | | | F | F | | M | | F | M | F | |
| | 40 | 40 | F | M | C | C | | | | | | F | F | | F | | F | M | F | |
| | 50 | 50 | VF | M | C | C | | | | | | F | F | | F | | F | M | F | |
| | 60 | 59 | VF | M | C | C | | | | | | F | F | | F | | F | F | F | |
| | 70 | 69 | VF | F | M | C | | | | | | | | | | | F | F | | |
| 0.2 GPM #2 | 20 | 20 | F | | | | | M | M | F | M | | C | M | F | | | | VC | |
| | 30 | 30 | F | C | C | XC | | M | M | F | F | F | C | F | F | M | F | M | C | F |
| | 40 | 39 | F | M | C | VC | | M | M | F | F | F | M | F | F | M | VF | M | M | F |
| | 50 | 49 | F | M | C | VC | | M | M | F | F | F | M | F | F | M | VF | F | M | F |
| | 60 | 59 | F | M | C | C | | M | M | F | F | F | M | F | F | M | VF | F | M | F |
| | 70 | 69 | VF | M | C | C | | F | M | F | F | | M | | | | | | F | |
| 0.25 GPM #2.5 | 20 | 19 | M | | | | | M | M | M | | | VC | M | M | | | | VC | |
| | 30 | 29 | M | C | VC | XC | | M | M | F | | | C | M | F | | | | C | |
| | 40 | 39 | M | C | C | VC | | M | M | F | | | C | F | F | | | | M | |
| | 50 | 49 | F | M | C | VC | | M | M | F | | | M | F | F | | | | M | |
| | 60 | 58 | F | M | C | VC | | M | M | F | | | M | F | F | | | | M | |
| | 70 | 68 | F | M | C | C | | F | M | F | | | M | | | | | | F | |
| 0.3 GPM #3 | 20 | 19 | M | | | | | M | C | M | M | | VC | M | M | | | | VC | |
| | 30 | 29 | M | C | VC | XC | | M | C | F | M | F | C | M | F | C | F | M | C | F |
| | 40 | 39 | F | C | VC | XC | | M | M | F | F | F | C | F | F | M | F | M | C | F |
| | 50 | 48 | F | C | C | VC | | M | M | F | F | F | M | F | F | M | F | F | M | F |
| | 60 | 58 | F | C | C | VC | | M | M | F | F | F | M | F | F | M | F | F | M | F |
| | 70 | 67 | F | C | C | VC | | M | M | F | F | | M | | | | | | M | |
| 0.4 GPM #4 | 20 | 19 | C | | | | | C | C | M | M | | VC | M | M | | | | VC | |
| | 30 | 28 | C | C | VC | XC | | C | C | M | M | M | C | M | M | C | F | C | C | M |
| | 40 | 38 | M | C | VC | XC | | C | M | F | F | F | C | M | M | M | F | C | C | M |
| | 50 | 47 | M | C | VC | XC | | M | M | F | F | F | M | F | F | M | F | C | M | F |
| | 60 | 56 | M | C | C | VC | | M | M | F | F | F | M | F | F | M | F | M | M | F |
| | 70 | 66 | M | C | C | VC | | M | M | F | F | | M | | | | | | M | |
| 0.5 GPM #5 | 20 | 18 | C | | | | | C | C | M | C | | VC | M | M | | | | VC | |
| | 30 | 27 | C | VC | XC | XC | | C | C | M | M | M | C | M | M | C | M | | VC | M |
| | 40 | 36 | M | C | XC | XC | | C | C | F | F | F | C | M | M | C | M | | C | M |
| | 50 | 45 | M | C | XC | XC | | M | M | F | F | F | C | M | M | M | F | | C | F |
| | 60 | 54 | M | C | VC | XC | | M | M | F | F | F | C | F | F | M | F | | C | F |
| | 70 | 63 | M | C | VC | XC | | M | M | F | F | | M | | | | | | M | |

Droplet Classification Table ASABE S-572.1

| Extremely Fine (EF) | Very Fine (VF) | Fine (F) | Medium (M) | Coarse (C) | Very Coarse (VC) | Extremely Coarse (EC) | Ultra Coarse (UC) |
|---------------------|----------------|----------|------------|------------|------------------|-----------------------|-------------------|
| <50 | 50 - 136 | 137-177 | 178-218 | 219-349 | 350-428 | 429-622 | >622 |

** Blanks cells represent nozzles either not available or below the manufacturers operating specifications

** Hypro and TeeJet droplet classifications below may not match manufacturers spec sheets. The chart below adjusts the droplet classification to be representative of the Actual Nozzle Pressure

| Tip Size | Gauge PSI | Nozzle PSI | Wilger | | | | Hypro | | | | | | | TeeJet | | | | | | |
|----------------|-----------|------------|-----------|-----------|-----------|-----------|-----------|------------|-----------|-----------|-----------|----------|--------------|-----------|------------|-----------|-------------|---------------|-----------|-----------|
| | | | ER (110°) | SR (110°) | MR (110°) | DR (110°) | HF (140°) | GRD (120°) | LD (110°) | VP (110°) | TR (110°) | F (110°) | TTJ60 (110°) | XR (110°) | XRC (110°) | DG (110°) | TJ60 (110°) | DGTJ60 (110°) | TT (110°) | TP (110°) |
| 0.6 GPM #6 | 20 | 17 | C | | | | | VC | VC | M | C | | VC | M | C | | | | | |
| | 30 | 26 | C | XC | XC | | | C | C | M | C | M | C | M | M | | M | C | VC | M |
| | 40 | 35 | C | VC | XC | XC | | C | C | M | M | M | C | M | M | | M | C | VC | M |
| | 50 | 43 | C | VC | XC | XC | | C | C | M | M | M | C | M | M | | F | C | VC | M |
| | 60 | 52 | C | C | XC | XC | | C | C | F | M | F | C | M | M | | F | C | C | M |
| | 70 | 61 | C | C | VC | XC | | C | C | F | M | | M | | | | | | C | |
| 0.8 GPM #8 | 20 | 16 | C | | | | | VC | VC | C | C | | VC | C | C | | | | VC | |
| | 30 | 24 | C | XC | XC | | VC | VC | VC | C | C | | VC | C | C | | M | C | VC | C |
| | 40 | 32 | C | XC | XC | XC | UC | C | C | M | C | M | VC | M | C | | M | C | VC | C |
| | 50 | 39 | C | VC | XC | XC | UC | C | C | M | M | M | C | M | M | | M | C | C | M |
| | 60 | 47 | C | VC | XC | XC | UC | C | C | M | M | M | C | M | M | | M | C | C | M |
| | 70 | 55 | C | VC | XC | XC | XC | C | C | M | M | | C | | | | | | C | |
| 1.0 GPM #10 | 20 | 14 | VC | | | | | | | | | | | | | | | | | |
| | 30 | 21 | VC | | | | UC | | | C | VC | | XC | C | C | | M | | UC | |
| | 40 | 28 | C | XC | XC | UC | UC | | | C | C | M | XC | C | C | | M | | XC | |
| | 50 | 35 | C | XC | XC | UC | UC | | | M | M | M | VC | C | C | | M | | XC | |
| | 60 | 42 | C | VC | XC | UC | UC | | | M | M | M | VC | M | M | | M | | VC | |
| | 70 | 49 | C | VC | XC | XC | UC | | | M | M | | VC | | | | | | VC | |
| 1.2 GPM #12 | 20 | 12 | | | | | | | | | | | | | | | | | UC | |
| | 30 | 18 | | | | | | | | | | | | | | | | | UC | |
| | 40 | 24 | | | | | | | | | | | | | | | | | XC | |
| | 50 | 30 | | | | | | | | | | | | | | | | | VC | |
| | 60 | 36 | | | | | | | | | | | | | | | | | VC | |
| | 70 | 42 | | | | | | | | | | | | | | | | | VC | |
| 1.25 GPM #12.5 | 20 | 12 | XC | | | | | | | | | | | | | | | | | |
| | 30 | 18 | XC | | | | | | | | | | | | | | | | | |
| | 40 | 24 | VC | XC | UC | | | | | | | | | | | | | | | |
| | 50 | 30 | VC | XC | UC | UC | | | | | | | | | | | | | | |
| | 60 | 36 | VC | XC | XC | UC | | | | | | | | | | | | | | |
| | 70 | 42 | C | VC | XC | XC | | | | | | | | | | | | | | |
| 1.5 GPM #15 | 20 | 10 | XC | | | | | | | | | | | | | | | | | |
| | 30 | 15 | XC | | | | UC | | | VC | VC | | | | VC | | | | | |
| | 40 | 21 | XC | | | | UC | | | VC | VC | | | | VC | | | | | |
| | 50 | 26 | VC | XC | UC | | UC | | | VC | VC | C | | | VC | | | | | |
| | 60 | 31 | VC | XC | XC | UC | UC | | | VC | VC | C | | | VC | | | | | |
| | 70 | 36 | VC | XC | XC | UC | UC | | | C | C | | | | | | | | | |

Chapter 7: Maintenance

Service the System



CAUTION: Before operation or service to the system, read and understand the machine's operator manual and the system operator manual. Chemical residue may be present on/in the OEM equipment. Use the correct personal protective equipment.

Before servicing the system or plumbing components, release the pressure and empty any product from the system and liquid delivery lines.

Jump Start, Weld On, or Charge the Machine

If jump starting the machine, make sure that you trip the circuit breaker to prevent damage to the system.

If charging the machine's batteries or welding on the machine, trip the circuit breaker.

Inspect the System

- Inspect the hoses for cuts, nicks, or abrasions before each use. Replace any damaged hoses immediately.
- Make sure that the strainers are clean.
- Make sure that all hoses and wiring are secure.
- Do a check for loose hoses, mounting hardware, and other components. Tighten if necessary.
- Do a check for damaged or missing decals. Replace if necessary.

Clean the System

- Thoroughly clean the system after each use.
- Avoid high-pressure spray when cleaning the spray system components, valves, and wiring connectors.

Storage of the System

Thoroughly clean the implement and the system before any long storage.

Winterize for Storage

Do not use fertilizer to winterize! The use of fertilizer to winterize will cause internal damage to the nozzle valves.

Thoroughly clean the spray system before winter storage.

Flush the spray system with clean water.

Winterize the spray system with RV antifreeze for winter storage. Proper winterizing of the machine with a CapstanAG system installed on it is essential. Make sure that the booms are completely full of antifreeze at 100% strength and that the solenoids are pulsed (sprayed) for a few minutes to make sure that the antifreeze remaining in the solenoids is at full strength.

Recommended Guidelines for Maintenance/Service

When servicing a system, CapstanAG recommends doing these:

- Do the baseline service checks and verify the original setup values in this manual.
- Identify individual performance problems. Evaluate possible causes and corrections for performance issues.
- Troubleshoot individual components and replace if needed.

Important: The primary service tool will be a multimeter that can measure voltage and resistance (ohms).

Baseline Evaluation Process

1. Make sure that the voltage readings are correct.
2. Do a visual check of all wire connections, harnesses, and connectors. Make sure that there are no loose, broken, or damaged parts.
3. Make sure that the correct tip size is used for the application.
4. Compare the current settings with those recorded in the manual during setup.
5. Make sure that the liquid product plumbing and the strainer(s) are clean.
6. Do a like component swap test to see if the failure follows the component.
7. Repair or replace any damaged components.
8. Do the system tests.

See the system testing information in this manual.

Strainers and Screens

Important: Clean the strainers on a regular basis.

Check the mesh size of the strainers and replace the screens if they are too coarse. Use 80-mesh or finer strainer screens. The filter manufacturer is specified only on the strainer housing. Only a color code identifies the strainer mesh size which is not consistent between filter suppliers. An 80-mesh screen is required to prevent nozzles from plugging. When selecting a strainer do not rely on the color coding. Check with the strainer manufacturer to be sure and select the 80-mesh strainer.

Plugged strainers will cause a reduction in system operating pressure.

When replacing the mesh screen on a Tee-jet Strainers:

1. Install and set the mesh screen in the strainer head.
2. Install the strainer cap.

Important: Failure to do this will likely result in a damaged mesh screen and overall strainer failure.

Nozzle Valves

Plugged nozzle valves can be classified into two categories:

- Plunger blockage
- Plunger stuck

Plunger blockage results when larger debris catches between the orifice and plunger seal. This is the smallest flow passage within the nozzle valve.

Stuck plungers result when smaller debris collects around the barrel of the plunger and binds the plunger in place. Symptoms of a blocked or stuck plunger are:

- Constant application
- Leaking when the nozzle is shut off
- No application

Note: Pinched or split O-rings will also cause nozzles to drip when shutoff.

Note: Operating a plugged nozzle valve for extended periods of time may result in a nozzle valve coil failure. Immediately clean any plugged nozzle valves.

Note: Before removal of the nozzle valves, make sure that the pressure has been released from the boom tubes.

If plugged nozzles are a frequent problem in a particular boom section, inspect the boom filter screens for plugged or damaged screens.

Recommendation: Use an 80-mesh screen to prevent the nozzles from plugging.


Do a check of the mesh size of the strainers and replace strainers if they are too coarse.

Clean the Nozzle Valve(s)



Warning: Chemical residues may be present in the agricultural equipment. Always use the proper personal equipment to avoid personal injury.

1. Release pressure from the system before servicing.
2. Clean the system before installation or service of the fittings, hoses, valves, or nozzles.

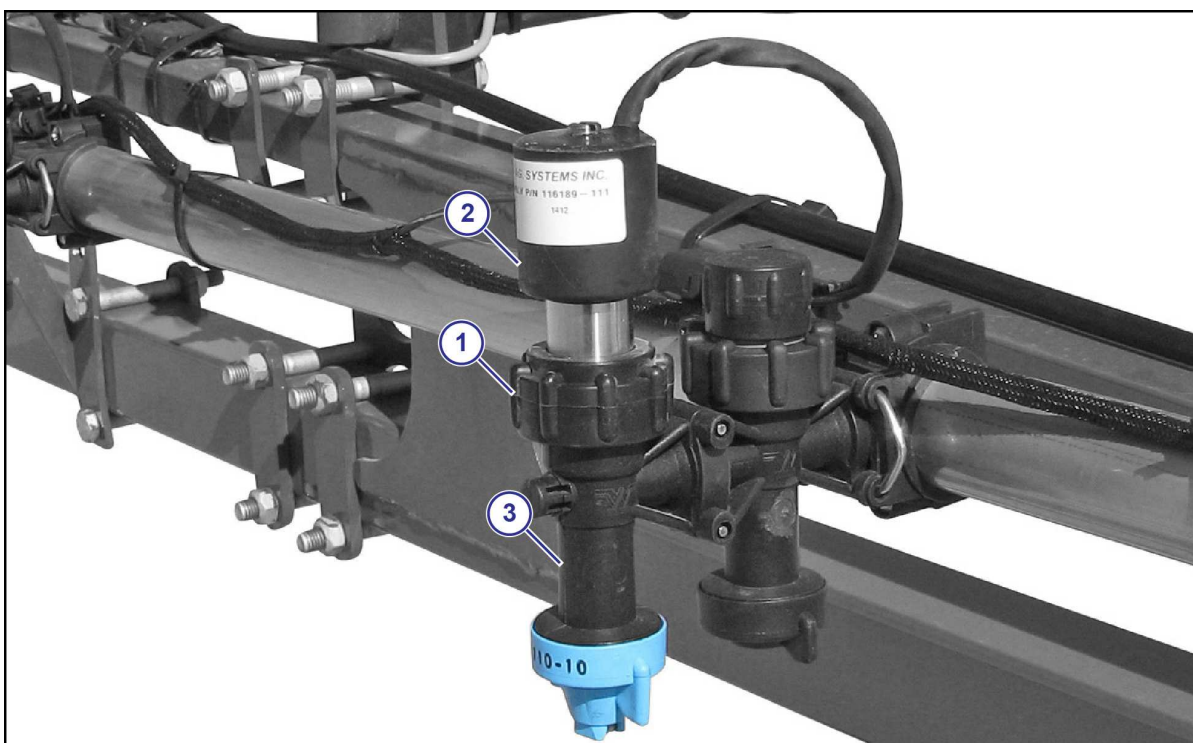

3. Unscrew the fly nut (1) counter-clockwise to remove the nozzle valve assembly (2) from the nozzle body (3).

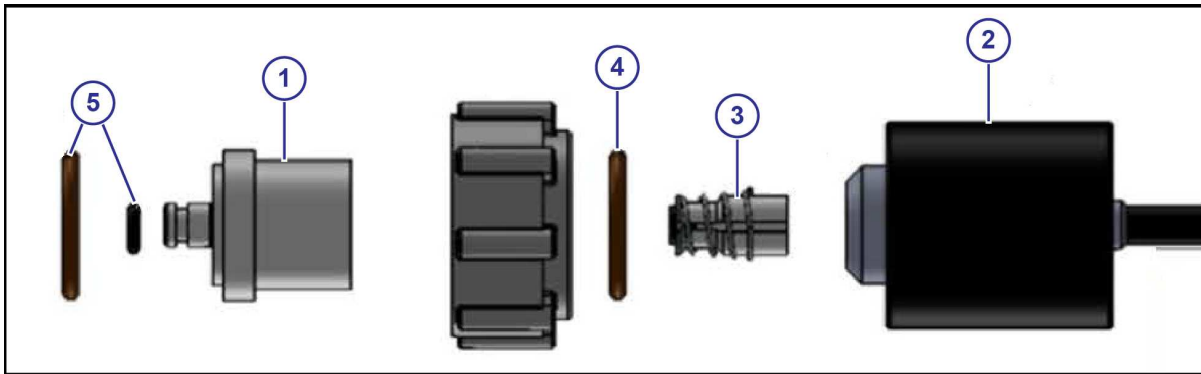


Fig. 52:

4. Use pliers around the valve body (1) to hold the assembly with the coil harness facing the ground.
5. Rotate the coil (2) counter-clockwise to remove the coil from the valve body.
6. Remove the plunger (3) from the coil.
7. Inspect the O-ring (4) on the coil.
8. Inspect the O-rings (5) on the valve body.
9. Wash the nozzle valve components to remove any debris.
10. Inspect the plunger for wear or damage.
11. If there is wear or damage to the plunger, replace the plunger.
12. Inspect the valve body.
Make sure that the orifice is not plugged with debris, worn, or damaged.
13. If there is wear or damage to the orifice, replace the valve body.
14. Wash the nozzle body components to remove any debris.

Important: Do not use brake cleaner. Brake cleaner can damage the seal.

Important: During installation, apply 40 in lbs of torque to the coil when it threads into the valve body to properly seat the O-ring.

Plunger Seal Inspection



Fig. 53:

After extended use, the plunger seal will wear a groove (*1*) where the seal impacts the hard orifice seat. Replace the plunger if worn or damaged. As the groove deepens the pressure capacity of the valve will decrease until the pressure capacity interferes with the operating pressure of the system. The result is erratic pulsing, often described as “flickering.” The system will operate normally at lower pressures until replacement parts can be installed. High operating pressures and abrasive chemicals will accelerate the wear of the plunger seal material.

- Clean the connector terminals
- Replace the coil

When replacement of the plunger is necessary, make sure that you have the correct plunger.

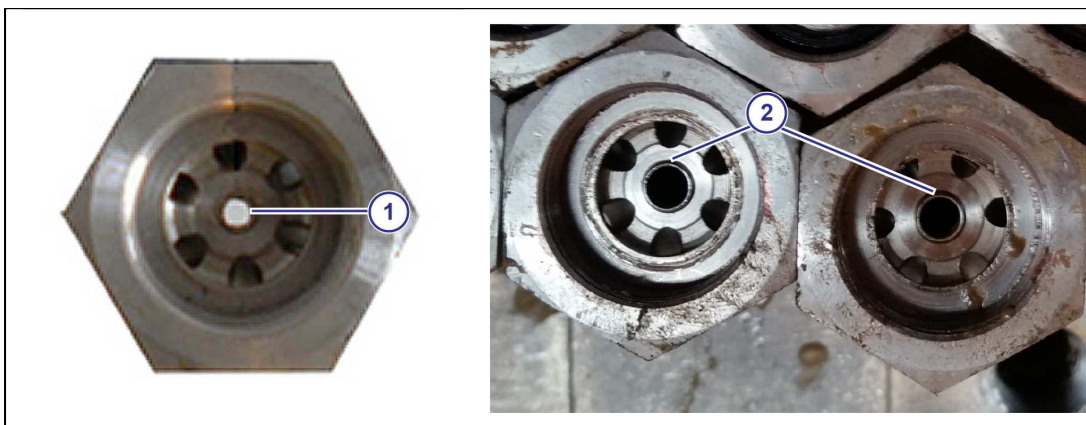


Fig. 54:

Make sure that the plunger seats are still smooth and not pitted.

- (1) A plunger seat on a new valve body
- (2) Examples of a worn plunger seat on a valve body

Update PinPoint™ II Software

This procedure is for updating PinPoint™ II and CapView II display.

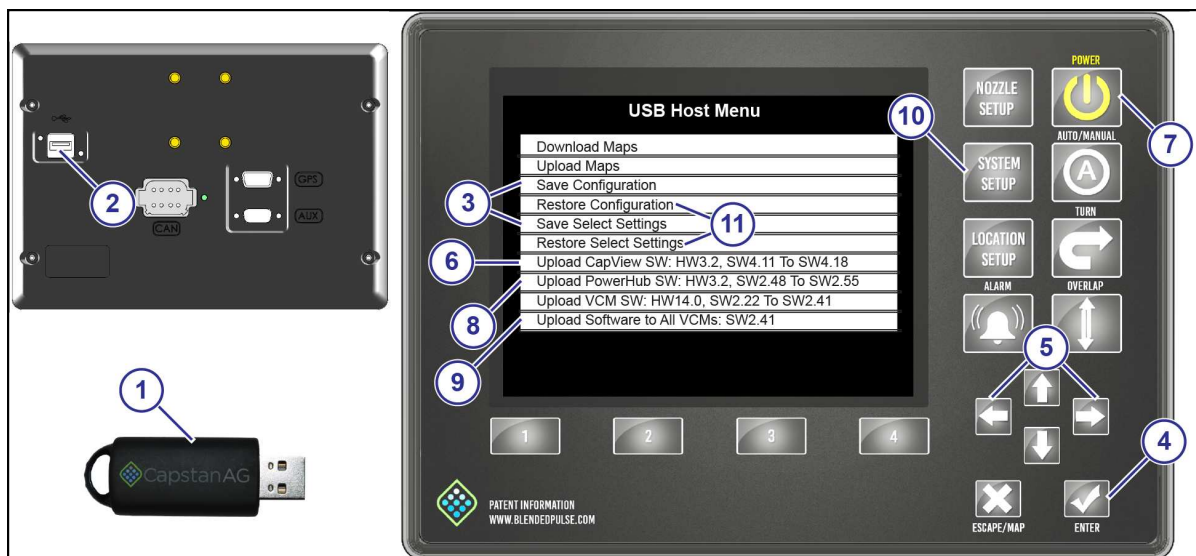


Fig. 55:

1. Insert the USB thumb drive (1) into the back of the CapView display (2).
2. The **USB Host Menu** will show on the screen.
3. Use the up or down arrow to go to the **Save Configuration** or **Save Select Settings** line (3).

Use **Save Configuration** if you are saving the information for the same sprayer and have not made significant system changes, like changing the number of VCMs.

For software released October 2018 and after, use **Save Select Settings** if you are saving information to use on a different sprayer or have made significant system changes, like changing the number of VCMs.

4. Press the **ENTER** button (4).
A message screen will show on the display.
5. Use the left or right arrow button (5) to select **YES**.
6. Press the **ENTER** button.
The CapView display will show the **USB Host Menu**.
7. Go to the **Upload CapView SW:** line (6).

Important: CapView software must be updated first.

On the list, on the upload software lines, there are two software versions that show. The software version on the left is the version that is currently on your hardware. The software on the right is the version available on the USB thumb drive. Do not upload the same version of software unless advised to do so by a CapstanAG representative.

8. Press the **ENTER** button.
The lights on the display will flash for a few moments, and the CapView display will automatically power down.
9. Wait five seconds and then press the **POWER** button (7).

The CapView display will turn on, and a splash screen will show a progress bar advancing across the screen.

You do not have to wait until the progress bar disappears before continuing with the procedure.

10. Use the up or down arrow to go to the **Upload PowerHub SW:** line (8).

11. Press the **ENTER** button.

12. **Upload Gateway Code** and a progress bar will show on the screen.

13. When the update process is complete, the **USB Host Menu** will show.

14. Go to the **Upload Software to All VCMs:** line (9).

Note: If your system has both 9-channel and 15-channel VCMs you must select the Upload Software for All VCMs for each version of hardware that is on your system.

15. Press the **ENTER** button.

16. **Upload VCM Code** and a progress bar will show.

17. When the update process is complete, the **USB Host Menu** will show.

18. Remove the USB thumb drive from the back of the CapView display.

19. Press the **SYSTEM SETUP** button (10).

The first line of the **System Setup** menu is the **Operation Mode** line.

20. Make sure that the operation mode is correct:

- Synchro
- SharpShooter
- N-Ject

21. Use the up or down arrow to go to the **Advanced Settings** line.

22. Press the **ENTER** button.

23. Use the up or down arrow to go to the **Factory Reset** line.

24. Press the **ENTER** button.

A message screen will show on the display.

25. Use the left or right arrow button to select **YES**.

26. Press the **ENTER** button.

The display will power off.

27. Wait five seconds and then press the **POWER** button.

A message will show on the CapView display.

28. Press the **ENTER** button.

29. Insert the USB thumb drive into the back of the CapView.

The **USB Host Menu** screen will show.

30. Use the up or down arrow to go the **Restore Configuration** or **Restore Select Settings** line (11).

If you saved configurations, use the **Restore Configuration**.

For software released October 2018 and after, if you saved select files use the **Restore Select Settings**.

31. Press the **ENTER** button.

A message will show.

32. Use the left or right arrow button to select **YES**.

33. Press the **ENTER** button.

The display will power down.

34. Remove the USB thumb drive from the back of the CapView display.

35. Press the **POWER** button.

36. Press the **SYSTEM SETUP** button.

37. Make sure that the system shows the correct **Operation Mode** and that other settings are correct.

Chapter 8: Troubleshooting

Troubleshooting Charts

Table: CapView System Errors

| Error Message | Cause | Correction |
|---------------------|--|---|
| System Normal | This indicates that the system is operating correctly | |
| Missing Gateway | Communication to the Gateway hub has been lost | Do a check of the connections (key switched power, ignition, and battery power) and then cycle power to the system |
| Missing VCM | Communication to the VCMs has been lost | Do a check of the connections (key switched power, ignition, and battery power) and then cycle power to the system |
| No GPS Attached | No GPS messages are being received | Cycle the GPS power |
| | | Do a check of the GPS antenna connections and fuses |
| No GPS Signal | GPS messages are being received but are empty | Wait for the GPS antenna to acquire satellites |
| | Faulty GPS antenna | Replace the GPS antenna |
| | Faulty GPS receiver | Replace the GPS receiver |
| | Incorrect GPS settings <ul style="list-style-type: none"> VTG is less than 10 Hz GGA is less than 10 Hz | Wait 10 seconds while the GPS verifies itself. Change GPS receiver settings to: <ul style="list-style-type: none"> Baud Rate: 19200 to 115200 GGA: 10 Hz or more VTG: 10 Hz or more ZDA: 1 Hz or more |
| Key Fob Mode Active | The key fob mode is active. The alarm light illuminates, but the alarm does not sound | System Setup Nozzle Control (Key FOB): Change to 12V Active to resume operation. |
| Valves Not Found | The system uses the number of valves expected line to determine how many it should find, and at machine/system start, the system does not find all of the valves | Identify the missing valve(s). Use the Location Setup Menu or the key fob. Repair or replace the valve(s) to resume operation. After correcting the problem, turn the system off and back on to clear the error after fixing the problem. |
| Compass Failure | Internal compass on the PinPoint™ II hub is faulty | Replace the PinPoint™ II hub or change the backup detection method to: <ul style="list-style-type: none"> off = fwd to continue without compass |

| Error Message | Cause | Correction |
|------------------------|---|--|
| Overlap Out Of Bounds | Distance traveled has exceeded three miles from the point of origin (start of map) | Save or erase the map. Refer to mapping in the operation section |
| Valve Lodged Open | Debris in the valve | Clean the valve |
| Valve Lodged Closed | Debris in the valve | Clean the valve |
| Coil Circuit Open | Coil wire is pinched, cut, or broke. Coil is disconnected | Do a check of the coil connection and resistance (21 to 23.5 ohm) |
| Coil Circuit Short | Coil wire is pinched, cut, or broke. Internal coil short | Do a check of the coil connection and resistance (21 to 23.5 ohm) |
| Gateway Reset | PinPoint™ II lock/missing VCM error | Alarm will sound until the ALARM button is pressed. The error will continue to show for a few seconds after the button is pressed. Operation will continue normally, and the alarm will clear itself. |
| No Rate Control Signal | No communication with the rate controller | Do a check of the connections for the rate controller and CapView Make sure that the baud rate on the CapView and the rate controller are the same |
| GGA Msg Rate < 10 Hz | Incorrect GPS settings | Change the GGA message rate to at least 10 Hz on the GPS receiver |
| VTG Msg Rate < 10 Hz | Incorrect GPS settings | Change the VTG message rate to at least 10 Hz on the GPS receiver |
| Pump Seal Shutdown | The system is below the value set in the System Setup menu for more than 2 seconds | Fill the tank and then restart the pump. To restart the pump, press the UP arrow or the AUTO/MAN button twice |
| System Pressure Sensor | The system pressure is outside of the range of the inlet pressure sensor | Do a check of the System Setup menu and adjust the pressure with the correct operating range. |
| | | Do a check of the pressure sensor, replace if necessary |
| | | Do a check of the wiring, repair as necessary. |
| Flow Error | Flowmeter calibration number is incorrect | Do a check of the flowmeter calibration |
| | Damaged flowmeter | Do a check of the flowmeter and replace as necessary |
| | Wrong tip size on CapView | Change the value on the CapView |
| | Wrong valve size of CapView | Change the value on the CapView |
| | Boom leak | Do a check of the booms and repair any damage |

| Error Message | Cause | Correction |
|-----------------------|--|---|
| Flow Error | Section valve not operating | Do a check of the section valves and repair/replace as necessary |
| | Plugged strainers | Clean or replace the strainers |
| | Lodged plungers | Clean or replace the plungers |
| Conventional Flow | This is used only is SharpShooter™ mode and information only. Conventional Flow is used to spray without the CapstanAG valves. | |
| Low Flow Alt. Control | This is used only for John Deere and is information only. | |
| Slow Min Flow Error | Tips are too large | Find and install tips that are the correct size |
| | Speed too slow | Increase speed |
| | Pressure is set to high | Make sure that the settings on each pressure controlled by-pass valve are correct |
| Fast Max Flow Error | Tips are too small | Find and install tips that are the correct size |
| | Speed too fast | Decrease speed |
| | Pressure is set to low | Make sure that the settings on each pressure controlled by-pass valve are correct |
| Undefined Valve Error | Shows along with the Missing VCM error because the system does not have information on all of the valves which is causing a CAN communication error. | |

Table: System Operation Errors

| Problem | Cause | Correction |
|-------------------|---|---|
| Under application | Tips are too small | Find and install tips that are the correct size |
| | Plugged tips | Clean or replace the tips |
| | Plugged filter(s) | Clean or replace the filter(s) |
| | Filter(s) not correctly installed | Correctly install filter(s) |
| | Plugged, kinked, or collapsed hoses | Check all hoses and replace as needed |
| | Pump is not turned on | Refer to the sprayer manual for instructions to start the pump |
| | Outrunning sprayer liquid system capability | Slow down |
| | | Run at optimum pressure (not too low, not too high) |
| | Incorrect rate settings | Check and adjust the rate settings |
| | Incorrect calibration settings | Refer to the rate controller and/or PinPoint™ II manuals for instructions |

| Problem | Cause | Correction |
|----------------------|--|---|
| Under application | Faulty radar | Replace the radar |
| | Poor GPS satellite signal | Make sure that the GPS is working correctly |
| | Faulty rate controller switch(es) | Locate and replace the faulty switch(es) |
| | Servo valve not working correctly | Do a check of the Servo valve and replace as necessary |
| | Flowmeter calibration number is incorrect | Do a check of the flowmeter calibration |
| | Faulty flowmeter | Repair or replace the flowmeter |
| Over application | Tips are too large | Find and install tips that are the correct size |
| | Worn tips | Replace the tips |
| | Speed too slow | Increase speed |
| | Incorrect rate settings | Do a check of the rate settings and adjust as necessary |
| | Incorrect calibration settings | Refer to the rate controller and/or PinPoint™ II manuals for instructions |
| | Servo valve not working correctly | Do a check of the Servo valve and replace as necessary |
| | Flowmeter calibration number is incorrect | Do a check of the flowmeter calibration |
| | Faulty flowmeter | Repair or replace the flowmeter |
| Rate instability | Low voltage to the rate controller | Test the voltage and repair as needed |
| | Faulty flowmeter | Repair or replace the flowmeter |
| | Faulty speed sensor reading | Do a check of the radar and replace as needed |
| | Collapsed suction hose | Replace the suction hose |
| | Inlet plugged | Do a check of the inlet and clean as necessary |
| | Incorrect valve calibration settings | Do a check of the valve calibration settings and adjust as necessary. Refer to the rate controller manual |
| | Incorrect PinPoint™ II system gain | Do a check of the PinPoint™ II system gain and adjust as needed |
| | PinPoint™ II run/hold parameter is too short | Incrementally adjust up the PinPoint™ II run/hold parameter to decrease the instability |
| | Air in the spray boom | Bleed air from the system |
| | Faulty rate controller | Replace the rate controller |
| Pressure instability | Faulty rate controller | Replace the rate controller |
| | Worn or sticky poppet(s) | Do a check of the poppet(s) and replace as needed |
| | Incorrect PinPoint™ II system gain | Do a check of the PinPoint™ II system gain and adjust as needed |

| Problem | Cause | Correction |
|---|---|---|
| Pressure instability | Faulty pressure sensor | Replace the pressure sensor |
| Single nozzle valve drips when shut off | Plunger is lodged with debris | Clean the nozzle valve |
| | Plunger is worn | Replace the plunger |
| | O-ring is pinched or broken | Replace the O-ring |
| Single nozzle valve sprays erratically | Plunger is worn | Replace the plunger |
| Single nozzle valve will not shut off | Plunger is lodged with debris | Clean the nozzle valve |
| | O-ring is pinched or broken | Replace the O-ring |
| Section will not spray | Blown fuse on VCM extension harness | Replace the fuse on the VCM harness |
| | Faulty VCM | Repair or replace the VCM |
| | Damaged VCM extension harness | Repair or replace the VCM extension harness |
| | Rate controller is not activating the section | Make sure that the section signal on Gateway hub. Refer to the CapView display pinout identification in the schematics section. Repair or replace the rate controller components. |
| Skips at the edges of a field | Overlap distance is set too low | Increase the overlap distance to at least 40 inches |
| | Incorrect GPS antenna location | Do a check of the measurements to the GPS antenna location |
| | PinPoint™ II display overlap settings are incorrect | Set the look ahead time and overlap distance to prevent skips |
| | Incorrect ball valve settings | Make sure that the ball valves are turning on soon enough or turning off late enough |

Table: Rate Controller Errors

| Problem | Cause | Error |
|-------------------|--------------------|---|
| Under application | Tips are too small | Find and install tips that are the correct size |
| | | Do a check of the low rates with a Wilder Quick Calibrator or with a catch time test at each nozzle: <ul style="list-style-type: none"> Oz/min per nozzle = GPA x Test Speed (mph) x Nozzle Spacing (inches) / (5940 x 128) Oz/min per nozzle = G/1000 ft2 x Test Speed (mph) x Nozzle Spacing (inches) / (136 x 128) |
| | Plugged filters | Do a check of the filters and replace as needed |
| | | Make sure that the filters are installed correctly |

| Problem | Cause | Error |
|-------------------|---|---|
| Under application | Plugged lines | Make sure that the lines are clean and do not have any kinks |
| | Shutoff valve is partially closed | Make sure that each shutoff valve is fully open |
| | Control Valve Type: <ul style="list-style-type: none"> Use A, B, C, or D as it applies to your Machine | A. Pressure set too low on the flow by-pass lines <ul style="list-style-type: none"> Make sure that the settings on each pressure controlled by-pass valve are correct B. In-line Servo flow control valve is stuck <ul style="list-style-type: none"> Make sure that the Servo flow control valve is operating correctly C. Servo signal wire polarity is switched <ul style="list-style-type: none"> Make sure that the valve opens with a rate increase Make sure that the valve closes with a rate decrease D. Top PWM valve is set too low <ul style="list-style-type: none"> Adjust the rate controller PWM valve to the desired setting |
| | Electric Servo Valve pump control is stuck | Make sure that the electric Servo pump control is operating correctly |
| | PWM spool is stuck | Change the rate to observe whether the rate change is slow, limited, or does not change at all. Replace as needed |
| | Worn pump | Speed data error |
| | | Incorrect speed calibration number |
| | | Poor GPS satellite reception/number of satellites |
| | | Spraying too fast which outruns the liquid system capability |
| | Worn flowmeter | Remove the rate smoothing feature |

| Problem | Cause | Error |
|-------------------|---|---|
| Under Application | Worn flowmeter | <p>Put the rate controller in manual mode at a test speed</p> <p>Note: Putting the rate controller in manual mode will lock the Servo valve position, unless the valve position is changed manually.</p> <p>If the rate becomes stable, then it is one of these:</p> <ul style="list-style-type: none"> • Worn Servo Valve • Worn PWM Valve <p>If the rate remains unstable, it is usually the flowmeter signal instability.</p> <p>Manual increase the rate. The rate and pressure should increase. If the rate does not increase, then it is one of these:</p> <ul style="list-style-type: none"> • Worn Servo Valve • Worn PWM Valve <p>Manually decrease the rate. The rate and pressure should decrease. If the rate does not decrease, then it is one of these:</p> <ul style="list-style-type: none"> • Worn Servo Valve • Worn PWM Valve |
| Over Application | Worn tips or tips that are too big | <p>Find and install tips that are the correct size</p> <p>Do a check of the low rates with a Wilder Quick Calibrator or with a catch time test at each nozzle:</p> <ul style="list-style-type: none"> • Oz/min per nozzle=GPA x Test Speed (mph) x Nozzle Spacing (inches) / (5940 x 128) • Oz/min per nozzle=G/1000 ft² x Test Speed (mph) x Nozzle Spacing (inches) / (136 x 128) |
| | Incorrect speed calibration number | Adjust the speed calibration setting |
| Rate Instability | Check the rate controller calibration numbers | <p>Do a check of the valve type:</p> <ul style="list-style-type: none"> • Standard • Fast • PWM • PWM Close • Etc. |
| | | Do a check of the valve calibration. Refer to the rate controller information for the cal number for the specific valve type |
| | Worn or sticking Servo valve | Do a check of the Servo valve and replace as needed |

| Problem | Cause | Error |
|------------------|-------------------------------------|--|
| Rate Instability | Worn or sticking PWM valve | Do a check of the PWM valve and replace as needed |
| | Flowmeter signal instability | Make sure that the flowmeter signal is correct |
| | Plugged, kinked, or collapsed hoses | Do a check of all hoses and replace as needed |
| | Controller pressure instability | Isolate the CapView from the rate controller and then put the system in manual mode at 50% |
| | | Do a check of the rate controller pressure sensor and replace as needed |
| | | Make sure that the rate controller calibration numbers are correct |

Interchange the Components

The system includes a number of multiple parts:

- Nozzle Valves
- Extension Harnesses
- VCMs

When troubleshooting failed components, it can be helpful to replace the failed part with a working part at another location. If the problem follows the failed part to the new location, repair or replace the failed part.

When troubleshooting a failed VCM, a location setup procedure is necessary to show the VCM in the correct location.

If the problem does not follow the failed part, then the problem is likely elsewhere in the system and other troubleshooting means may be followed.

Note: Use caution when failed parts are interchanged with a part that is operating correctly, in rare cases the failed component may cause other components to fail at the new location.

Fuses

Blown fuses are indicators of a short or overload condition. Do not replace a blown fuse with a larger fuse. Larger fuses may result in component failures.

| Fuse Location | Rating | Type | Color |
|--|--------|---------|-------|
| Key Switched Power Harness | 5 A | ATO/ATC | Tan |
| PinPoint™ II display (CapView) extension harness | 15 A | ATO/ATC | Blue |
| VCM Extension Harness | 15 A | ATO/ATC | Blue |

Coil Test

Coil failures are often the result of two factors:

- Extended valve use with a plugged nozzle
- Extended use in corrosive environments

Recommendation: Clean any plugged nozzle valves immediately.

Recommendation: Rinse the inside of the booms, and wash the outside of the coils with clean water as often as practical.

Use a voltmeter to measure the ohms of resistance across pins A and B on the coil connector.

Correct resistance is:

- 7-watt coils resistance—21 ohms to 23.5 ohms
- 12-watt coils resistance—10 ohms to 11.5 ohms

If correct resistance is not found:

- Clean the connector terminals and retest
- Replace the coil

Circuit Breaker



Fig. 56:

The circuit breaker has an automatic/manual trip button (1) and a manual reset lever (2).

A tripped circuit breaker is an indicator of a short or overload condition.

Do not reset the circuit breaker without looking into the cause of the tripped circuit breaker.

Note: The circuit breaker is usually located near the battery or in the battery compartment. The 60A or 80A circuit breaker is equipped with a manual trip. To reset the breaker, rotate the tripped lever back into the reset position.

Important: When disconnecting the battery terminals, remove the negative (-) cable first, then remove the positive (+) cable. When connecting cables, connect the positive (+) cable first, then connect the negative (-) cable.

Battery Voltage Test

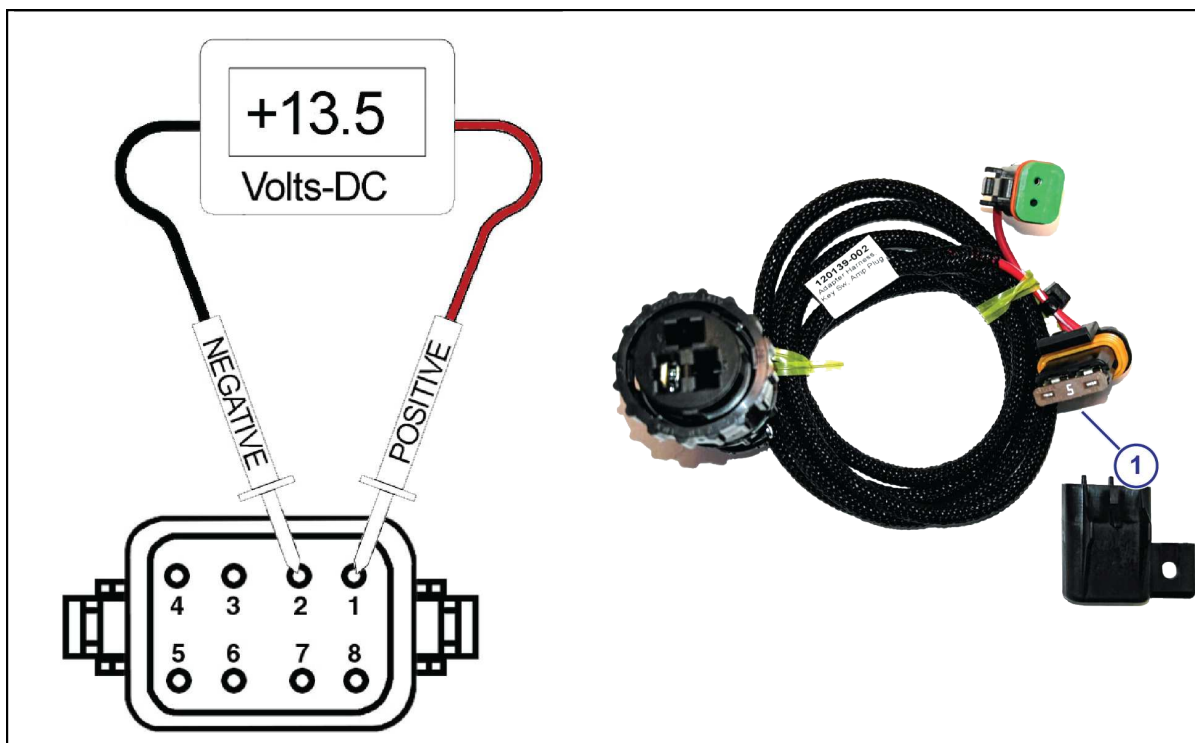


Fig. 57:

Disconnect the CapView harness (8-pin Deutsch connector) on the back of the CapView.

- With the engine of the machine running, use a voltmeter to observe that there is a 13.5 VDC between pin 1 and pin 2.
- With the engine of the machine off, there is a 12.0 VDC between pin 1 and pin 2.

Make sure that the polarity is accurate by looking at the positive voltage when the red (positive) probe is connected to pin 1, and the black (negative) probe is connected to pin 2.

If the polarity is accurate, but there is still a problem, check the voltage between pin 2 (GND) and pin 6 (SWPWR).

If there is no voltage present between pin 2 (GND) and pin 6 (SWPWR), do a check of:

- The 5 A in-line fuse (1) on the key switched power harness.

If the fuse is good, do a check of the pins on the key switched power harness connector that connects to the display harness.

Do a check of the fuse on the machine side of the key switched power.

- The 15 A fuse on the CapView extension harness at the Gateway hub.
- The 80 A circuit breaker at the machine battery.
- The PinPoint™ II battery harness connections.
- The condition of the battery and the alternator.

Do a Check of the System Load Capacity

1. Start the engine of the machine.
2. Turn on the CapView and all of the boom sections.
3. Turn on all of the electrical loads, including the air conditioning, foam marker monitors, etc.
4. See what the voltage readout on the CapView is on the *System Setup Menu* screen.

PinPoint™ II nozzle valves operate best at 12 VDC or higher. Using less than 12 VDC will result in reduced pressure capacity. This will often result in erratic nozzle pulsing, sometimes described as flickering. Also, do a check of the nozzle valves for worn plunger seals.

If low voltage is observed, do a check of:

- The battery terminals and clean as necessary
 - The condition of the battery
 - The condition of the alternator
 - The condition of the connections
-
- Check and clean the battery terminals.
 - Check the battery condition.
 - Check the alternator condition.
 - Check the condition of the connections and retest.

VCM Voltage Test

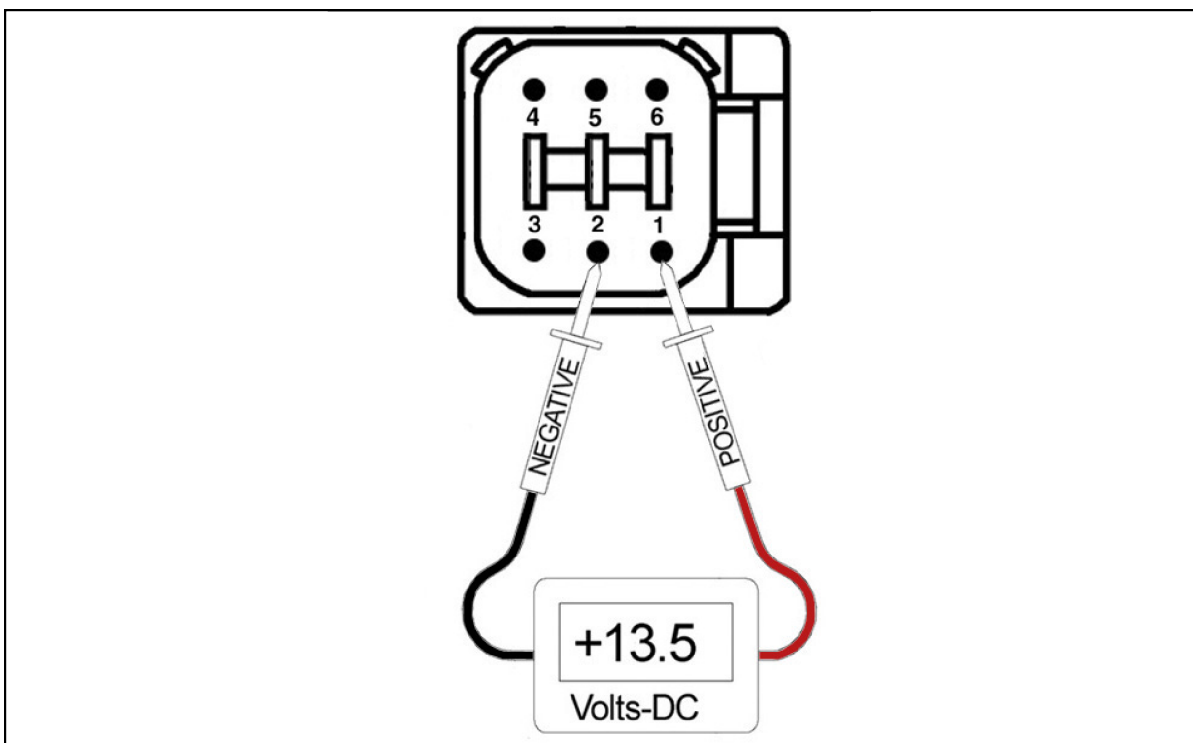


Fig. 58:

Disconnect the VCM extension harness (6-pin Deutsch connector) at each boom section VCM.

- With the engine of the machine running, use a voltmeter to observe that there is a 13.5 VDC between pin 1 and pin 2.
- With the engine of the machine off, there is a 12.0 VDC between pin 1 and pin 2.

Make sure that the polarity is accurate by looking at the positive voltage when the red (positive) probe is connected to pin 1, and the black (negative) probe is connected to pin 2.

If there is no voltage present between pin 2 and pin 6:

- Turn on the key and cab switch.
- Do a check of the 15 A fuse on the VCM extension harness at the Gateway hub.
- Do a check of the voltage at the hub.
- Do a check of the 80 A circuit breaker at the machine battery.
- Do a check of the PinPoint™ II battery harness connections.

VCMs require constant power on pin 1 and key switched power on pin 6.

Boom Shutoff Signal Test

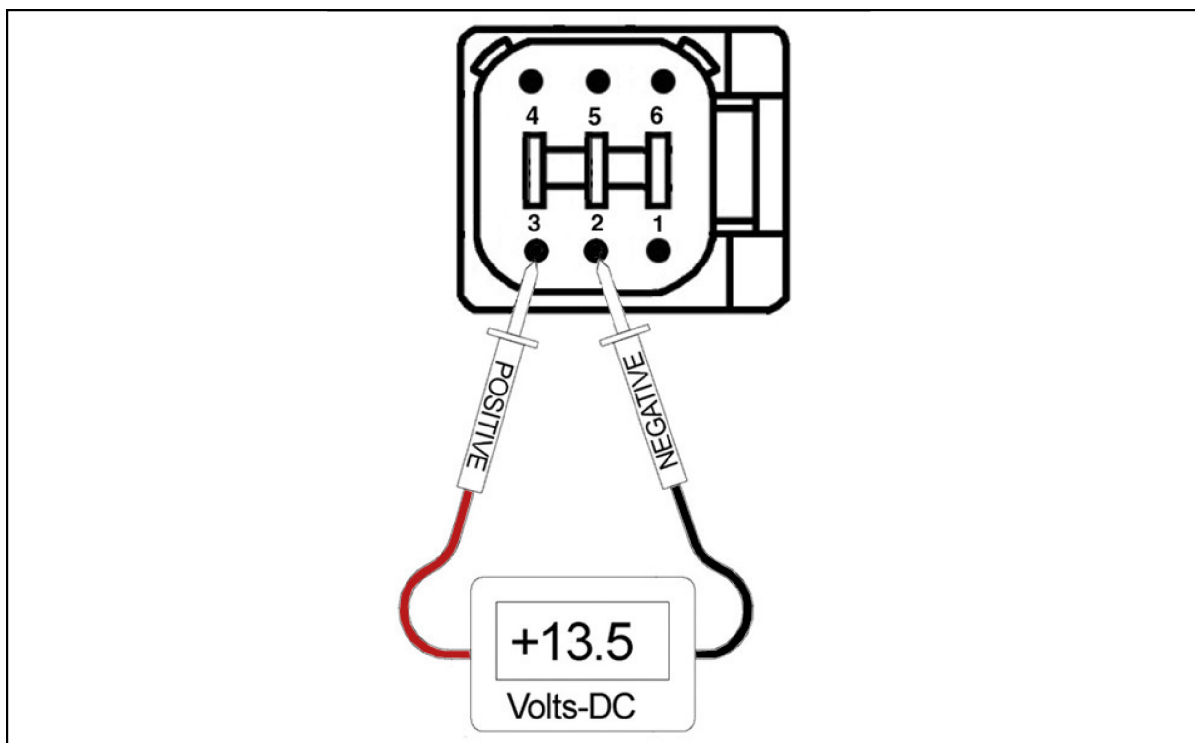


Fig. 59:

Disconnect the VCM extension harness (6-pin Deutsch connector) from the VCM.

Turn on the boom section shutoff switch for the VCM being tested.

- With the engine of the machine running, use a voltmeter to observe that there is a 13.5 VDC between pin 2 and pin 3.
- With the engine of the machine off, there is a 12.0 VDC between pin 2 and pin 3.

Make sure that the polarity is accurate by looking at the positive voltage when the red (positive) probe is connected to pin 3, and the black (negative) probe is connected to pin 2.

If there is no voltage present, do a check of:

- The 80 A circuit breaker at the machine battery
- The 15 A fuse on the VCM extension harness at the Gateway hub
- The voltage at the hub
- The PinPoint™ battery harness connections
- The boom shutoff switches

For a VCM to spray there must be 12 V on pin 1 (constant power), pin 3 (boom signal), and pin 6 (key switched power).

Power to the Pressure Sensor Input Test

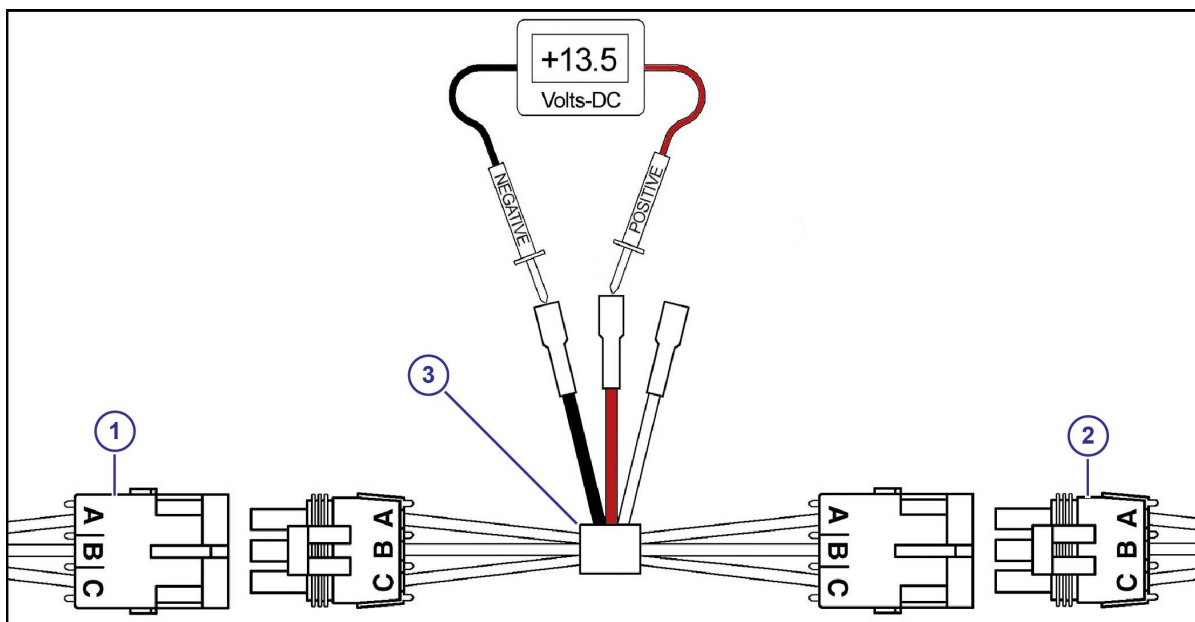


Fig. 60:

Disconnect the pressure sensor (1) from the pressure sensor harness (2). Connect one end of the pressure sensor breakout harness diagnostic tool (3) into the pressure sensor shroud connector. Connect the other end into the pressure sensor harness tower connector.

Use a voltmeter to observe that there is 13.5 VDC between the red and black wire on the pressure sensor breakout harness with the engine running, or 12.0 VDC without the engine running.

Be sure the polarity is accurate by observing that there is positive voltage when the red (positive) probe is connected to the red pressure sensor breakout harness wire, and the black (negative) probe is connected to the black pressure sensor breakout harness wire.

If no voltage is present, do a check of:

- The fuse located at the battery
- The battery connections
- The condition of the battery
- The condition of the alternator

Pressure Sensor Signal Test

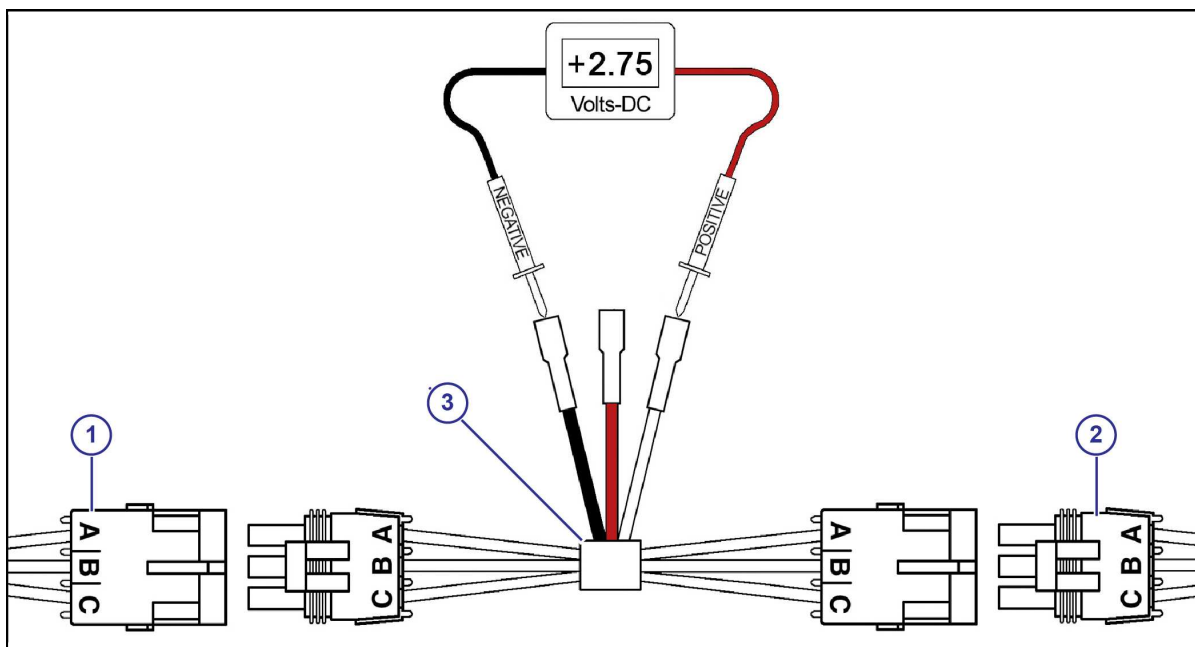


Fig. 61:

Disconnect the pressure sensor (1) from the pressure sensor harness (2). Connect one end of the pressure sensor breakout harness diagnostic tool (3) into the pressure sensor shroud connector. Connect the other end into the pressure sensor harness tower connector.

With the engine running and the system is turned on, use the rate controller to establish 50 psi on the pressure gauge.

Use a voltmeter to observe that there is 2.75 VDC between the black and white wires on the pressure sensor breakout harness.

Using the rate controller, adjust the pressure to 100 psi. The voltmeter should read 5.0 VDC.

If accurate voltage is not present:

- Verify the accuracy of the pressure gauge on the sprayer.
- Do a check of the power to the pressure sensor.
- Use the serial diagnostics to check the pressure sensor calibration.
- Replace the pressure sensor.

Technical Bulletin

This technical bulletin was originally produced July 11, 2001. The latest revision to this bulletin was made November 1, 2017.

Spray Skips from Poor Pulse Blending

Over the years, CapstanAG field engineers have received many questions about Blended Pulse™ spraying and its potential for causing skips in the field. In rare instances, skipping has been documented in the field. This technical bulletin is intended to explain pulse blending, and the techniques used to provide optimum spray coverage and to prevent skipping.

What is Blended Pulse™ spraying? Each nozzle in a Blended Pulse™ spray system emits 19 spray pulses per second. Adjacent nozzles have alternate timing. The alternating pulses, the overlapping spray patterns, and the natural dispersing of droplets, blend together to provide consistent coverage of the target.

What makes the pulses blend? Below is an illustration of what a blended pulse spray pattern might look like if it were sprayed upon a flat surface. This spray pattern is similar to a #8 size flat fan spray tip (with a 110° fan angle) that is spraying 5 GPA at 15 mph with a 50 psi boom pressure. The nozzles are 20 in apart. Each tip is rotated 12.5° to prevent pattern interference between nozzles. The minimum boom height is 21 in above the spray target.

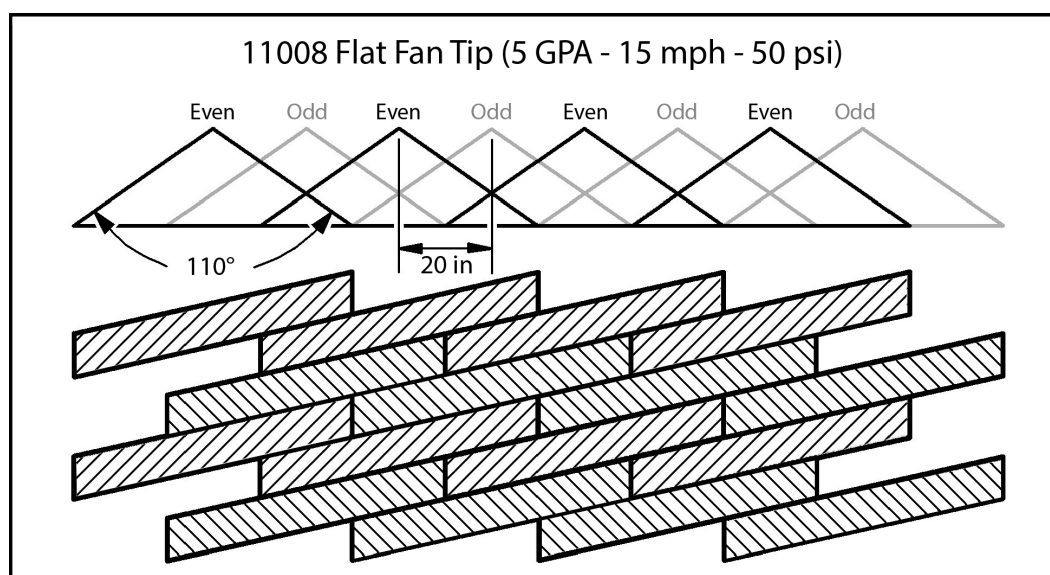


Fig. 62: 11008 Flat Fan Tip

In this example, each nozzle sprays 1/3 of the time, but adjacent nozzles alternate and overlap to fill in areas between the nozzles. As the sprayer increases speed, rate, or boom height, the pulses become wider, this provides additional overlap, better pulse blending, and increased spray coverage.

As the sprayer decreases speed or rate, skips may begin to appear. For this example, a smaller tip size would be recommended if slower speeds are desired.

Pattern width and natural droplet dispersion are not shown in the diagram. These factors help to smooth out the pulses and fill in skips. The amount of droplet dispersion depends upon the style of tip being used. For example, low-drift tips typically emit large droplets and provide minimal droplet dispersion.

What causes skipping? Below is the same illustration from the previous page except that 80° fan angle tips are used rather than 110° tips. In this case, the 21 in boom height does not provide adequate nozzle overlap and skips can be seen. Tips emitting small droplets, with plenty of droplet dispersion, will fill in large skips. Large

droplet tips may not fill in the skips, and this may result in poor coverage. The skips appear as diagonal lines in the direction of travel. The angle of the diagonal depends upon the speed of the sprayer.

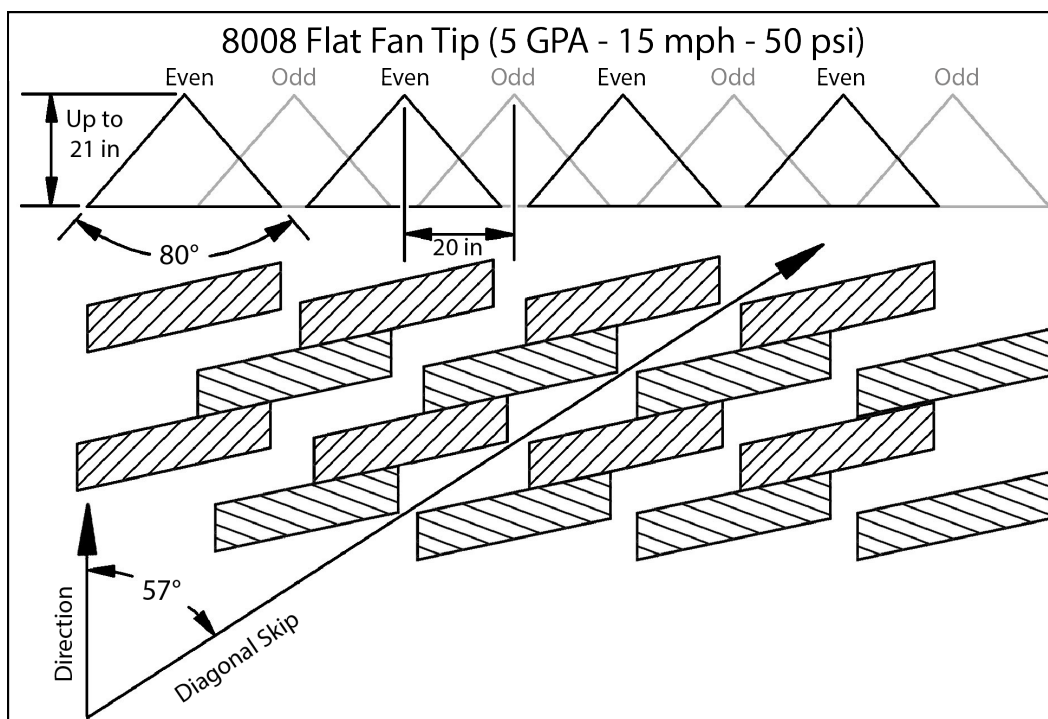


Fig. 63: 8008 Flat Fan Tip

To Prevent Skipping

1. Use wide-angle spray tips and appropriate boom heights to provide 150% nozzle overlap.
 - For 80° tips, use 36 in or greater boom height.
 - For 110° tips, use 24 in or greater boom height.
 - Use pressures which fully develop the intended fan angle.
2. Avoid pulse duty cycles below 33%.
 - Use appropriately sized spray tips for the desired speed, rate, and pressure ranges.
 - Avoid speeds in the lower 1/3 of the speed range.
 - Avoid rates in the lower 1/3 of the rate range.
3. Use additional caution when using drift control tips or drift control additives which increase droplet size and reduce droplet dispersion. Follow the boom height, duty cycle, and tip selection recommendations to make sure that there is adequate spray coverage.
4. Always read and follow chemical label instructions. Agronomic and environmental factors significantly affect efficiency of the chemicals, and will magnify the adverse effects of poor coverage. Follow boom height, duty cycle, and tip selection recommendations for hot and dry field conditions, large/mature weed pressures, etc.
5. Always apply Blended Pulse™ broadcast sprays using a 19 Hz or greater pulse frequency. The CapstanAG master module and display allow the pulse frequency to be reduced for non-sprayer applications, when uniform coverage is not required.

Chapter 9: Schematics

Connector Pin Identification

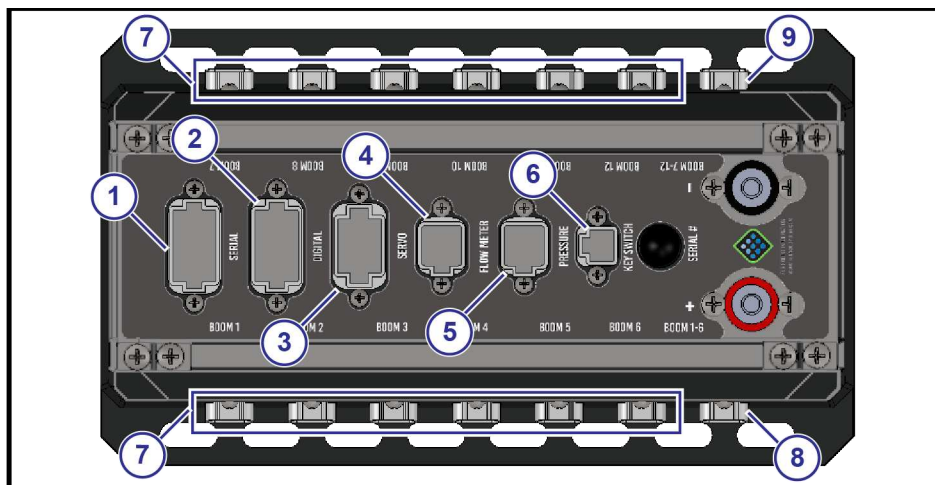


Fig. 64:

Table: Serial Connector Port (1)

| Pin Number | Description | Pin Number | Description |
|------------|-------------|------------|-------------------|
| 1 | RS232 Tx1 | 7 | Speed 2 |
| 2 | RS232 Rx1 | 8 | Ground |
| 3 | Ground | 9 | 12 V Key Switched |
| 4 | Program DTR | 10 | Ground |
| 5 | Program RTS | 11 | Rx2 |
| 6 | Speed 1 | 12 | Tx2 |

Table: Digital Connector Port (2)

| Pin Number | Description | Pin Number | Description |
|------------|-------------------|------------|----------------------|
| 1 | ISO CAN HI | 7 | Digital OUT |
| 2 | ISO CAN LO | 8 | Ground |
| 3 | 12 V Key Switched | 9 | Digital IN |
| 4 | Float Switch IN | 10 | 12 V Key Switched |
| 5 | Ground | 11 | Implement Switch OUT |
| 6 | Backup Alarm IN | 12 | Implement Switch IN |

Table: Servo Connector Port (3)

| Pin Number | Description | Pin Number | Description |
|------------|------------------|------------|------------------|
| 1 | 12 V Servo Power | 5 | Ground |
| 2 | Servo Input INC | 6 | Servo Output DEC |
| 3 | Servo Input DEC | 7 | Servo Output INC |
| 4 | Ground | 8 | 12 V Valve Power |

Table: Flowmeter Connector Port (4)

| Pin Number | Description | Pin Number | Description |
|------------|-----------------------------|------------|-----------------------|
| 1 | Power from Controller | 4 | Ground to Flowmeter |
| 2 | Signal Output to Controller | 5 | Signal from Flowmeter |
| 3 | Ground from Controller | 6 | Power to Flowmeter |

Table: Pressure Connector Port (5)

| Pin Number | Description | Pin Number | Description |
|------------|-------------------------|------------|-------------------------|
| 1 | 12 V Key Switched Power | 4 | Ground |
| 2 | Pressure Input 1 | 5 | Pressure Input 2 |
| 3 | Ground | 6 | 12 V Key Switched Power |

Table: Key Switch Connector Port (6)

| Pin Number | Description | Pin Number | Description |
|------------|-------------------------|------------|-------------|
| 1 | 12 V Key Switched Power | 2 | Ground |

Table: Booms 1 to 12 Connector Ports (7)

| Pin Number | Description | Pin Number | Description |
|------------|--|------------|--------------------|
| 1 | 12 V Battery | 4 | CAN High |
| 2 | Ground Battery | 5 | CAN Low |
| 3 | Boom Section Signal (12 V On/0 V Off) | 6 | Key Switched Power |

Table: Boom Section 1 to 6 Connector Port (8)

| Pin Number | Description | | Pin Number | Description |
|------------|----------------------------------|--|------------|----------------------------------|
| 1 | Boom Section 1 (12 V On/0 V Off) | | 4 | Boom Section 4 (12 V On/0 V Off) |
| 2 | Boom Section 2 (12 V On/0 V Off) | | 5 | Boom Section 5 (12 V On/0 V Off) |
| 3 | Boom Section 3 (12 V On/0 V Off) | | 6 | Boom Section 6 (12 V On/0 V Off) |

Table: Boom Section 7 to 12 Connector Port (9)

| Pin Number | Description | | Pin Number | Description |
|------------|----------------------------------|--|------------|------------------------------------|
| 1 | Boom Section 7 (12 V On/0 V Off) | | 4 | Boom Section 10 (12 V On/0 V Off) |
| 2 | Boom Section 8 (12 V On/0 V Off) | | 5 | Boom Section 11 (12 V On/0 V Off) |
| 3 | Boom Section 9 (12 V On/0 V Off) | | 6 | Boom Section 12 (12 V On/0 Ve Off) |

CapView Connector Pinout

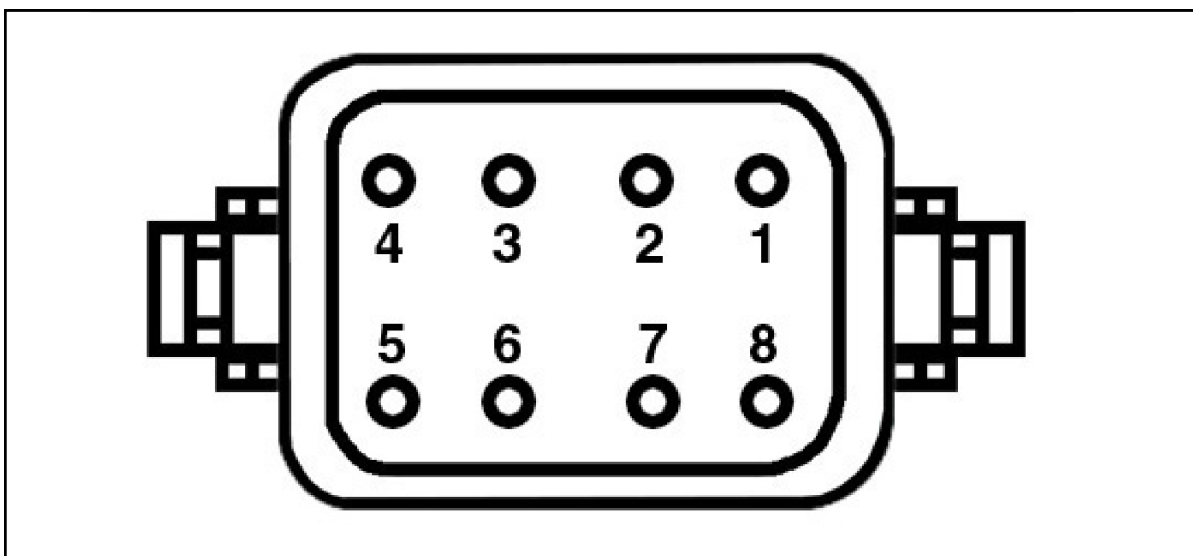


Fig. 65:

| Pin Number | Description | Wire Color |
|------------|--------------------|------------|
| 1 | Power | Red |
| 2 | Ground | Black |
| 3 | Boom Switch Signal | Blue |
| 4 | CAN High | Yellow |
| 5 | CAN Low | Green |
| 6 | Key Switched Power | Brown |
| 7 | Empty | |
| 8 | Empty | |

VCM Connector Pinout

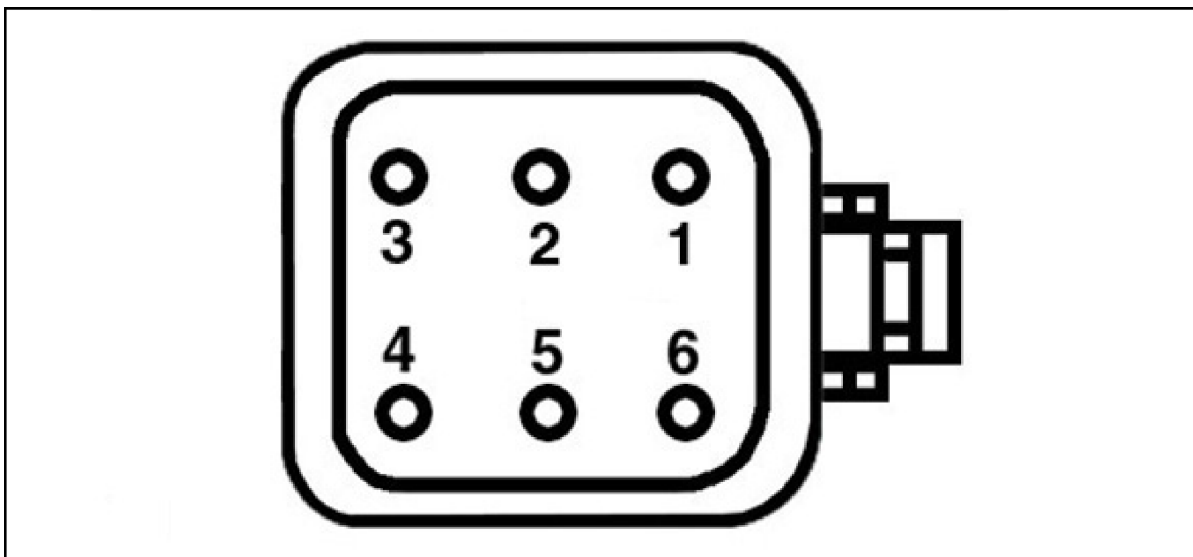


Fig. 66:

| Pin Number | Description | Wire Color |
|------------|--------------------|------------|
| 1 | Power | Red |
| 2 | Ground | Black |
| 3 | Boom Switch Signal | Blue |
| 4 | CAN High | Yellow |
| 5 | CAN Low | Green |
| 6 | Key Switched Power | Brown |

General System Layout—Synchro™ Mode

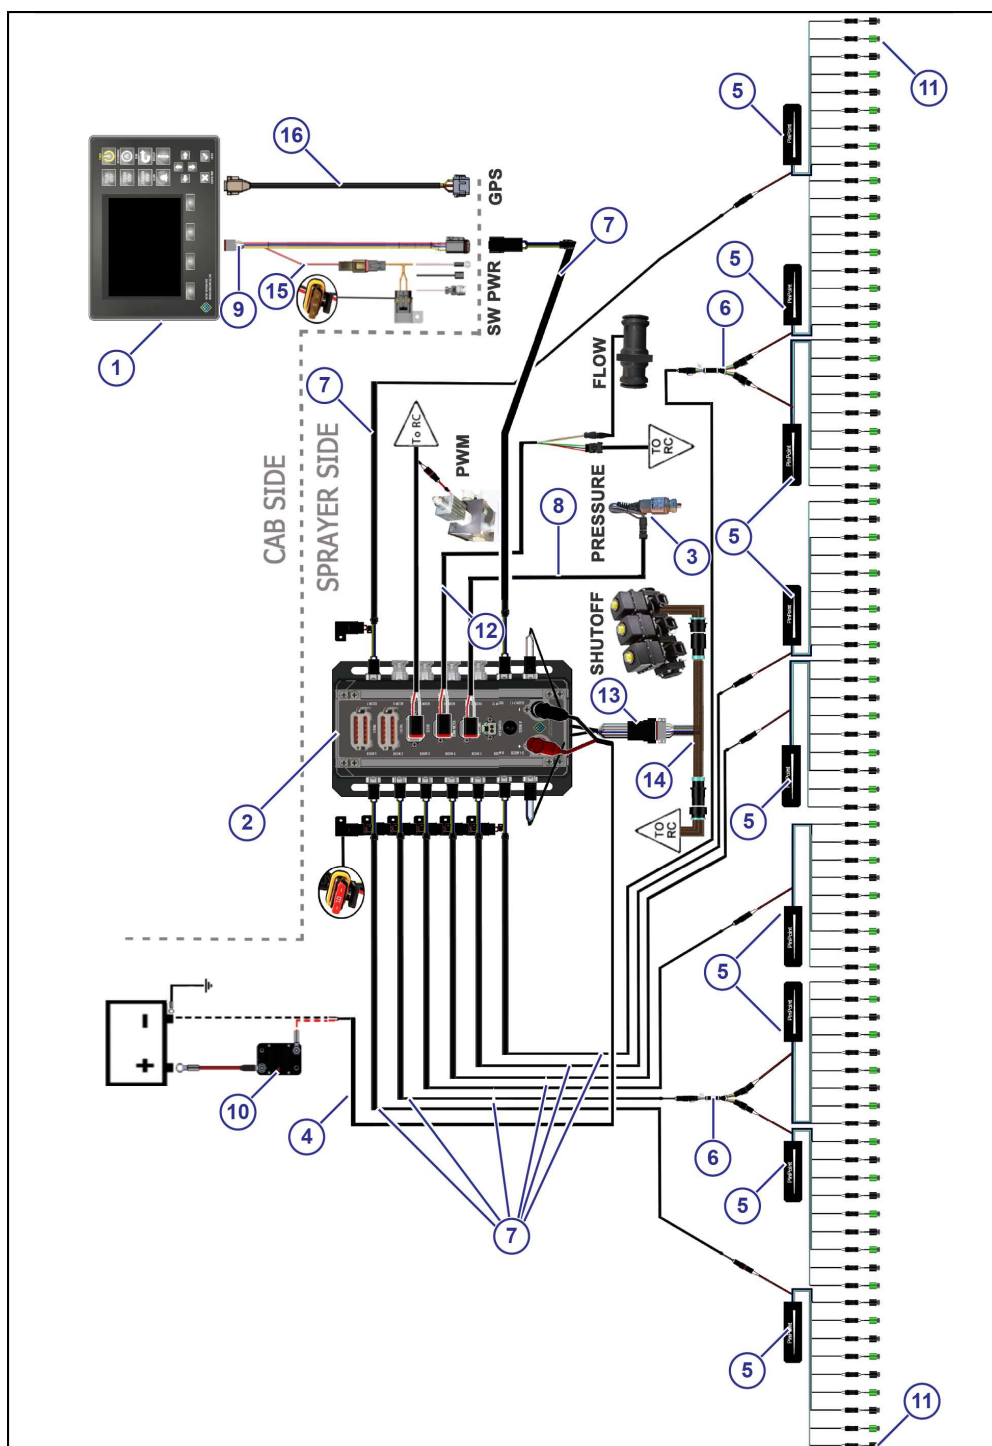


Fig. 67:

| Callout | Description | Qty |
|---------|---|-------------|
| 1 | CapView | 1 |
| 2 | Gateway Hub | 1 |
| 3 | Pressure Sensor | 1 |
| 4 | Power Harness | As Required |
| 5 | VCM Kit | As Required |
| 6 | Y-adapter | 2 |
| 7 | Extension Harness | As Required |
| 8 | PSI Adapter Harness | 1 |
| 9 | CapView Harness with Switched Power | 1 |
| 10 | Circuit Breaker Kit | 1 |
| 11 | Valve Assembly | As Required |
| 12 | Flowmeter Harness | As Required |
| 13 | Boom Shutoff Adapter | 1 |
| 14 | Shutoff Harness DT | As Required |
| 15 | Key Switched Power Harness ³ | 1 |
| 16 | GPS Adapter Cable | As Required |

Note: Hagie sprayers will require Hagie part number 293942. Hagie sprayers from 2010 to 2013 will require installation under the armrest. Hagie sprayers from 2014 and after, install in the access panel in the right-front corner of the cab.

Important: When a boom section has more than nine nozzles, a Y-adapter (P/N 118640-032) is required to connect two VCMs together as shown in boom sections 2 and 6. Use a VCM Kit - P/N 118250-015 or 118250-020 for 15 in or 20 in nozzle spacings. Boom section lengths dictate nozzle valve quantities and VCM harness lengths and quantities in each section.

³

All CASE IH platforms supply key switch power in the chassis harness to the Gateway hub.

General System Layout—SharpShooter™ Mode

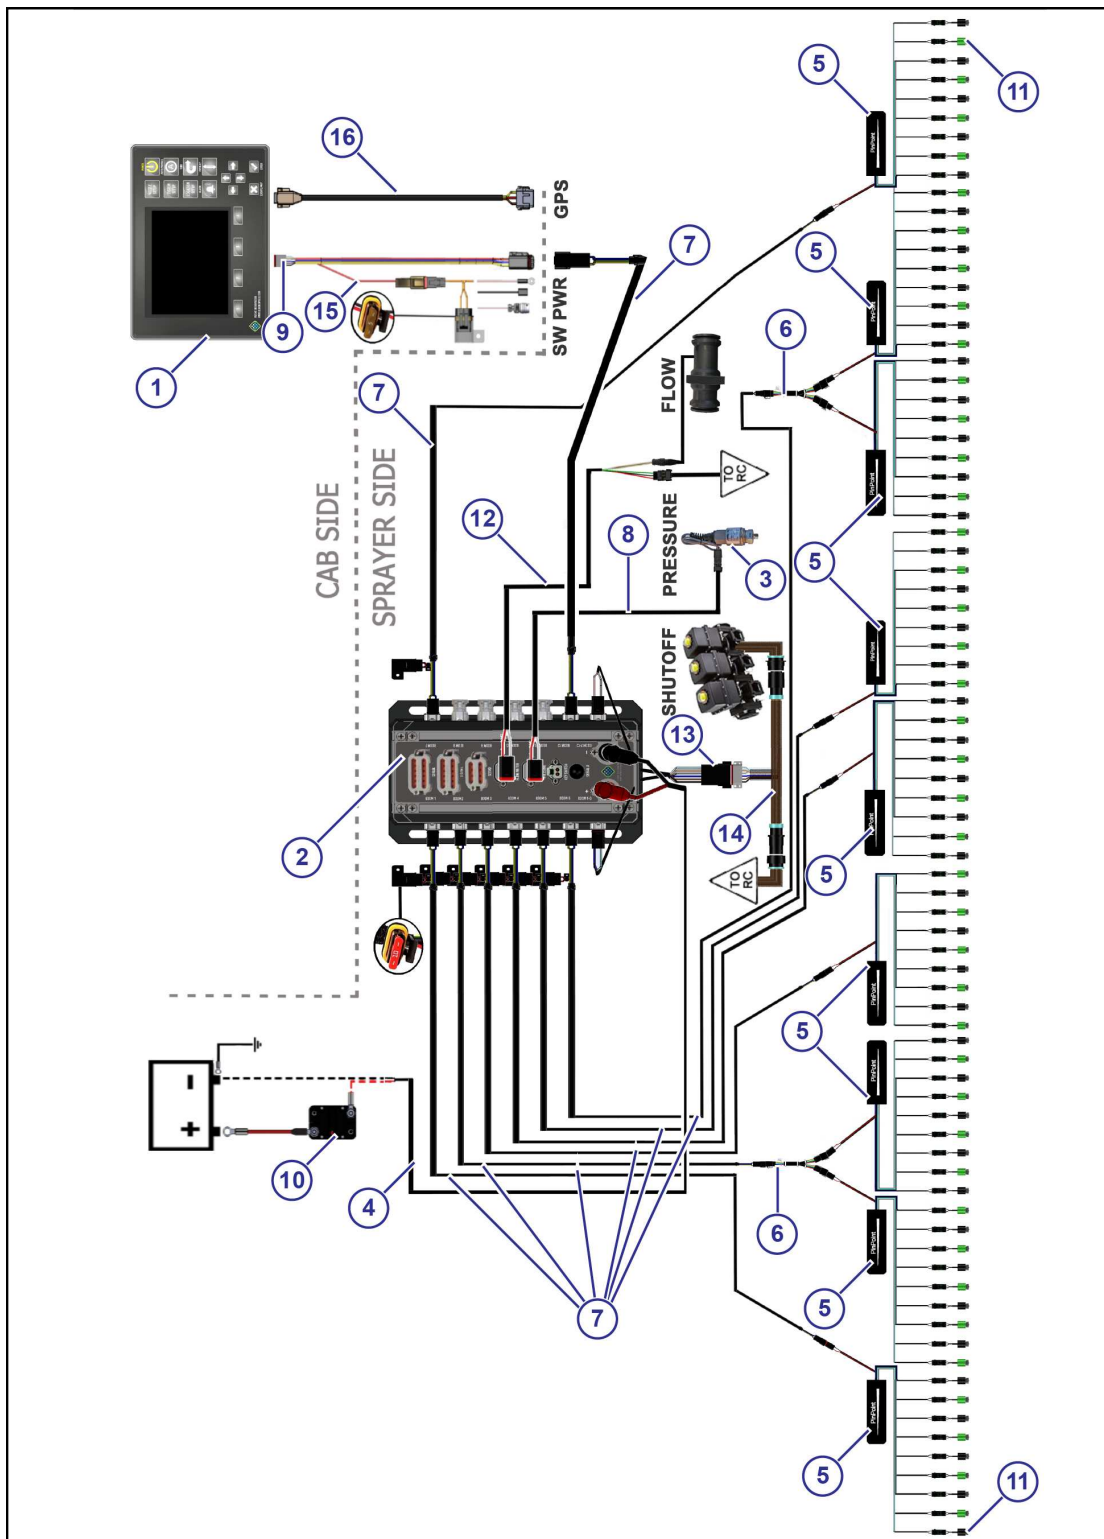


Fig. 68:

| Callout | Description | Qty |
|---------|---|-------------|
| 1 | CapView | 1 |
| 2 | Gateway Hub | 1 |
| 3 | Pressure Sensor | 1 |
| 4 | Power Harness | As Required |
| 5 | VCM Kit | As Required |
| 6 | Y-adapter | 2 |
| 7 | Extension Harness | As Required |
| 8 | PSI Adapter Harness | 1 |
| 9 | CapView Harness with Switched Power | 1 |
| 10 | Circuit Breaker Kit | 1 |
| 11 | Valve Assembly | As Required |
| 12 | Flowmeter Harness | As Required |
| 13 | Boom Shutoff Adapter | 1 |
| 14 | Shutoff Harness DT | As Required |
| 15 | Key Switched Power Harness ⁴ | 1 |
| 16 | GPS Adapter Cable | As Required |

Note: Hagie sprayers will require Hagie part number 293942. Hagie sprayers from 2010 to 2013 will require installation under the armrest. Hagie sprayers from 2014 and after, install in the access panel in the right-front corner of the cab.

Important: When a boom section has more than nine nozzles, a Y-adapter (P/N 118640-032) is required to connect two VCMs together as shown in boom sections 2 and 6. Use a VCM Kit - P/N 118250-015 or 118250-020 for 15 in or 20 in nozzle spacings. Boom section lengths dictate nozzle valve quantities and VCM harness lengths and quantities in each section.

⁴

All CASE IH platforms supply key switch power in the chassis harness to the Gateway hub.

Index

A

Acre Counters [87](#)
 Advanced Settings
 SharpShooter [50](#)
 SharpShooter Setup Information [71](#)
 Synchro [45](#)
 Synchro Setup Information [69](#)
 Alarm [88](#)
 Assembly
 Nozzle Valves [20](#)
 Auto Mode Operation [73](#)

B

Baseline Evaluation Process [102](#)
 Battery Harness Installation [29](#)
 Battery Safety [10](#)
 Battery Voltage Test [118](#)
 Boom Shutoff Adapter Installation [27](#)
 Boom Shutoff Dry Test [57](#)
 Boom Shutoff Signal Test [121](#)
 Boom Shutoff Wet Test [59](#)

C

CapView
 Button Descriptions [31](#)
 Installation [28](#)
 Shutdown [32](#)
 Start [32](#)
 CapView Button Descriptions [31](#)
 CapView Connector Pinout [130](#)
 CapView Extension Harness Installation [28](#)
 CapView Installation [28](#)
 Change the Flowmeter Settings
 SharpShooter [85](#)
 Synchro [85](#)
 Change the Overlap Distance [84](#)
 Change the Units of Measure [37](#)
 Chemical Safety [10](#)
 Circuit Breaker [117](#)
 Circuit Breaker Installation [29](#)
 Clean the Nozzle Valves [103](#)
 Clean the System [101](#)
 Coil Test [116](#)
 Compass Calibration Procedure [62](#)
 Connector Pin Identification [127](#)
 Convert a Batch of Shapefiles to PinPoint II Maps [83](#)
 Convert a Shapefile into a PinPoint II Map [83](#)
 Counters [87](#)

D

Do the Boom Shutoff Wet Test [59](#)
 Do the Compass Calibration Procedure [62](#)
 Do the Flow Control Test [61](#)
 Do the Key Fob Boom Shutoff Dry Test [58](#)
 Do the Key Fob Boom Shutoff Wet Test [60](#)
 Do the Location Setup Procedure [38](#)
 Do the Look Ahead Time and Overlap Test [61](#)
 Do the Nozzle Setup Procedure [55](#)
 Do the Pressure Control Test [61](#)
 Download Maps [79](#)
 Draw a Map [81](#)
 Droplet Classification Table
 Metric [93](#)
 US Measurements [99](#)

E

Emergency Safety [9](#)
 Extension Harness Installation [24](#)

F

Factory Reset [33, 34](#)
 Floe Meter Signal [85](#)
 Flow Control Test [61](#)
 Flowmeter Harness Installation [26](#)
 Fuses [116, 116](#)

G

Gallon Counters [87](#)
 Gateway Hub Identification [22](#)
 Gateway Hub Installation [21](#)
 General System Layout
 SharpShooter [134](#)
 Synchro [132](#)
 GPS Settings [64](#)

I

Inspect the System [101](#)
 Install the CapMaps Software [80](#)
 Installation
 Battery Harness [29](#)
 Boom Shutoff Adapter [27](#)
 CapView [28](#)
 CapView Extension Harness [28](#)
 Circuit Breaker [29](#)
 Extension Harnesses [24](#)

Flowmeter Harness [26](#)
 Gateway Hub [21](#)
 Key Switched Power Cable [28](#)
 Power Disconnect Breaker Kit [30](#)
 Pressure Sensor [24](#)
 Pressure Sensor Adapter Harness [25](#)
 VCMs [22](#)
 Interchange the Components [116](#)

J

Jump Start, Weld On, or Charge the Machine [101](#)

K

Key Fob Boom Shutoff Dry Test [58](#)
 Key Fob Boom Shutoff Wet Test [60](#)
 Key Switched Power Cable Installation [28](#)

L

Location Setup [38](#)
 Look Ahead Time and Overlap Test [61](#)

M

Machine Specific Information
 Advanced Settings-SharpShooter [71](#)
 Advanced Settings-Synchro [69](#)
 Location Setup Information [66](#)
 System Setup Information [68](#)
 Manual Mode Operation [74](#)
 Mapping [77](#)
 Maps
 Download [79](#)
 Metric Nozzle Speed Ranges
 Nozzle Spacing - 38 cm [89](#)
 Nozzle Spacing - 50 cm [91](#)
 Move the Spray Tube Mount [21](#)

N

Nozzle Display [75](#)
 Nozzle Setup [55](#)
 Nozzle Spacing Setup [39](#)
 Nozzle Speed Ranges
 Metric
 US Measurements
 Nozzle Types and Component Identification
 12-Watt [16](#)
 12-Watt—24 Series [19](#)
 7-Watt [14](#)
 7-Watt—15 Series [18](#)
 Nozzle Valve
 Clean [103](#)

Nozzle Valve Assembly [20](#)
 Nozzle Valve Interference [21](#)
 Nozzle Valves [102](#)

O

Operate in Automatic Pressure Control Mode [73](#)
 Operate in Manual Mode [74](#)
 Overlap Control [76](#)
 Overlap Distance [84](#)

P

Personal Protective Equipment (PPE) [10](#)
 Plunger Seal Inspection [105](#)
 Power Disconnect Breaker Kit Installation [30](#)
 Power to the Pressure Sensor Input Test [122](#)
 PPE (Personal Protective Equipment) [10](#)
 Prepare for Installation and Setup [13](#)
 Pressure Control Test [61](#)
 Pressure Sensor Adapter Harness Installation [25](#)
 Pressure Sensor Installation [24](#)
 Pressure Sensor Signal Test [123](#)
 Pressurized Fluid Lines [10](#)

R

Recommended Guidelines [102](#)
 Reset the Counters [88](#)
 Restore Select Settings [36](#)
 Restore System Configuration [36](#)

S

Safety Signs [9](#)
 Service the System [101](#)
 Set the Preset Buttons [56](#)
 Setting the GPS Settings [64](#)
 Shutdown the CapView [32](#)
 Signal Words [9](#)
 Spray Through Alternate Valve Bodies [75](#)
 Spray Through the CapstanAG Nozzle Valves [75](#)
 Spray Without the PinPoint II System [74](#)
 Start the CapView [32](#)
 Storage of the System [101](#)
 Strainers and Screens [102](#)
 System Dry Test [57](#)
 System Dry Tests [57](#)
 System Identification [7](#)
 System Load Capacity [119](#)
 System Setup [33](#)
 System Setup Menu Descriptions [42](#)
 System Setup Menus
 System Wet Test [59](#)
 System Wet Tests [59](#)

T

Technical Bulletin [124](#)
This Manual [7](#)
Tip Selection and Capacities [13](#)
Troubleshooting Charts [109](#)
Turn Compensation [86](#)

U

Update PinPoint™ II Software [106](#)
Upload a Boundary File to the CapView [78](#)
US Measurements Nozzle Speed Ranges
 Nozzle Spacing - 15 in [95](#)
 Nozzle Spacing - 20 in [97](#)
Use a Map on the CapView [78](#)

V

VCM Connector Pinout [131](#)
VCM Installation [22](#)
VCM Voltage Test [120](#)

W

Warranty [11](#)
Winterize for Storage [101](#)



Application Systems for Professionals™

prodsupport@capstanag.com | 855-628-7722 | www.capstanag.com

©2018 Capstan Ag Systems, Inc. All Rights Reserved. | All trademarks are owned by Capstan Ag Systems, Inc.
This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com